



Sony Cyber-shot DSC-W690 Front and Back Case Replacement

This guide will show you how to disassemble and install new front and/or back case.

Written By: Will Norris






TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

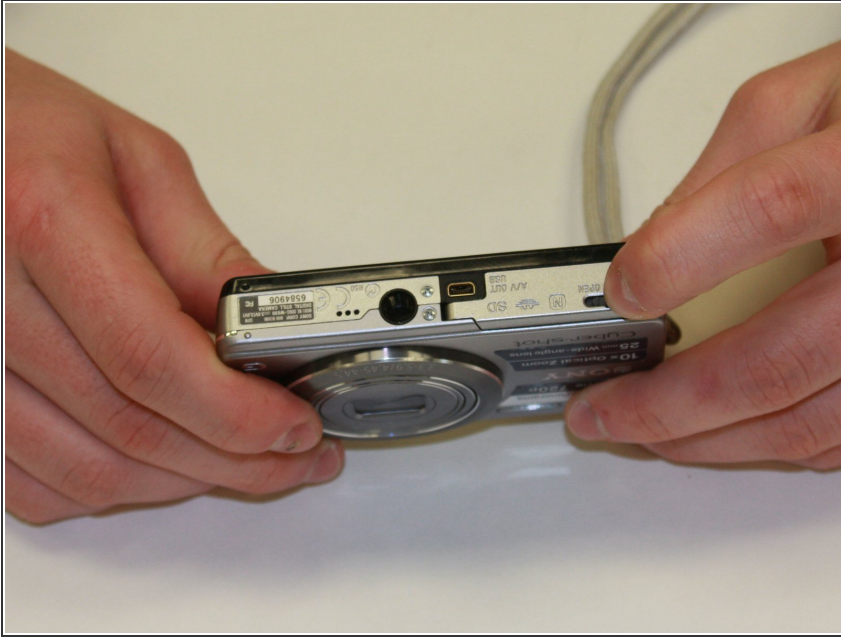



- Open the battery door.

Step 2

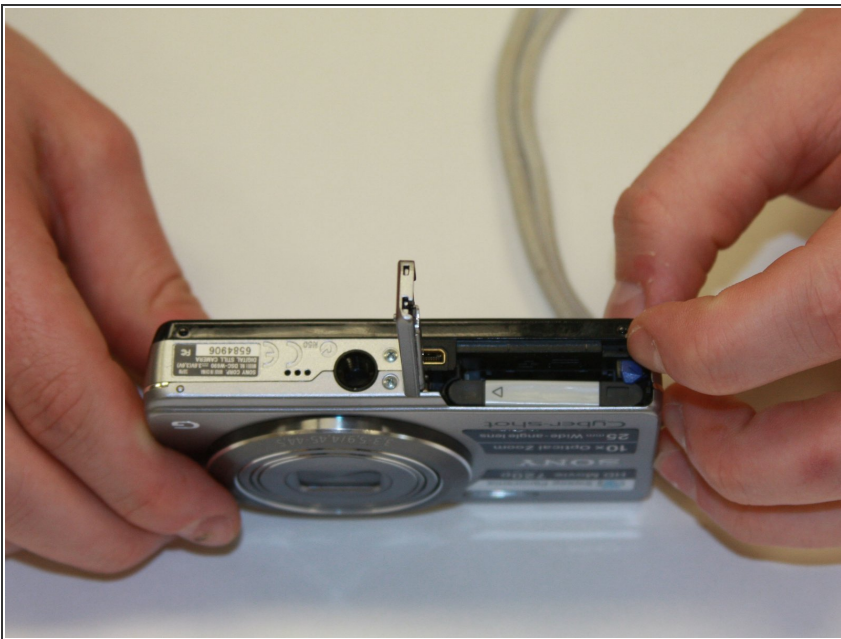


- Open the battery lock to release the battery.

Step 3

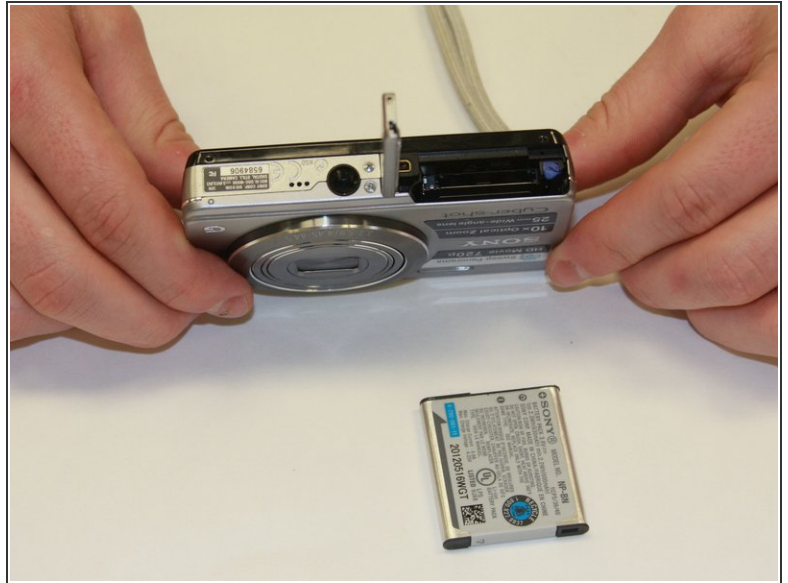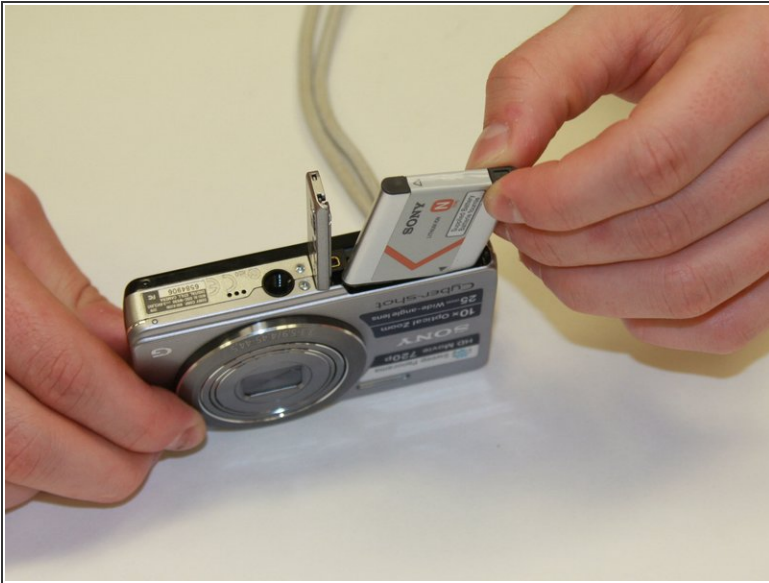


- Remove the battery.

Step 4 — Front and Back Case

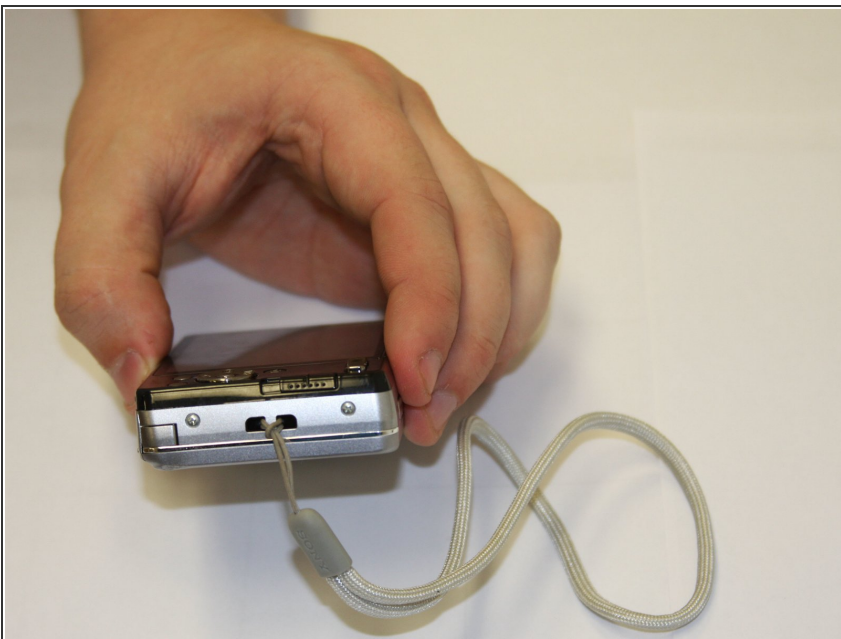

- Remove the wrist strap

Step 5

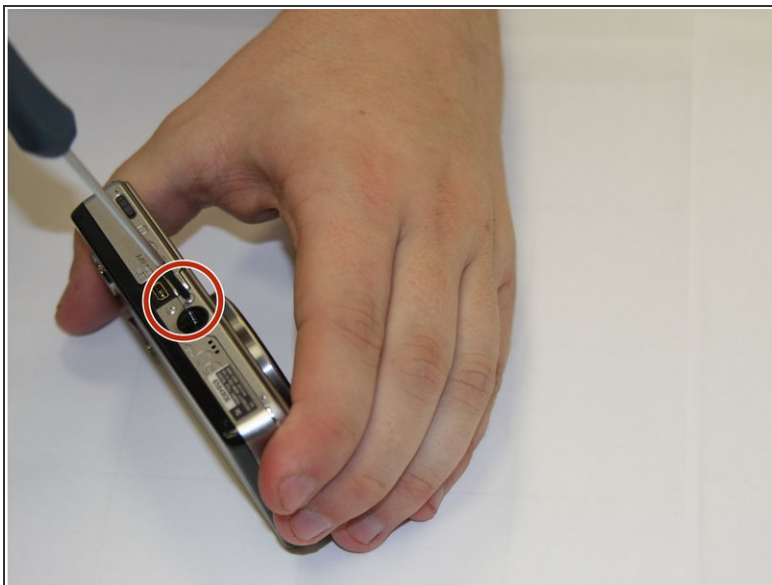

- Remove all 6 3mm outside screws

Step 6



- Carefully pry the case apart.

To reassemble your device, follow these instructions in reverse order.