



Nikon Coolpix P510 LCD Screen Window Replacement

This guide helps the reader successfully take off the LCD screen window and replace the broken scratched up window.

Written By: Brian Hulsey



INTRODUCTION

This guide will take you very little time to accomplish. The part is easy to get off and you will need very little tools to do so.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery Removal



- Flip the camera over and push the tab on the battery cover to open the battery compartment.

Step 2



- Push the little yellow tab to allow the battery to slide out.
- With the tab pushed out, pull the battery out.

Step 3 — LCD Screen Window



- Extend the LCD screen out and turn the camera upside down to get access to the screws on the bottom.

Step 4



- Take the four 4mm PH00 Phillips screws out.

Step 5



- Use a plastic opening tool to trace around the screen to pop the front and back section apart.

To reassemble your device, follow these instructions in reverse order.