



# Nikon COOLPIX P7700 LCD Screen Display Replacement

This guide explains how to replace the Nikon...

Written By: Matthew Seidel



# INTRODUCTION

This guide explains how to replace the Nikon COOLPIX P7700 LCD display screen.

There may be problems or damage done to a Nikon COOLPIX P7700 LCD display screen. It could be scratched, broken, or damaged in any number of ways. This guide will help you replace the screen in just six steps and your camera will look brand new!

---

## TOOLS:

Phillips #00 Screwdriver (1)

---

### Step 1 — LCD Screen Display



- Push down and slide the lock of the battery compartment to the unlock position.
  - ① The battery door should pop open.
- Remove the battery.

## Step 2



- Open the camera LCD screen so it's away from the body of the camera.

## Step 3



- Use a Phillips #00 screwdriver to remove the 4.3 screw on both the top and bottom of the screen's casing.

## Step 4



- Place the camera lens-side down and twist the screen so that it is perpendicular to the camera.
  - Remove the 4.3 mm screw on the side of the casing using the Phillips #00 screwdriver.
  - Twist the screen in the other direction and remove the other 4.3 mm screw.
- ⚠ These screws are very brittle! Be careful not to strip the screws. If you find that one has become stripped, follow this [guide](#).



## Step 5



- Remove the case from the screen.

## Step 6



- Replace the LCD display.

---

To reassemble your device, follow these instructions in reverse order.