




Samsung ATIV Book 4 Mouse Pad Replacement

This guide will show how to replace the mouse pad hardware.

Written By: Daniel

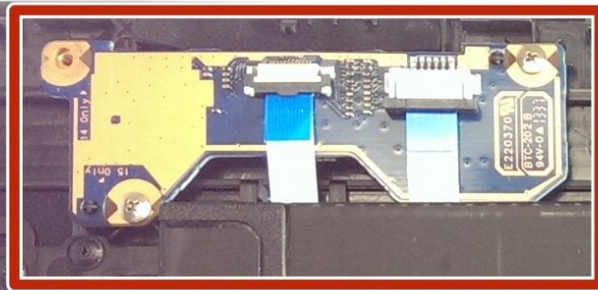

INTRODUCTION

Mouse pads may become less responsive over time. If your mouse pad becomes unresponsive, the mouse pad hardware may need to be replaced. This guide will take you through the steps in order to complete this task.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Mouse Pad





- Place the computer upside down.
- Remove the two rubber pads, by prying up on them.
- ⓘ There may be adhesive holding them down.
- Remove the seven 6.5mm screws on exterior of computer.
- Remove panel by sliding it down and lifting it away from the computer.

Step 2

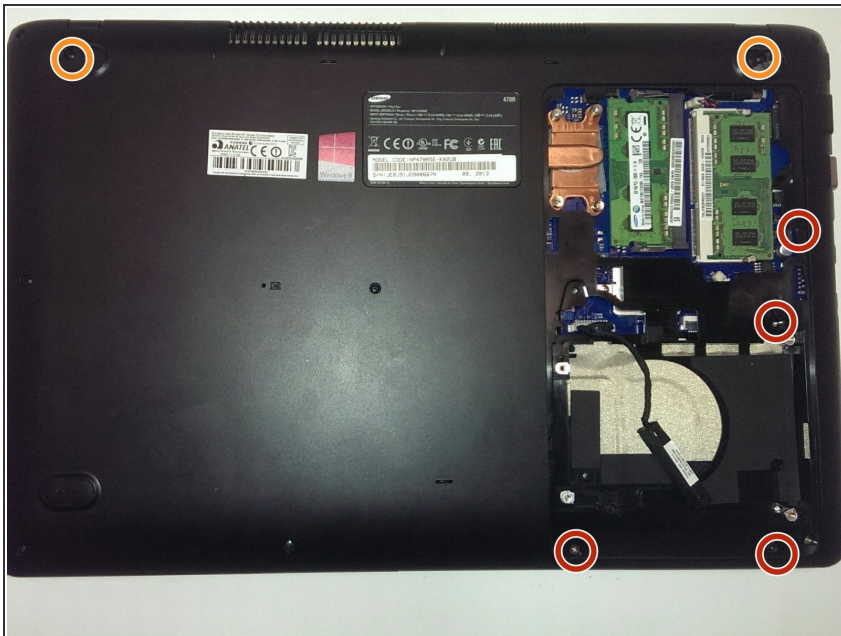



- Remove the four 4.4mm screws that are underneath the panel.
- Remove the two 6.5mm screws that were underneath the rubber pads.

Step 3

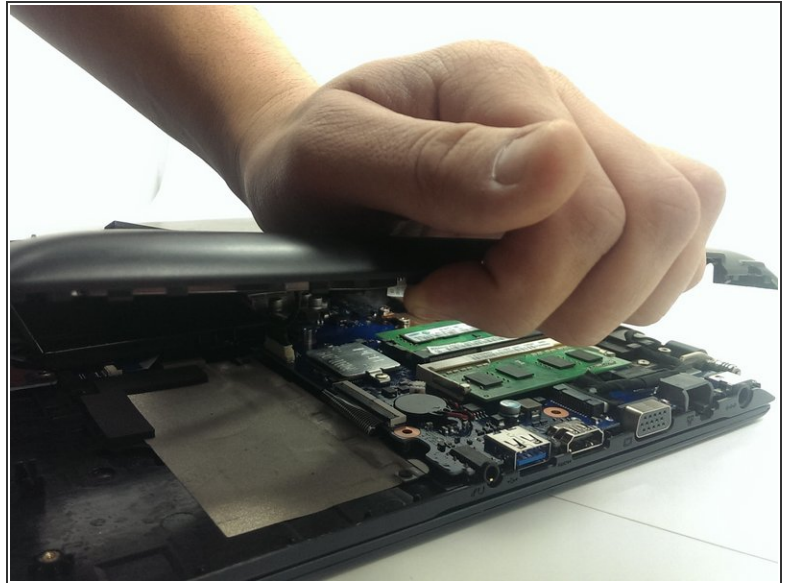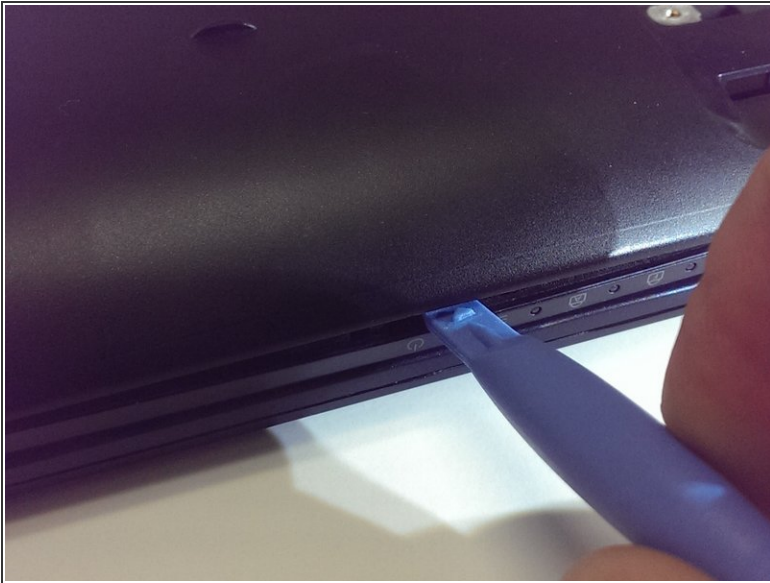

- Using plastic opening tool, pry plastic panel away from computer.
- ⓘ Start prying at one point and work your way around the entire computer until panel is free come computer.
- Remove the panel from computer once all tabs are broke free.

Step 4

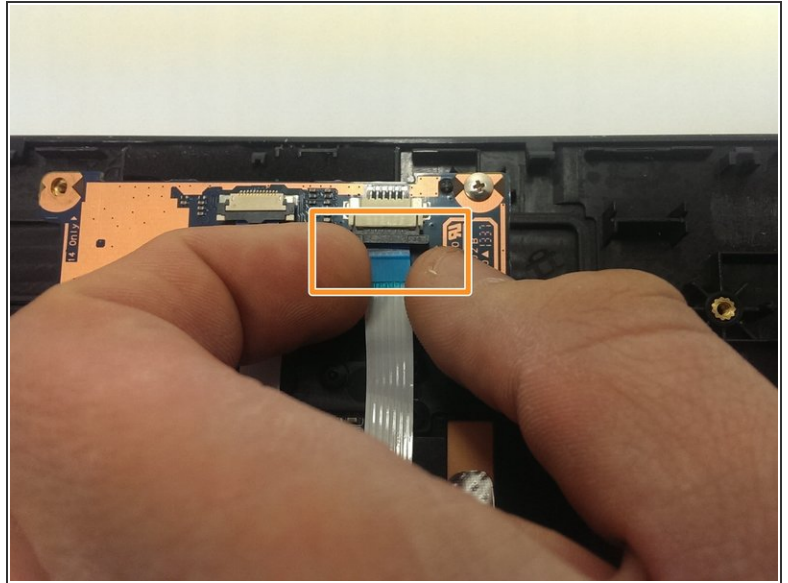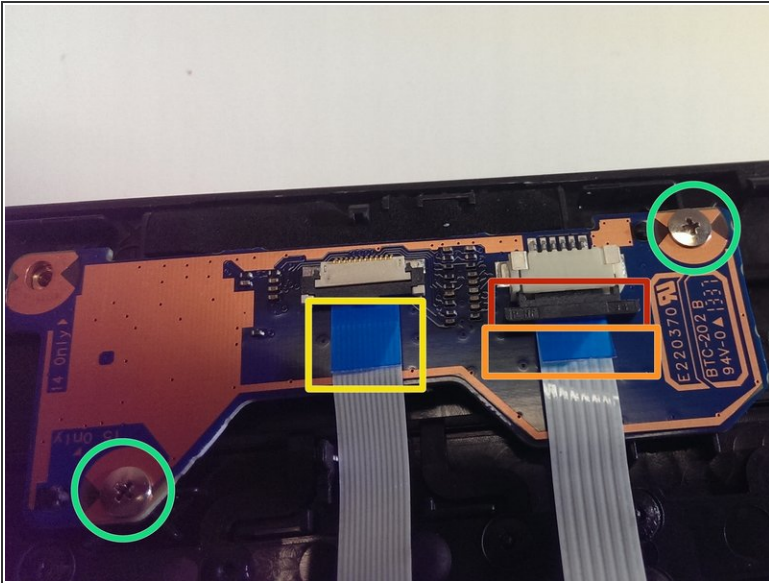

- Pull this tab outwards, as shown, to release the wire harness.
- With the tab now pulled out, pull lightly on the blue tape, to remove the harness.
- Pull on the blue tape to remove wire harness.
- ⓘ This harness may require a little more force to remove, but will slide right out.
- Remove the two 3.5mm screws and remove the defective hardware.
- ⓘ This step may be easier if the battery is taken out. Follow [the battery replacement](#) guide to do so.

To reassemble your device, follow these instructions in reverse order.