


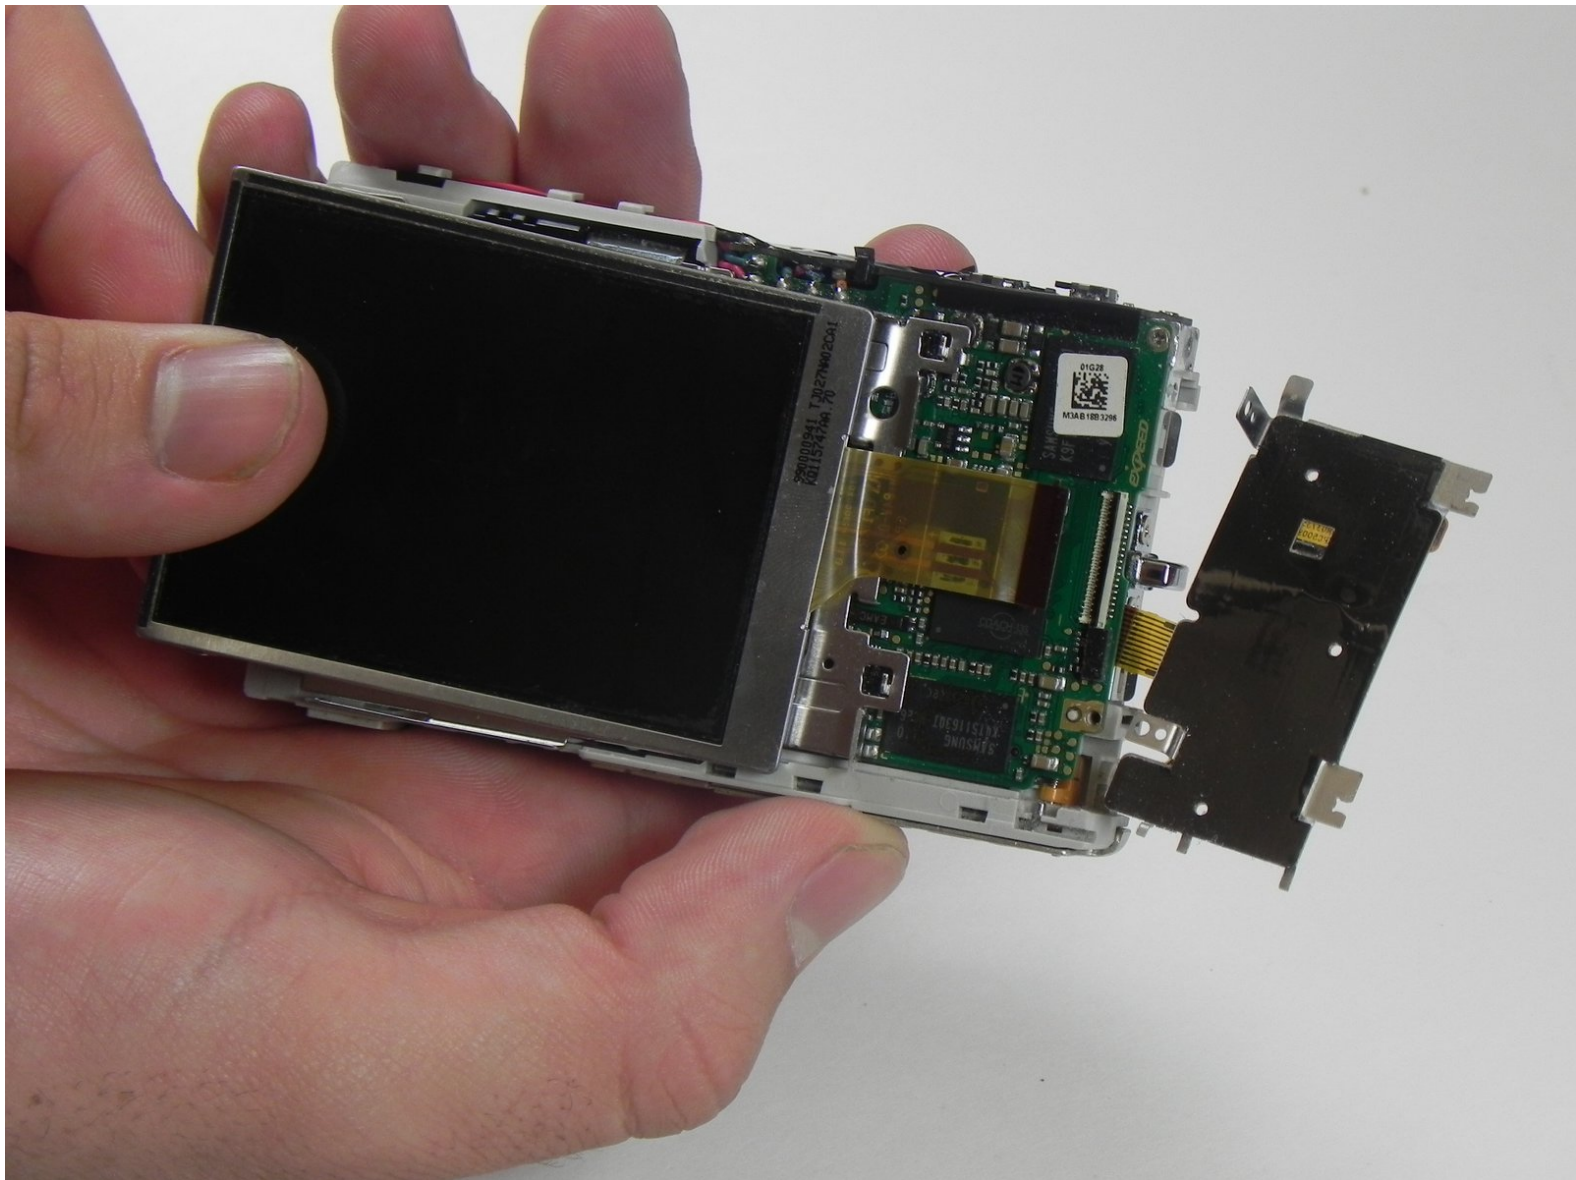

Nikon Coolpix S3100 Camera LCD Screen Replacement

This guide help you accomplish on how to replace the LCD screen in case it get shuttered or broken.

Written By: Jorge



INTRODUCTION

When you are in a situation whether your LCD screen is malfunctioning, this guide will assist you to find the problem.

TOOLS:



- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Nikon Coolpix S3100 disassembly




- Remove 8-2.46 mm screws from both sides and bottom of camera using a #000 Phillips screwdriver.
 - Remove 2 screws from left side. (picture 1)
 - Remove 4 screws from bottom. (picture 2)
 - Remove 2 screws from right side. (picture 3)


Step 2

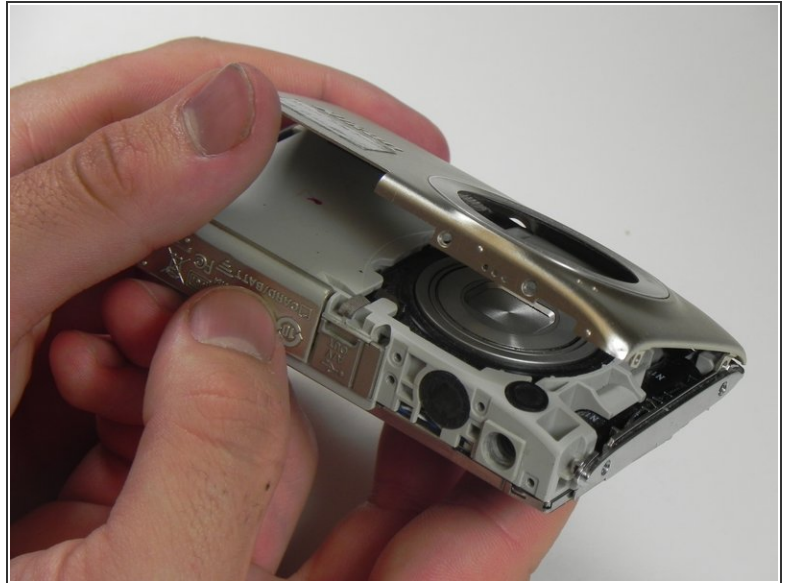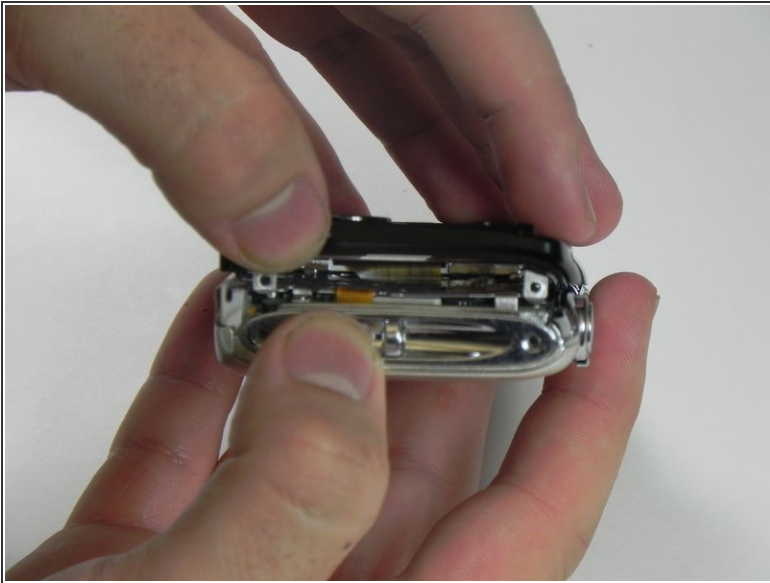

- Remove black cover pulling up with left thumb. Hold silver cover with right thumb.
- Remove silver cover lifting up with left thumb. Hold the camera with right thumb.


 Once internal circuit board is exposed, the red and blue wire terminals at top center can provide a nasty shock from the charged flash capacitor (silver can to left of terminals). BE CAREFUL!

Step 3

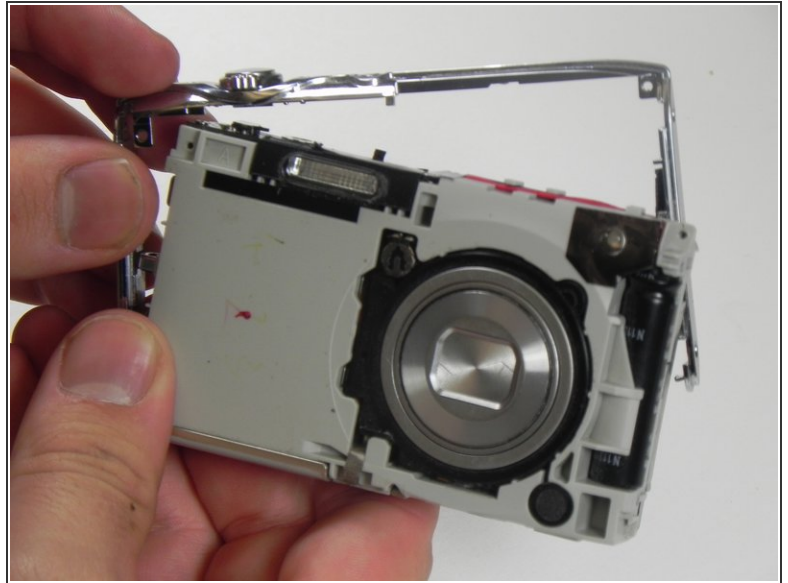


- Remove 2-2.10mm screws in the front of the camera using a #000 Phillips screwdriver.
 - Remove the two screws.
- Gently pull up to detach the frame. (picture 2)

Step 4 — LCD Screen

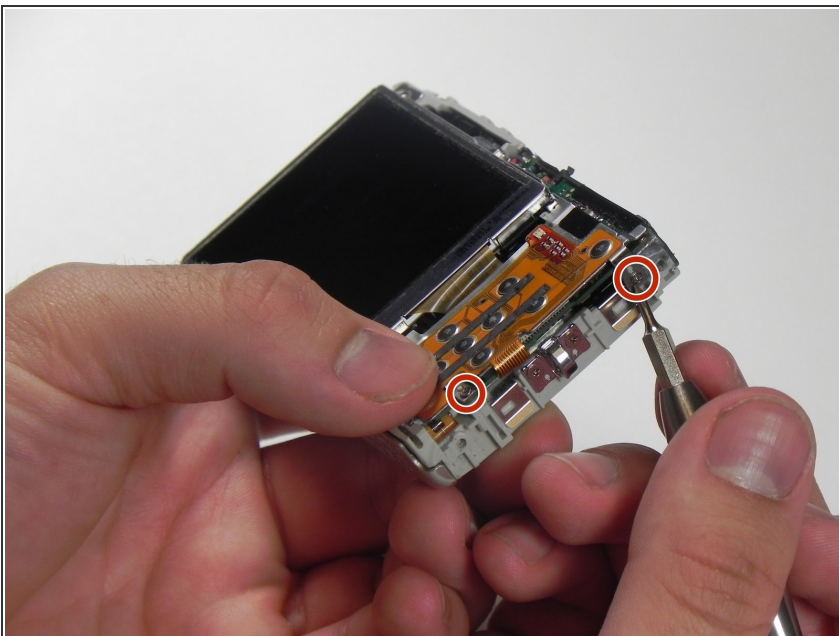

- Remove 2-2.10mm screws using a #000 Phillips screwdriver.

Step 5

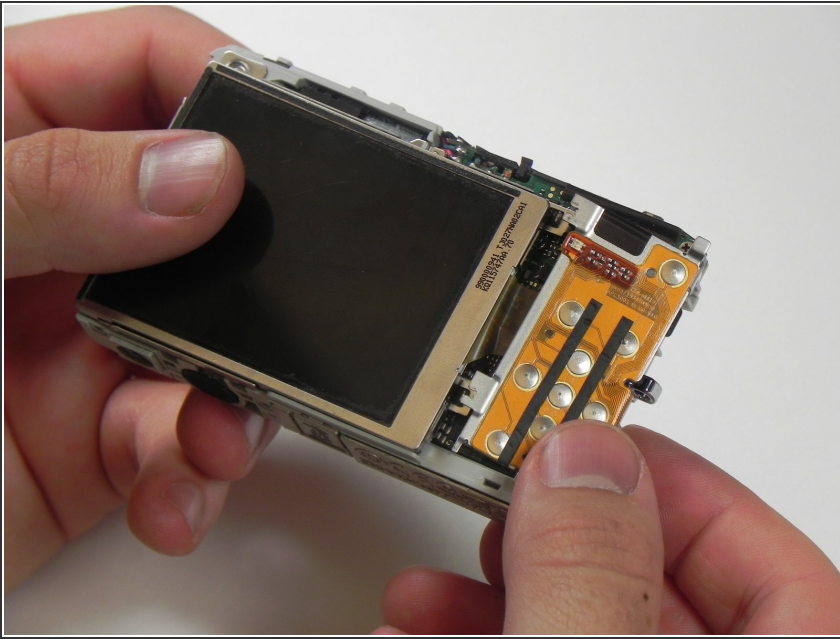

- Gently pull the orange board to the right.

Step 6



- Lift screen up holding both corners.

Step 7



- Gently pull to the left to release from ZIF connector.

To reassemble your device, follow these instructions in reverse order.