




# Nikon Coolpix S3100 Camera Holder Replacement

This guide will help you replace the holder for the camera strap.

Written By: Jorge

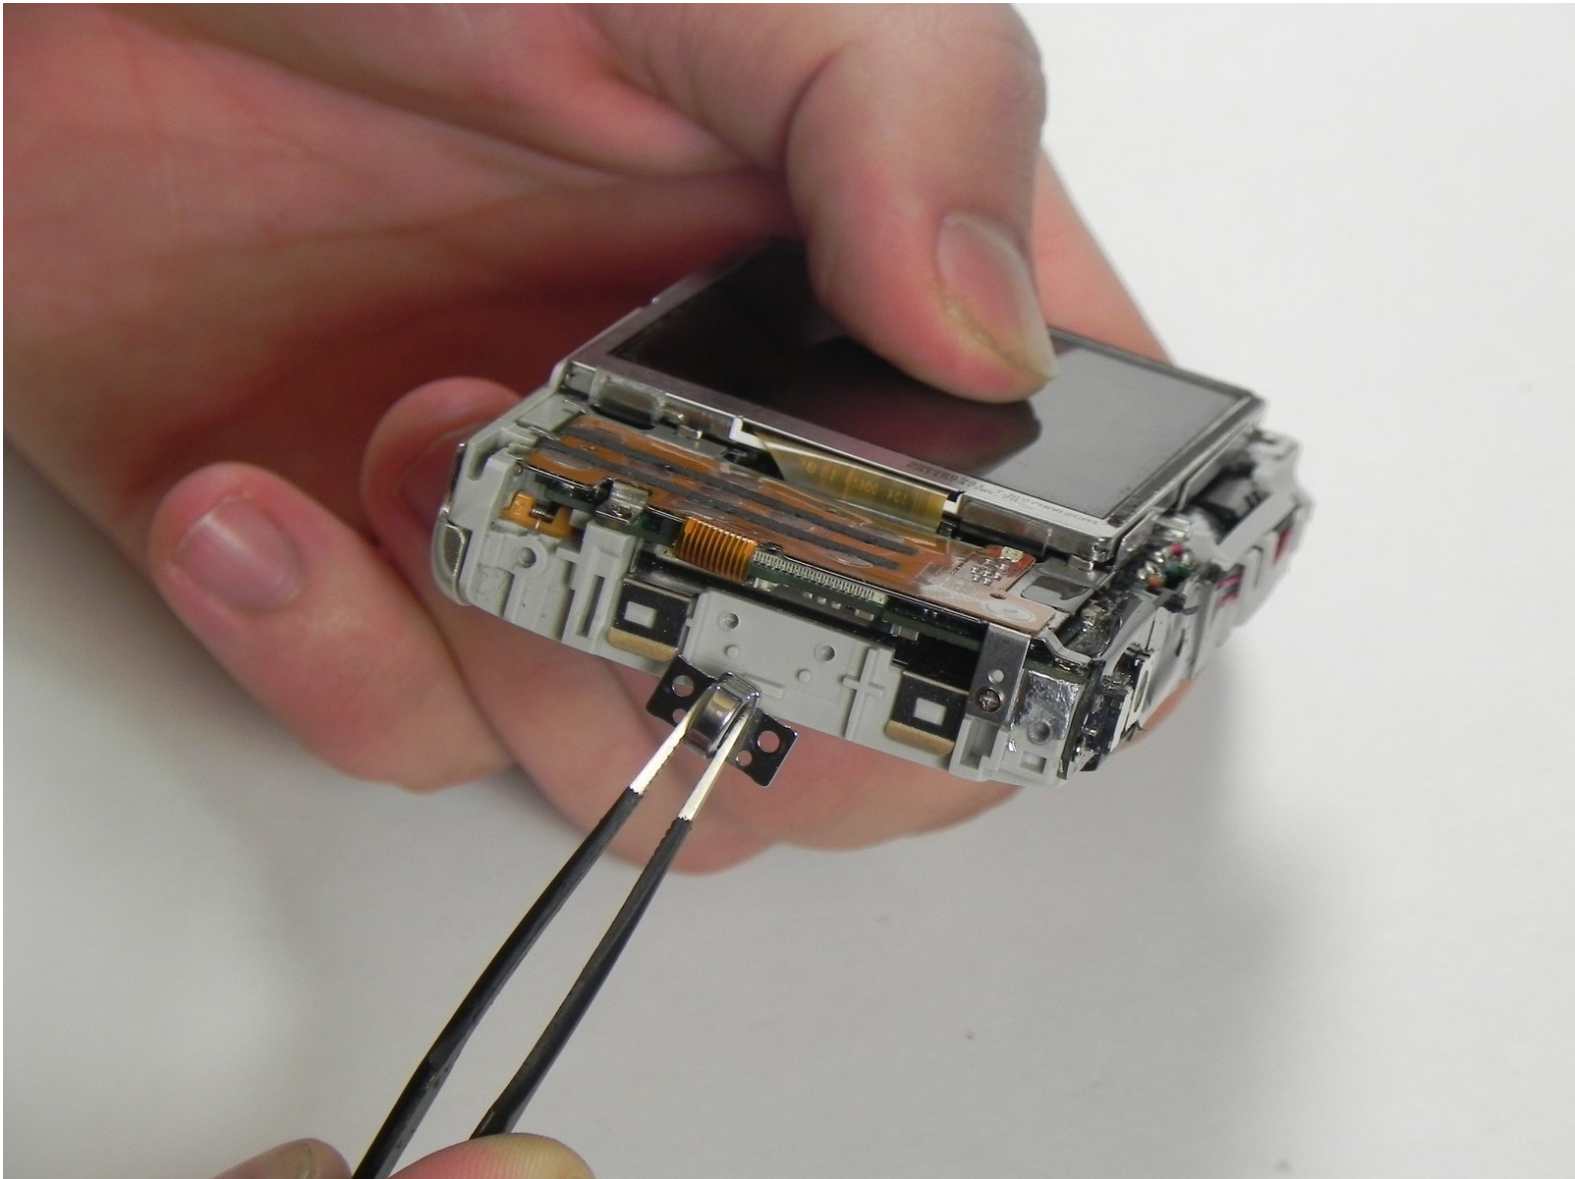

---

## INTRODUCTION

When you are about to insert a new strap into the holder, you realize that it is broken.

---



### TOOLS:



- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Nikon Coolpix S3100 disassembly




- Remove 8-2.46 mm screws from both sides and bottom of camera using a #000 Phillips screwdriver.
  - Remove 2 screws from left side. (picture 1)
  - Remove 4 screws from bottom. (picture 2)
  - Remove 2 screws from right side. (picture 3)

## Step 2

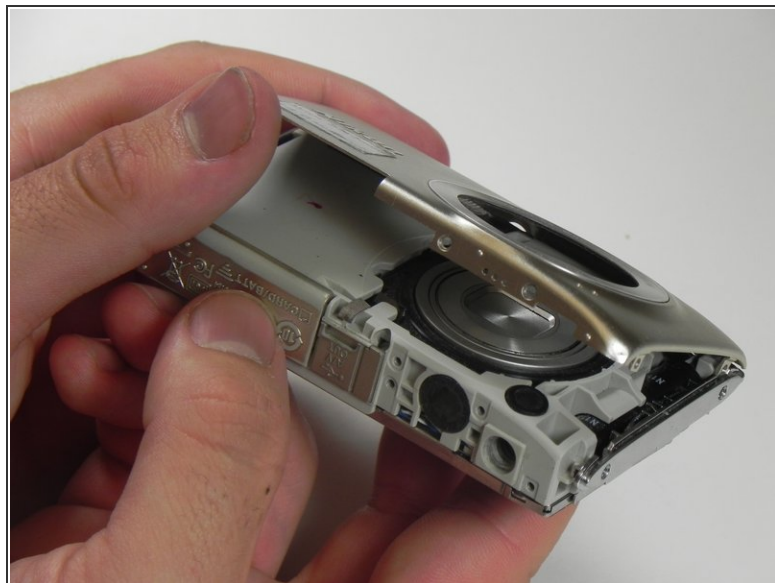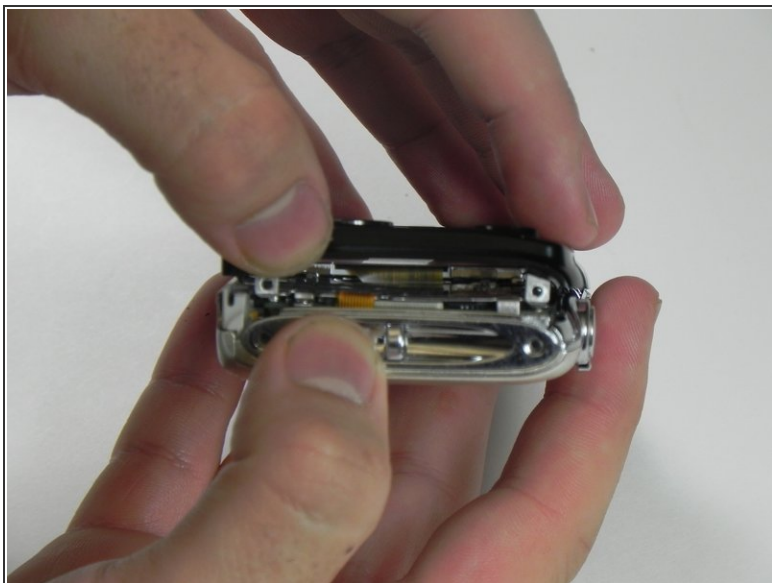


- Remove black cover pulling up with left thumb. Hold silver cover with right thumb.
- Remove silver cover lifting up with left thumb. Hold the camera with right thumb.

 Once internal circuit board is exposed, the red and blue wire terminals at top center can provide a nasty shock from the charged flash capacitor (silver can to left of terminals). BE CAREFUL!




### Step 3

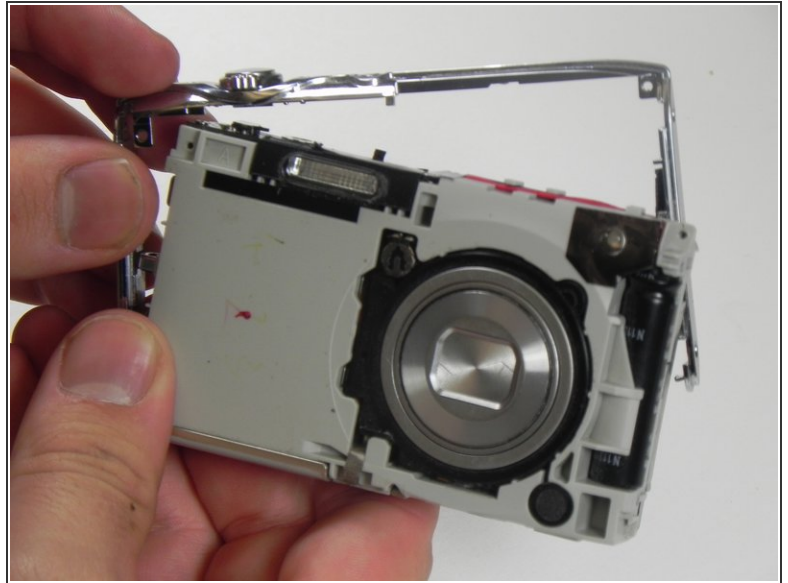


- Remove 2-2.10mm screws in the front of the camera using a #000 Phillips screwdriver.
  - Remove the two screws.
- Gently pull up to detach the frame. (picture 2)

### Step 4 — Holder

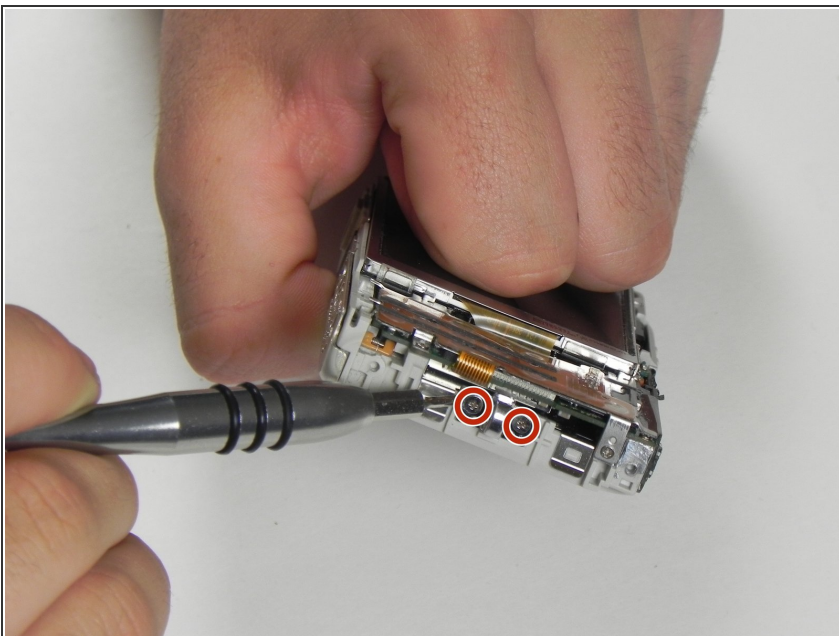

- Remove 2-2.90mm using a #000 Phillips screwdriver.

## Step 5

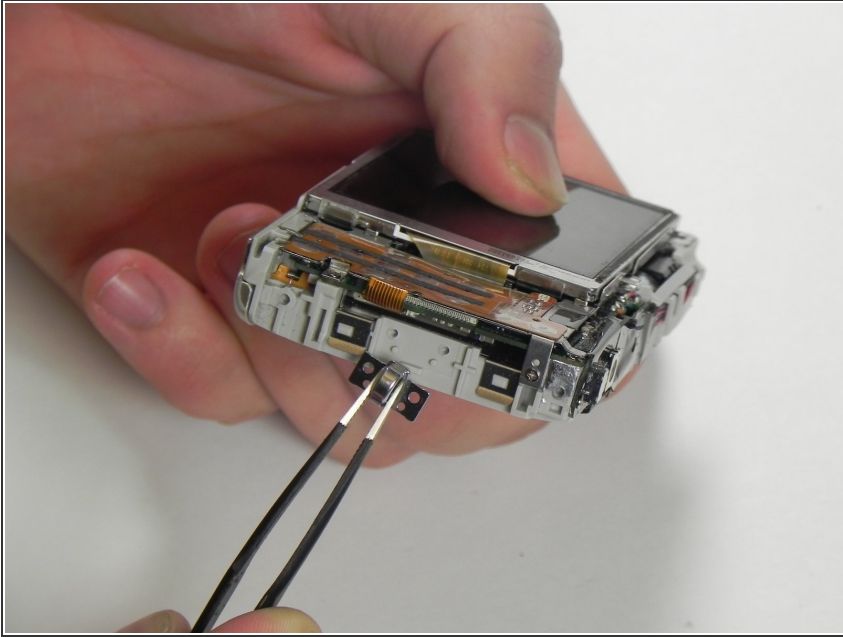

- Remove by using a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.