



Insignia Flex 8 Battery Replacement

Use this guide to replace your Flex 8's battery.

Written By: Tyler Tyrrell



INTRODUCTION


Welcome to the Insignia Flex 8 repair guide. If your battery is not holding a charge, use this guide to fix it. This replacement is simple and only requires a prying tool and soldering gun.


TOOLS:

- [Spudger](#) (1)
 - [Plastic Cards](#) (1)
 - [Soldering Workstation](#) (1)
-

Step 1 — Battery



 Make sure the power is off to avoid injury in the following steps.

- Position the tablet so that the screen is face down.
-  The power button is located in the upper left hand corner.
- Hold the power button for three seconds until the tablet powers down.

Step 2



- Remove the back casing by sliding a credit card or a similarly thin but firm object in between the casing and the screen.
- ⓘ Run this object around the perimeter of the tablet until there is separation between the casing and the screen.
- Remove the back casing and set aside.

Step 3



- Peel back the tape from battery and case.


Step 4



- Slide the spudger beneath battery to pry away it away from the case. Work around the battery, prying up all edges to remove from glue.

⚠ Do not puncture or bend battery. This could cause battery to leak acid.

Step 5

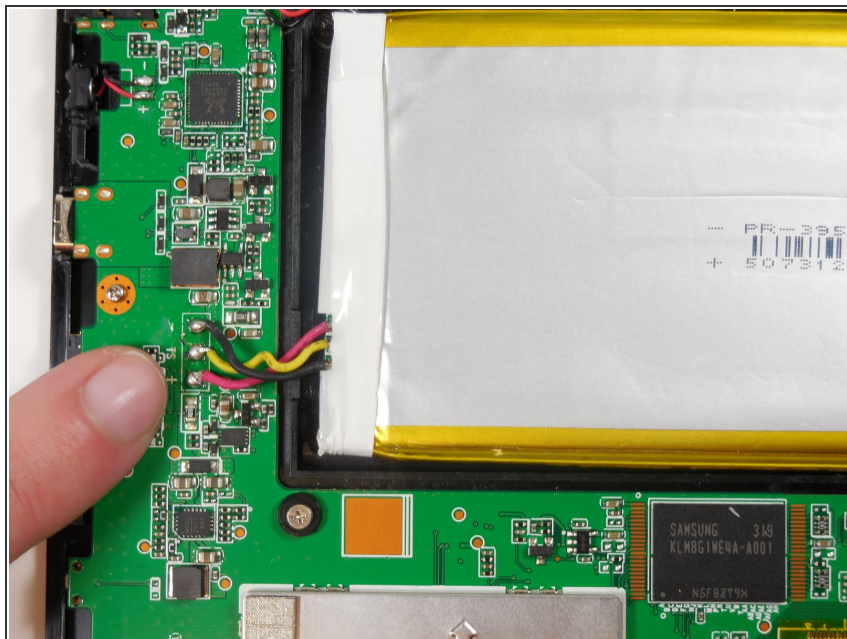

- Desolder the black, yellow and red connections from circuit board.

[Desoldering Help](#)

- ⚠ Keep the soldering tool away from other components on the circuit board.

To reassemble your device, follow these instructions in reverse order.