



APEX TM785CH Battery Replacement

This guide will describe the steps for disassembling the tablet down to the battery and for removing the battery.

Written By: Brian Grascchel



INTRODUCTION

The guide is written to replace the device's battery if the battery does not hold a charge well or does not function at all.

You will need an opening tool for removing the cover and a soldering kit for removing the wires.


Caution: Never puncture or excessively bend the battery during removal. This can cause extreme heat and possible injury.

For your safety, discharge your battery below 25% before disassembling your phone. This reduces the risk of a dangerous thermal event if the battery is accidentally damaged during the repair.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
-

Step 1 — Back Casing

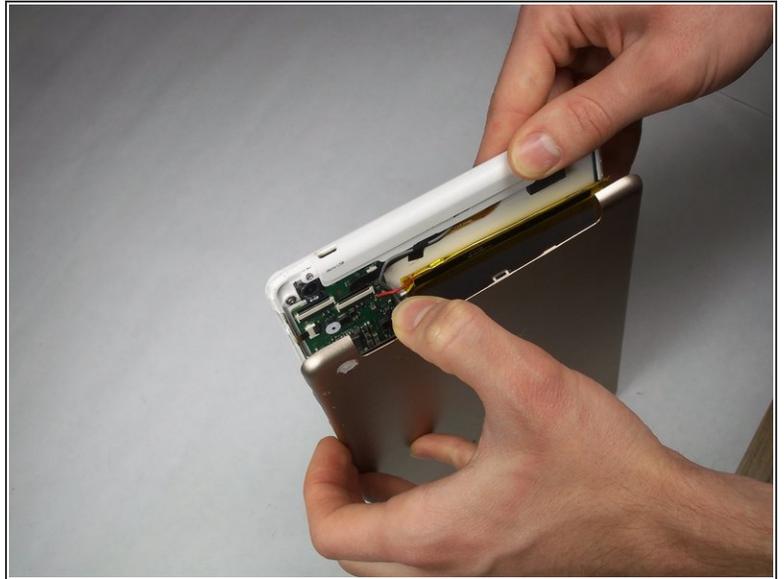

- Start by bending the tablet back at the top white-colored portion to expose an opening between the back cover and the tablet body.
- Wedge a plastic opening tool into the opening and push it down to force the back cover off.
- Move along the top edge of the tablet and repeat the step above.
- Pull the back cover away from the tablet body to completely remove it.

Step 2 — Battery



- With the back cover removed, you can now see the battery.
- You will need a soldering/desoldering kit to [desolder](#) the 3 battery leads to the circuit board.

To reassemble your device, follow these instructions in reverse order.