



# Disassembling the Ematic Genesis

This guide will give the reader instructions on how to disassemble the Ematic Genesis in order to access the inside components in need of repair. PREREQUISITE ONLY

Written By: Justin Rohrman





## TOOLS:


- [Spudger](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Ematic Genesis Casing



- Unscrew the two (2) 1.3mm Phillips #00 screws found on the bottom edge of the tablet, where the power and volume buttons are located.

## Step 2

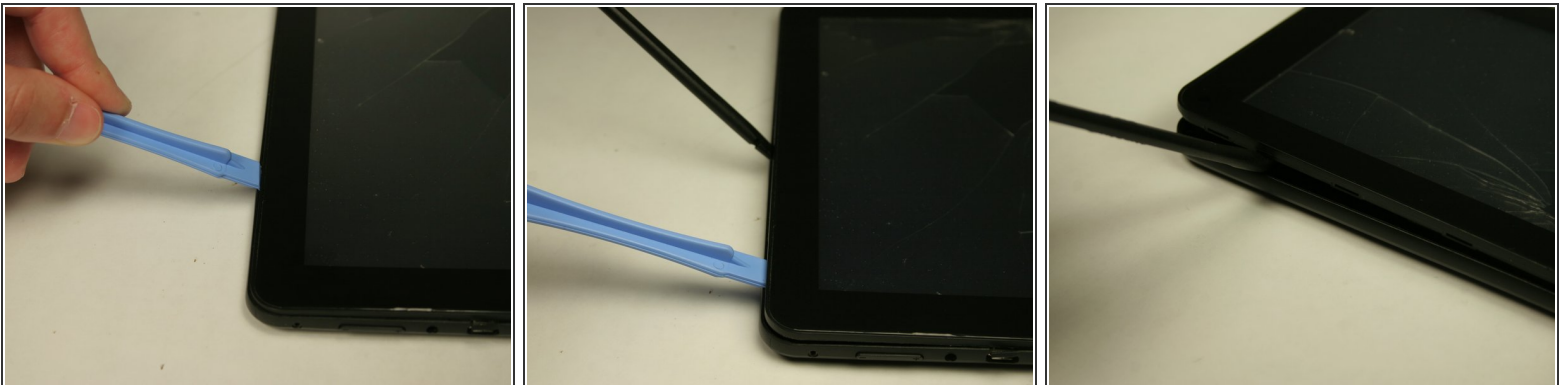

- Insert plastic opening tool into the edge between the screen plate and the back plate to create a separation between the casings.
- Insert the flat end of the spudger next to the plastic opening tool and carefully pry the edges apart. Continue this all around the edges until the casings separate.
- ⓘ There may be cracking sounds when prying them apart. If carefully done, this is only the locks coming apart and is not harmful.
- ⚠ Be careful when separating the two plates as they are connected by the speaker wires and could be disconnected during this process.

## Step 3



- Remove back plate from screen plate and lay both down flat next to each other.
- ⚠ Be careful when separating the two plates as they are connected by the speaker wires and could be disconnected during this process.

To reassemble your device, follow these instructions in reverse order.