



Canon PowerShot A2200 Back Cover Replacement

This guide will show you how to remove the back cover for replacement.

Written By: Jessica Huebschman



INTRODUCTION

This replacement guide requires you to remove the screws that hold the back cover of the camera in place. This will allow you to replace the back cover as well as have access to other parts of the camera.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Back Cover



- First, remove the batteries and memory card.
- Remove the 5.0 mm black screw with a Phillips #00 screwdriver.
- Remove the 5.0 mm silver screw with a Phillips #00 screwdriver.

Step 2



- Remove the 5.0 mm black screw on the right with a Phillips #00 screwdriver.

Step 3



- Remove the 5.0 mm screw on the left with a Phillips #00 screwdriver.

Step 4



- Begin taking off the back cover with a plastic opening tool.
- Begin by wedging the plastic opening tool behind the bottom left corner of the LCD screen as shown.
- Slide the plastic opening tool to the right, along the mating edge, to pry off the back cover.
- Continue taking off the back cover along the left side of the camera as seen in the third picture.

Step 5



- Use the plastic opening tool to separate the top section of the back cover from the frame.
- Once there is enough separation between the back cover and the frame, remove the back cover for replacement.

To reassemble your device, follow these instructions in reverse order.