




Onda V701 Screen Replacement

Remove the screen from the device.

Written By: William Sioholm

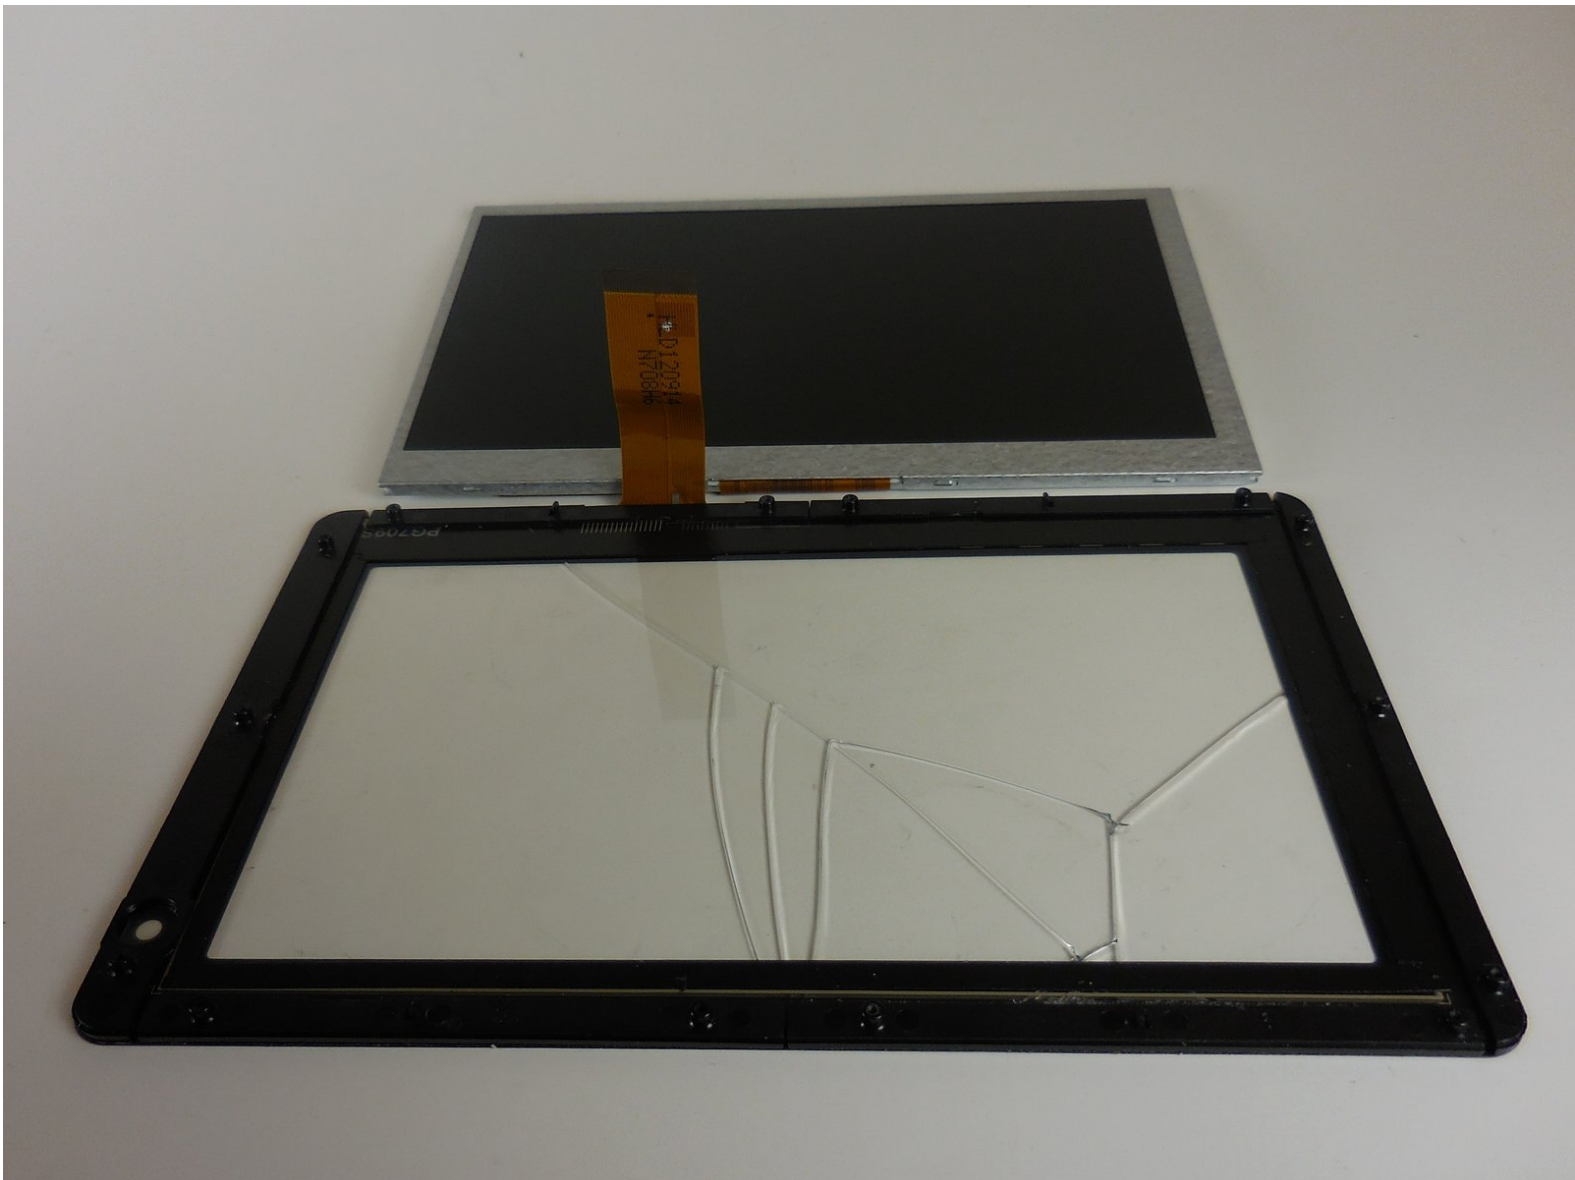

INTRODUCTION


This guide will allow you to remove the screen from the inside of the device in order to clean it or replace it. The screen on a device can easily crack. This repair is easy to do and does not require any special tools.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Back Panel



 Ensure device is powered off before disassembly.



- Remove the 4 rubber screw plugs using a spudger.

Step 2



- Remove the four 4.8mm mounting screws using a PH00 screwdriver.

Step 3

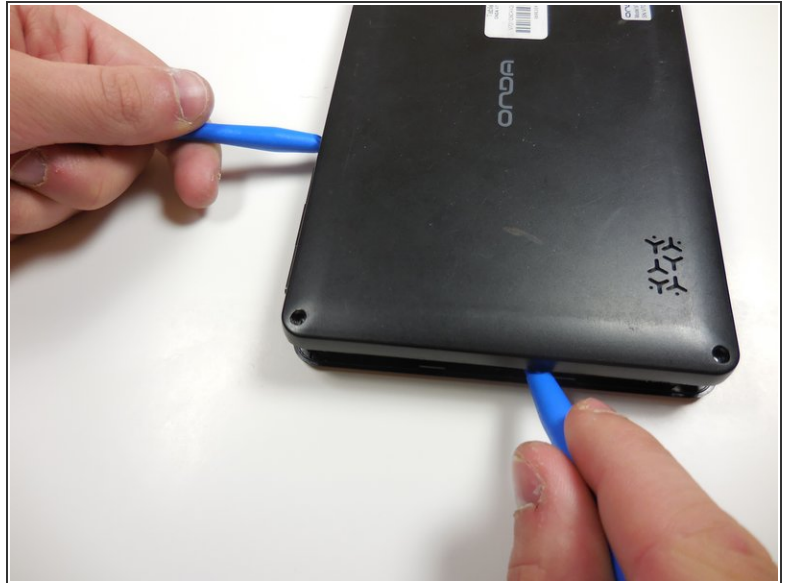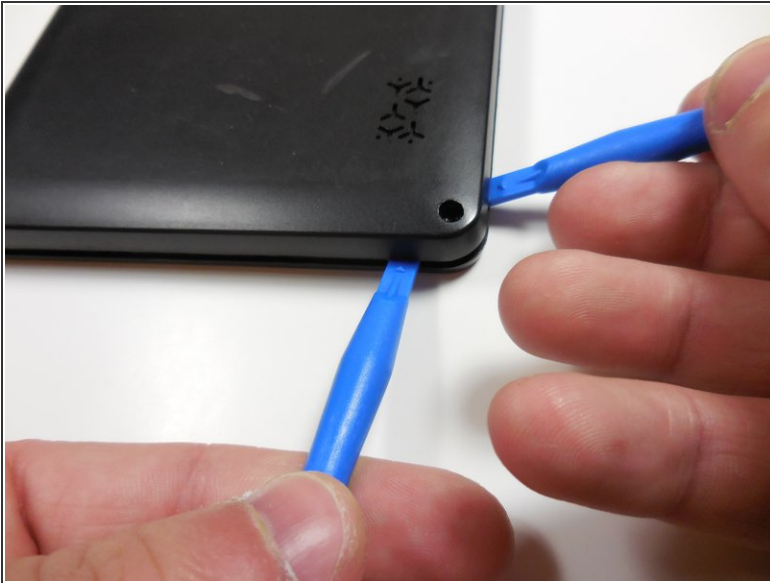




- Starting at one corner, gently pry the back panel assembly from the screen assembly using two plastic opening tools.
- Slide the opening tools around the perimeter of the device to separate the back panel assembly from the screen assembly.

Step 4



- Gently lift the screen assembly away from the back cover assembly.
- ⓘ Be careful when separating the two pieces as the screen assembly is still connected to the mother board by two ribbon cables.

Step 5

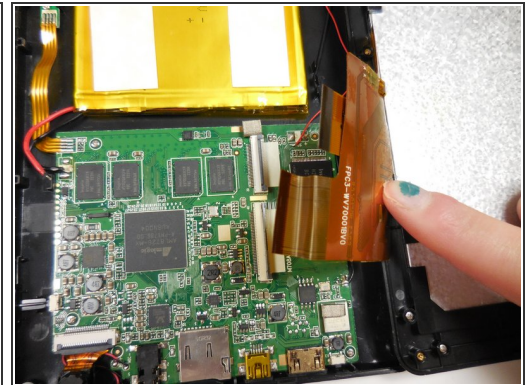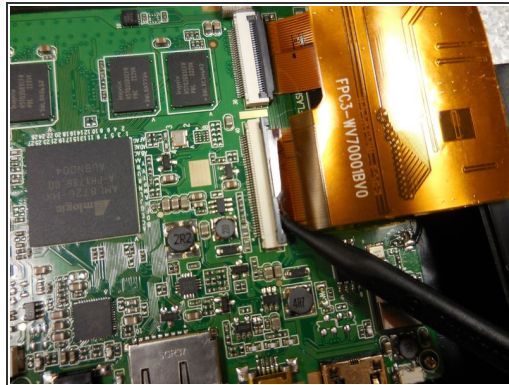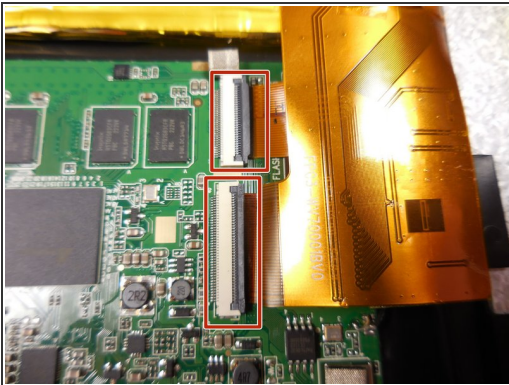


- Disconnect the two ribbon connectors by flipping the gray tabs up with a fingernail or a spudger.
- Remove the ribbon cables.

Step 6 — Screen




- Remove all 14 of the 3.6mm screws using a PH00 screwdriver.

Step 7

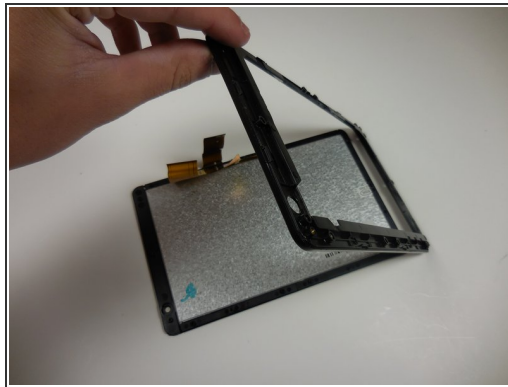

- Gently separate the screen from the plastic border/screen holder by pulling it off with your hands.

Step 8

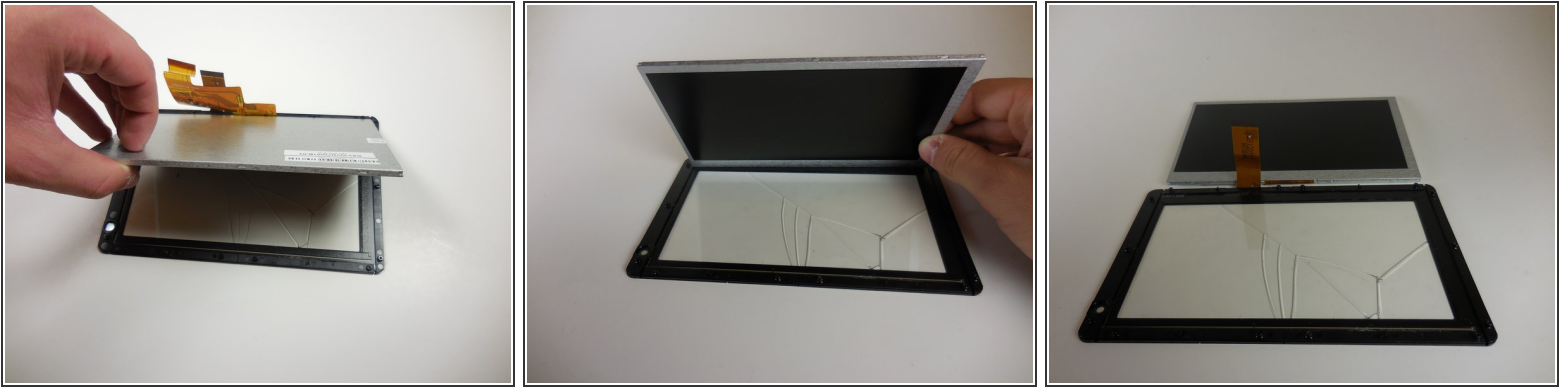

- Remove the grey monitor from the glass screen cover by gently lifting it up.

To reassemble your device, follow these instructions in reverse order.