



# Axess TA2513-10WT Back Cover Replacement

Removal of the plastic cover on the back of the...

Written By: Hayley Rabe



# INTRODUCTION

Removal of the plastic cover on the back of the Axess TA2513-10WT tablet will be necessary for any replacements within the tablet. These instructions will teach you how to remove the back cover either for back cover replacement or as a prerequisite for other part replacements.

---

## TOOLS:

[iFixit Opening Tool](#) (1)

[Spudger](#) (1)

---

## Step 1 — Back Cover



- Lay the tablet down on a flat surface with the screen facing up, and the external camera facing upwards and closest to you.

## Step 2



- Insert the plastic opening tool in the space between the screen and the back cover above the volume buttons.
- Slide the plastic opening tool gently along the sides.
- ① If a small gap is not created between the screen and the back cover, pry gently upward at each of these latching points.

## Step 3



- Place the spudger in an open space to keep the back case from shutting while you continue to slide the opening tool.

## Step 4



- Remove the back cover with your hands once all points have been unlatched. It should separate completely from the screen that contains the battery and chip components.

---

To reassemble your device, follow these instructions in reverse order.