




Fujifilm FinePix S2980 Speaker Replacement

Use this guide to replace the speaker in your Fujifilm FinePix S2980 camera.

Written By: diane heidke

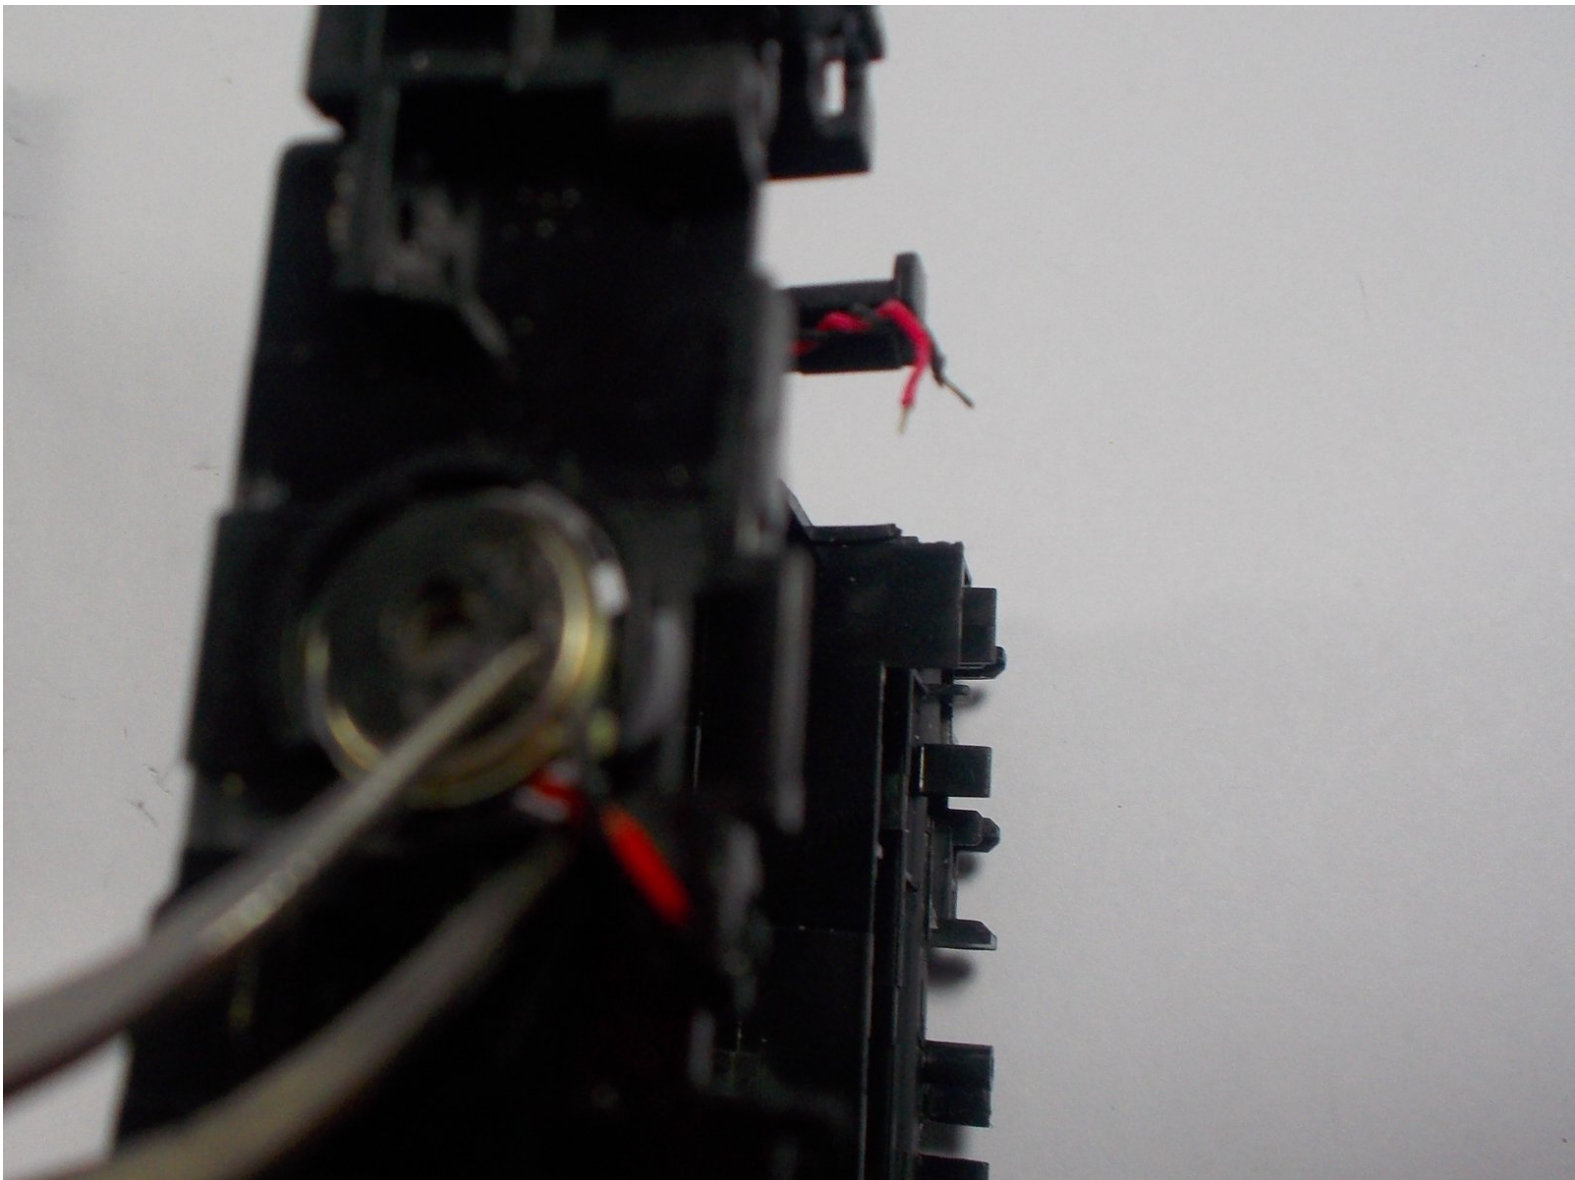

INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — LCD Screen



- Use a PH0 screwdriver to remove four screws on the right side, three screws on the bottom, and four on the left side to take off the rear plate.

Step 2

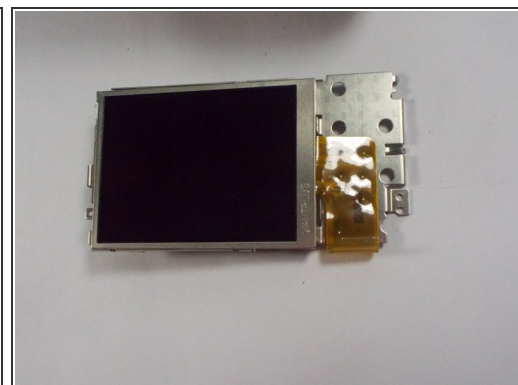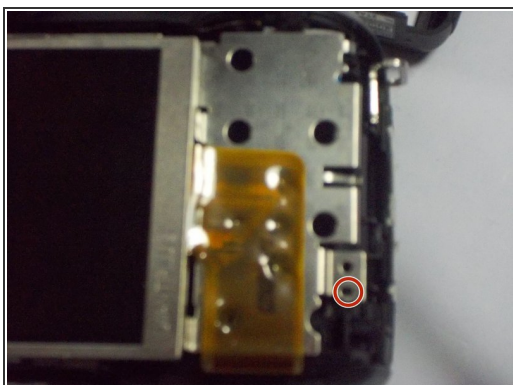


- Remove the three screws holding the LCD screen in place.
- Replace with new screen.

Step 3 — Speaker





- Remove the two screws from underneath the flash mechanism.
- Remove the two screws placed on the right and left sides of the camera.

Step 4

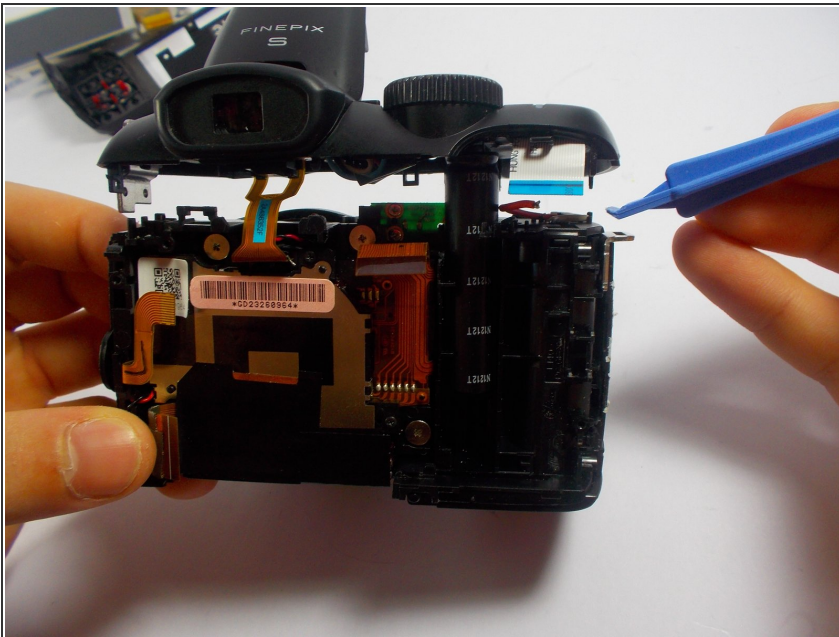




- Use the opening tool to pry the top plate off of the top of the camera.

Step 5

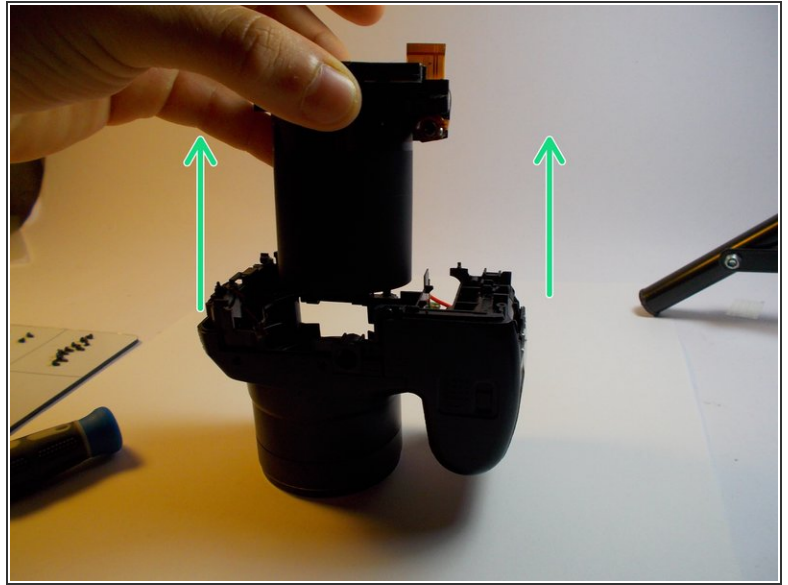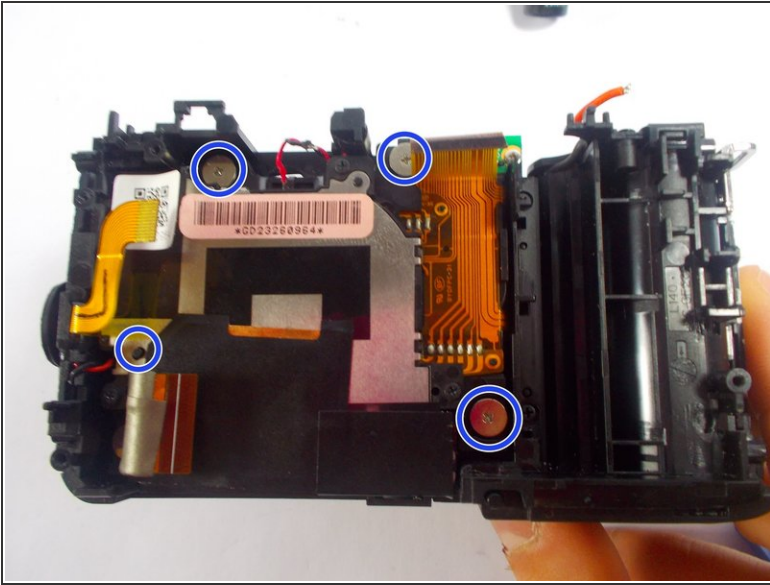



- Remove the four larger silver plated screws placed on the inside of the lens.
- Remove the lens by lifting it up from the cavity.

Step 6

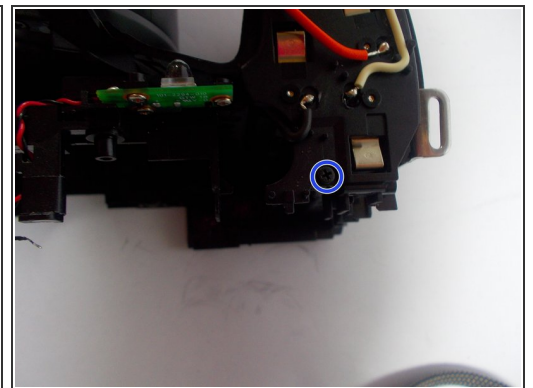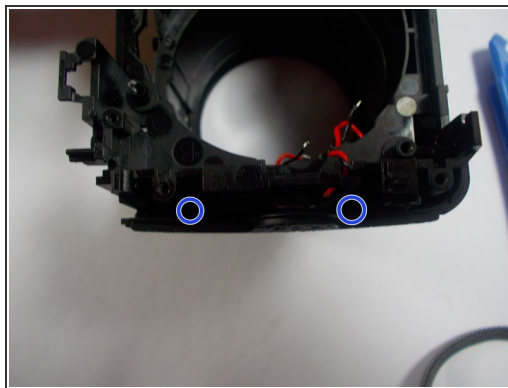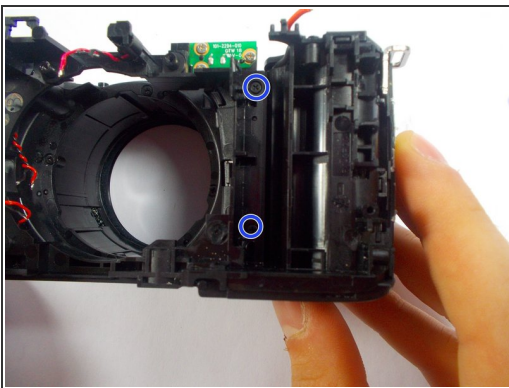

- Remove the five bracket screws.

Step 7

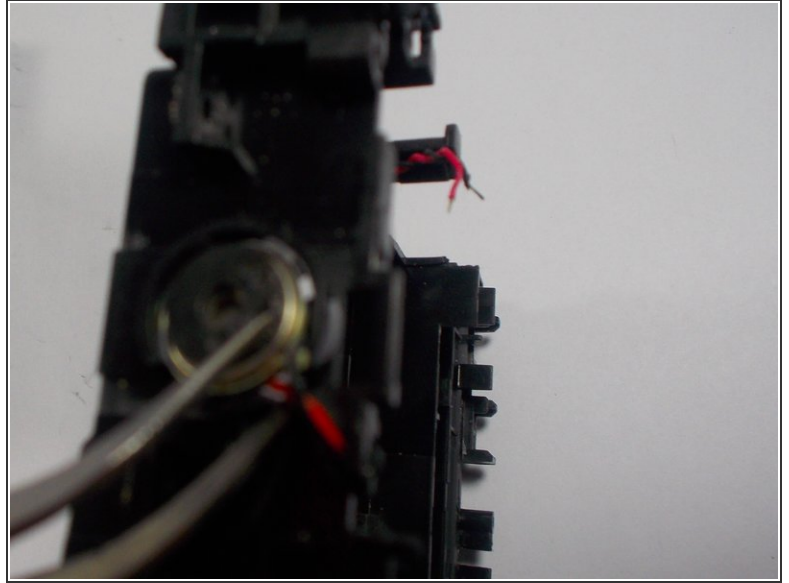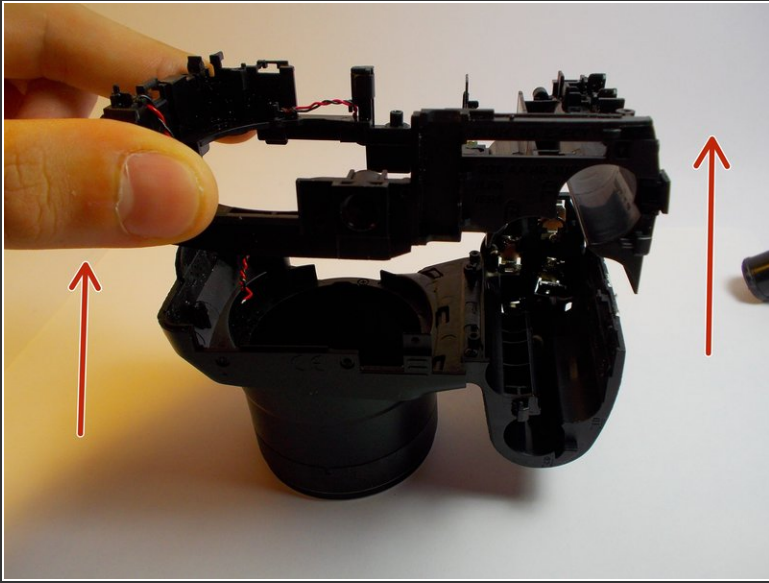

- Once the screws are out, remove the the bracket
- Remove speaker with given tweezer tool and replace

To reassemble your device, follow these instructions in reverse order.