



iDea USA CT702 Button Replacement

This guide will walk the user through removing the button keys from the device and applying new keys.

Written By: Daniel Brandt




INTRODUCTION

This guide demonstrates how to remove and replace the button keys of an iDea USA CT702 in order to preserve the function of the device.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Button

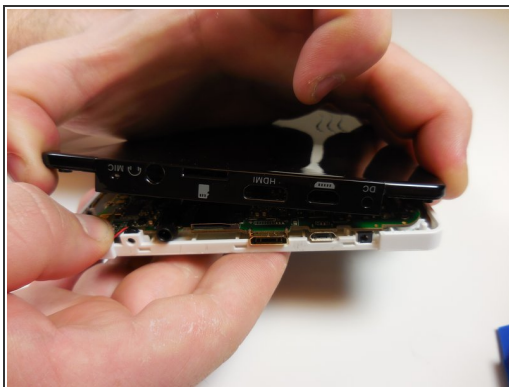


- Place the device face up.
- Use a plastic opening tool to gently pry open the black panel around the portholes.

Step 2

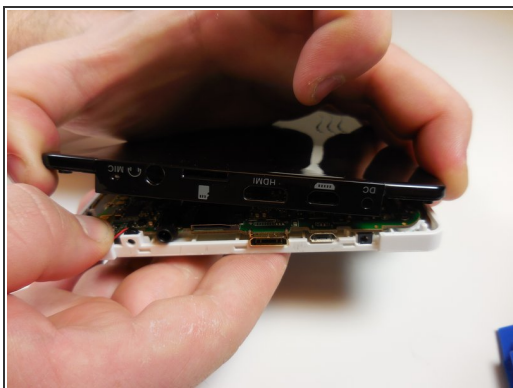



- Pry the rest of the back off; slowly apply pressure from each side to break each clip connection.

Step 3

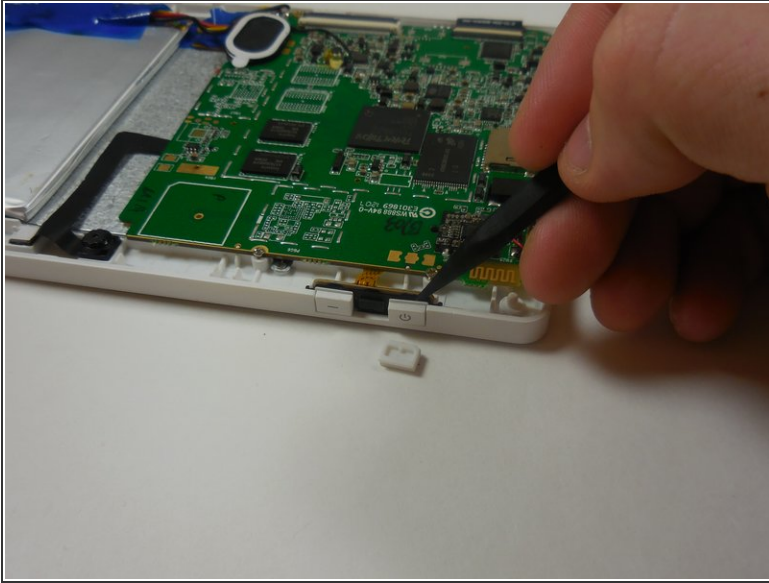

- With a plastic spudger tool, pry the keys away from the black key mat to remove them.
- ① It is easiest to start with the volume up button key and then work on freeing the next two.

Step 4

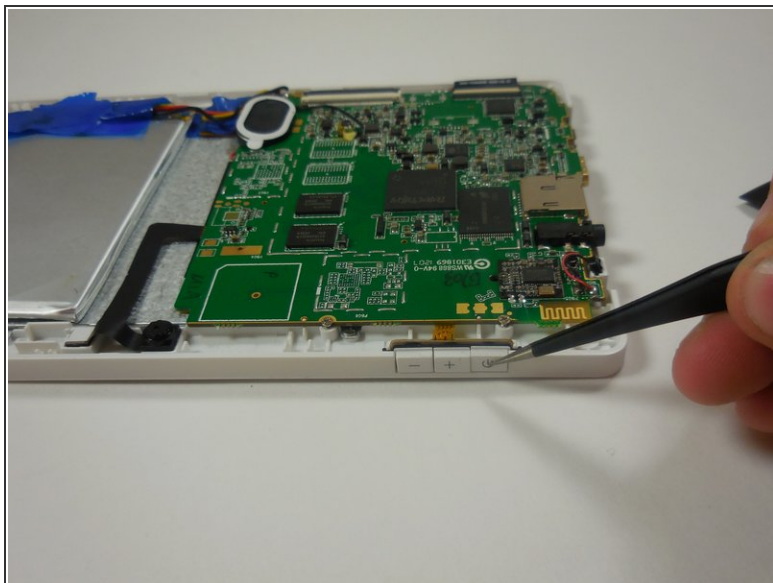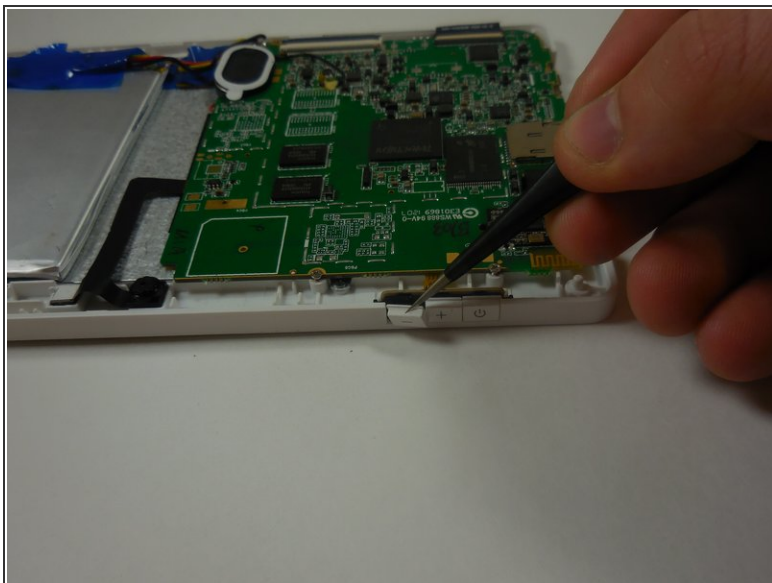

- Replace the button keys, starting with the outer and ending with the innermost key.
 - ❗ The back of each button key has a notch that matches an indent on the black button mat. Match the notches and the indents to properly align the buttons.
- To replace the back cover, follow the first three steps in reverse order.

To reassemble your device, follow these instructions in reverse order.