



# Canon PowerShot A540 Front Cover Replacement

Replace the front cover.

Written By: Carley Fuller





## TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Turn off the camera.
- Turn the camera upside-down and press the tab to release the battery cover. Remove the batteries.

## Step 2



- Turn the camera upside down to view the "Card/Batt. Open" Cover.
- Use a Phillips head #000 screwdriver to remove the three (3) 4.0 mm screws.



## Step 3



- Open "Card/Batt. Open" Cover.
- Remove the one (1) 5.0 mm screw with the Phillips head #000 screwdriver.

## Step 4




- Turn the camera to the right side of the LCD screen.
- Remove the three (3) 4.0 mm screws with the Phillips head #000 screwdriver.

## Step 5



- Gently remove the back cover.
- Start at the bottom at the corner of the "Card/Batt. Open" Cover.
- Then move onto the other edges and the top.

 It may be tight at the top!

## Step 6 — Front Cover



- Turn the camera to view the front.
- Remove the lens guard.
- Press the lens guard's button as you turn the guard counterclockwise.




## Step 7



- Turn the camera to the side left of the LCD screen.
- Remove the one (1) 4.0 mm screw with the Phillips head #000 screwdriver.

## Step 8

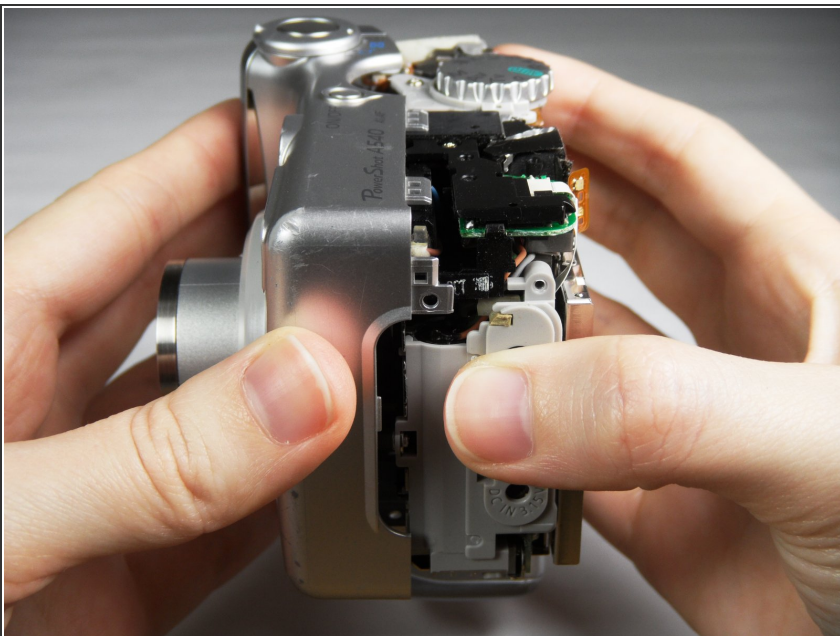

- Remove the front cover gently.
- ⓘ When removing the front cover, a thin, black rubber washer may fall off the lens. If it does, make sure to put it back on the lens before reassembly.

To reassemble your device, follow these instructions in reverse order.