



# RYOBI P422 Battery and Handle Replacement

This guide will cover how to replace/remove the battery and the handle.

Written By: Angela



## INTRODUCTION

It is very important to remove the battery before any repairs. This ensures that the grinder will not turn on when you are replacing or fixing a part. Removing the handle makes it easier for the grinder to lay flat when you replace components within the body.

## Step 1 — Battery and Handle



- To remove the battery press down on the two buttons located on each side of the battery and pull away from the body of the grinder.
- To remove the handle hold grinder with one hand and use the other hand to unscrew the handle with a counter-clockwise motion

To reassemble your device, follow these instructions in reverse order.