




Dell OptiPlex GX260 Hard Drive Replacement

This guide will show you how to remove the hard drive.

Written By: Kevin Schapansky

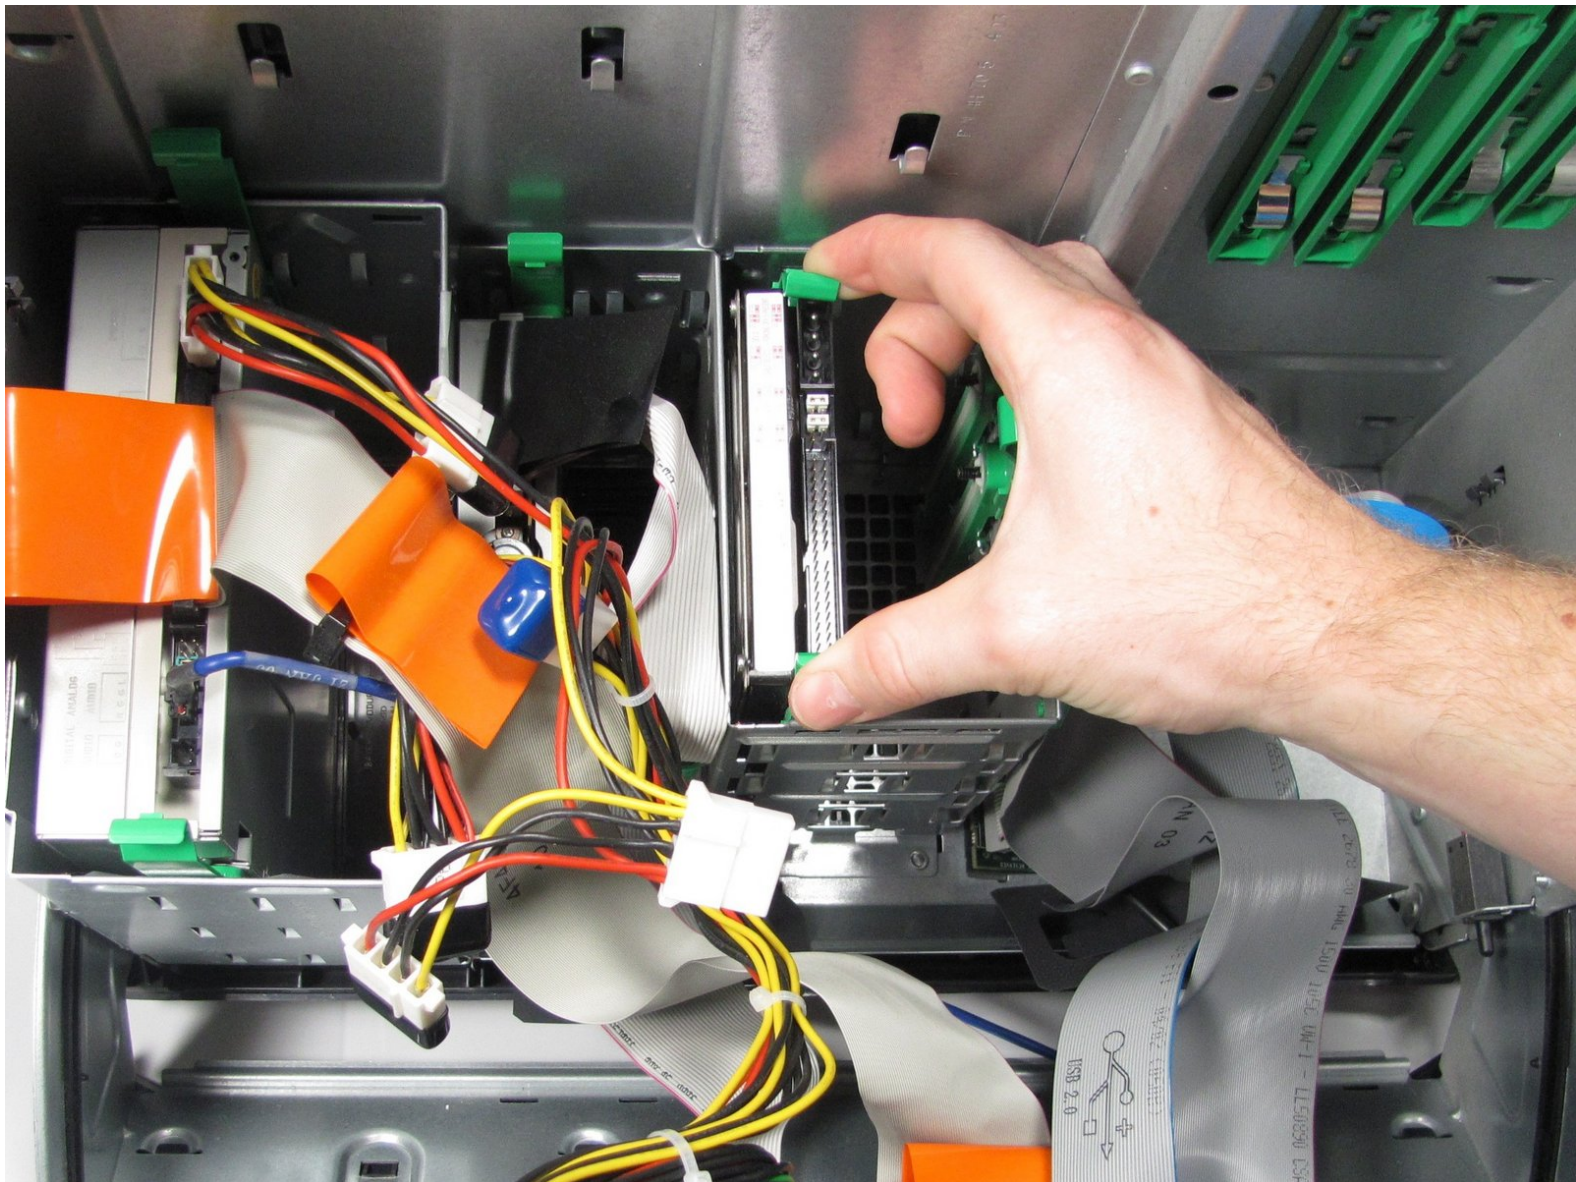



PARTS:


- [2 TB SATA Desktop Hard Drive](#) (1)
- [1 TB 7200 RPM 3.5" Hard Drive](#) (1)
- [750 GB Hybrid Seagate Hard Drive \(New\)](#) (1)

Step 1 — Case




- Lay the Dell OptiPlex GX260 down on a clean flat surface with the rear towards you.
 - Push the oval shaped buttons located on the top and bottom of the PC simultaneously and lift the case straight up.
- i** Note: Some force may be required to push in the oval buttons open the PC case.

Step 2 — Hard Drive

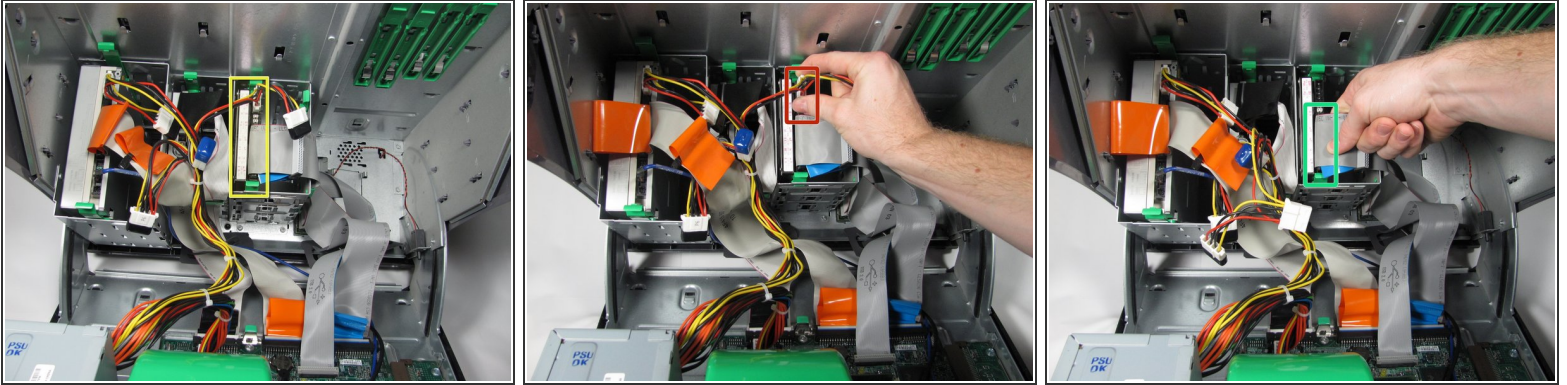

- Identify the Hard Drive in the case.
- ⓘ If there is more than one hard drive installed the process is the same for each hard drive.
- Remove the power cable from the hard drive by squeezing the side tabs in and pulling gently.
- Remove the IDE cable from the hard drive by gently pulling the ribbon cable out.

Step 3

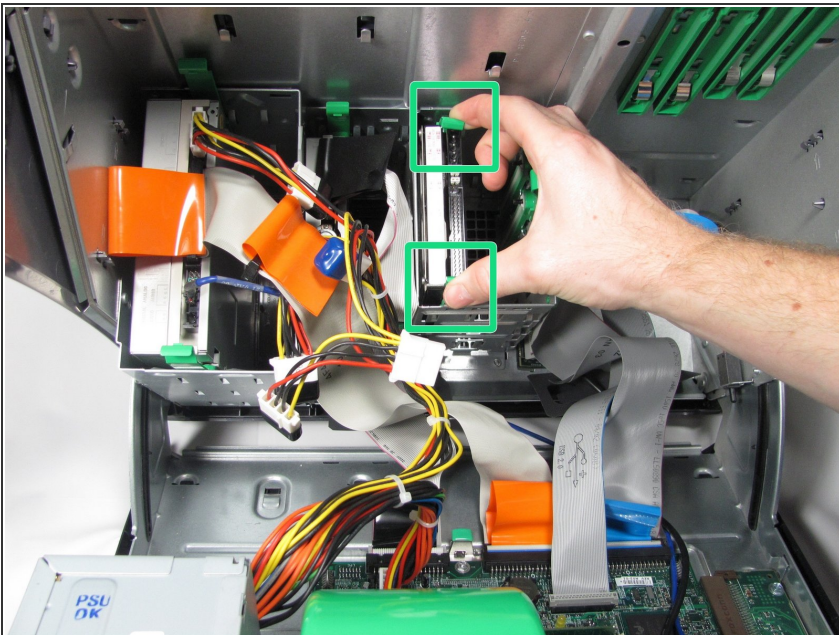

- Pinch the two green tabs inwards to release the hard drive and lift it out.

To reassemble your device, follow these instructions in reverse order.

