



Kitchen Gourmet XQ-673H Bottom Cover Replacement

This guide will show the owner how to take apart the device and show the owner how to replace the Bottom Cover.

Written By: Sean Perry



INTRODUCTION

This guide will help the owner of a Kitchen Gourmet XQ-673H replace the Bottom Cover.


TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Bottom Cover



- Turn the Kitchen Gourmet upsidedown.

 Make sure the device is unplugged before continuing.

Step 2

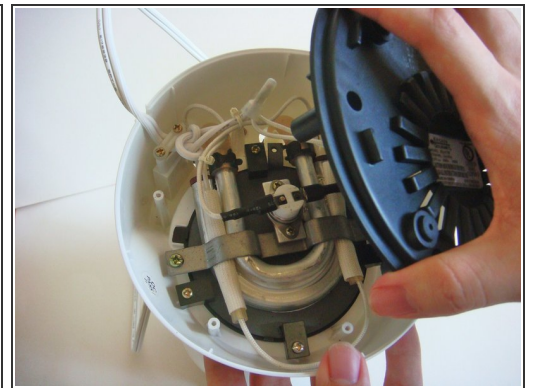

- Using a phillips #1 screwdriver, remove the six 10mm screws found on the bottom of the device.
- Remove the botttom cover.

To reassemble your device, follow these instructions in reverse order.