


Fujifilm FinePix S2980 LCD Screen Replacement

This guide will show you how replace a cracked or malfunctioning LCD screen.

Written By: Megan Merlo

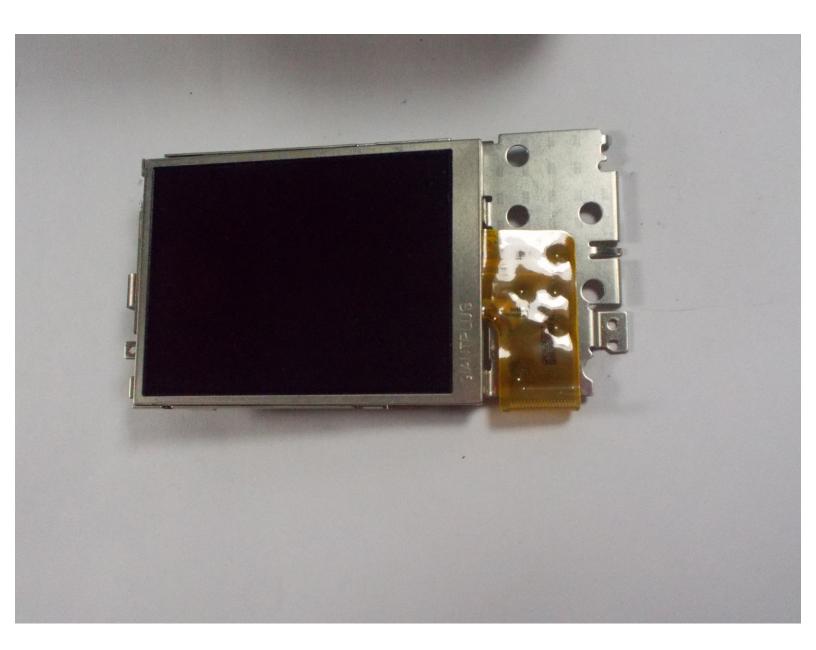



Phillips #0 Screwdriver (1)

Step 1 — LCD Screen







• Use a PH0 screwdriver to remove four screws on the right side, three screws on the bottom, and four on the left side to take off the rear plate.

Step 2







- Remove the three screws holding the LCD screen in place.
- Replace with new screen.

To reassemble your device, follow these instructions in reverse order.