

Matsunichi MarquisPad MP977 Plastic Front Panel Replacement

Written By: Rachel Servis





iFixit Opening Tool (1) Phillips #00 Screwdriver (1)

Step 1 — Plastic Front Panel



 Remove the two screws using a PH #00 Phillips head screw driver.

Step 2



- Place the device face down on a flat surface.
 - Insert one of the wide tipped, plastic opening tools into the top of the left speaker slot.

 \triangle Be sure not to puncture the covering of the speaker.

• Pry the back plate open and slide the tool in a clockwise direction, moving it along the opening between the device and its back plate until you reach the power button.

Step 3



- Insert opening tool into the right speaker slot.
- Pry open the back plate, and slide the tool counter clockwise along the device until you reach the charging port.




• Remove the back plate and place it to the side.

Step 5



- Remove the screws holding the metal frame plate in place.
- Remove the metal frame plate from the plastic housing.

Step 6

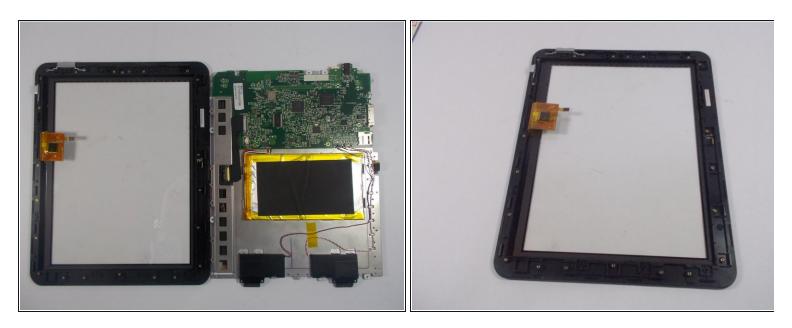

• Place the metal frame plate and components into the new plastic front panel.

To reassemble your device, follow these instructions in reverse order.