




# Dell Venue 8 Back Camera Replacement

Removing and replacing the back camera of a Dell Venue 8.

Written By: Andrea

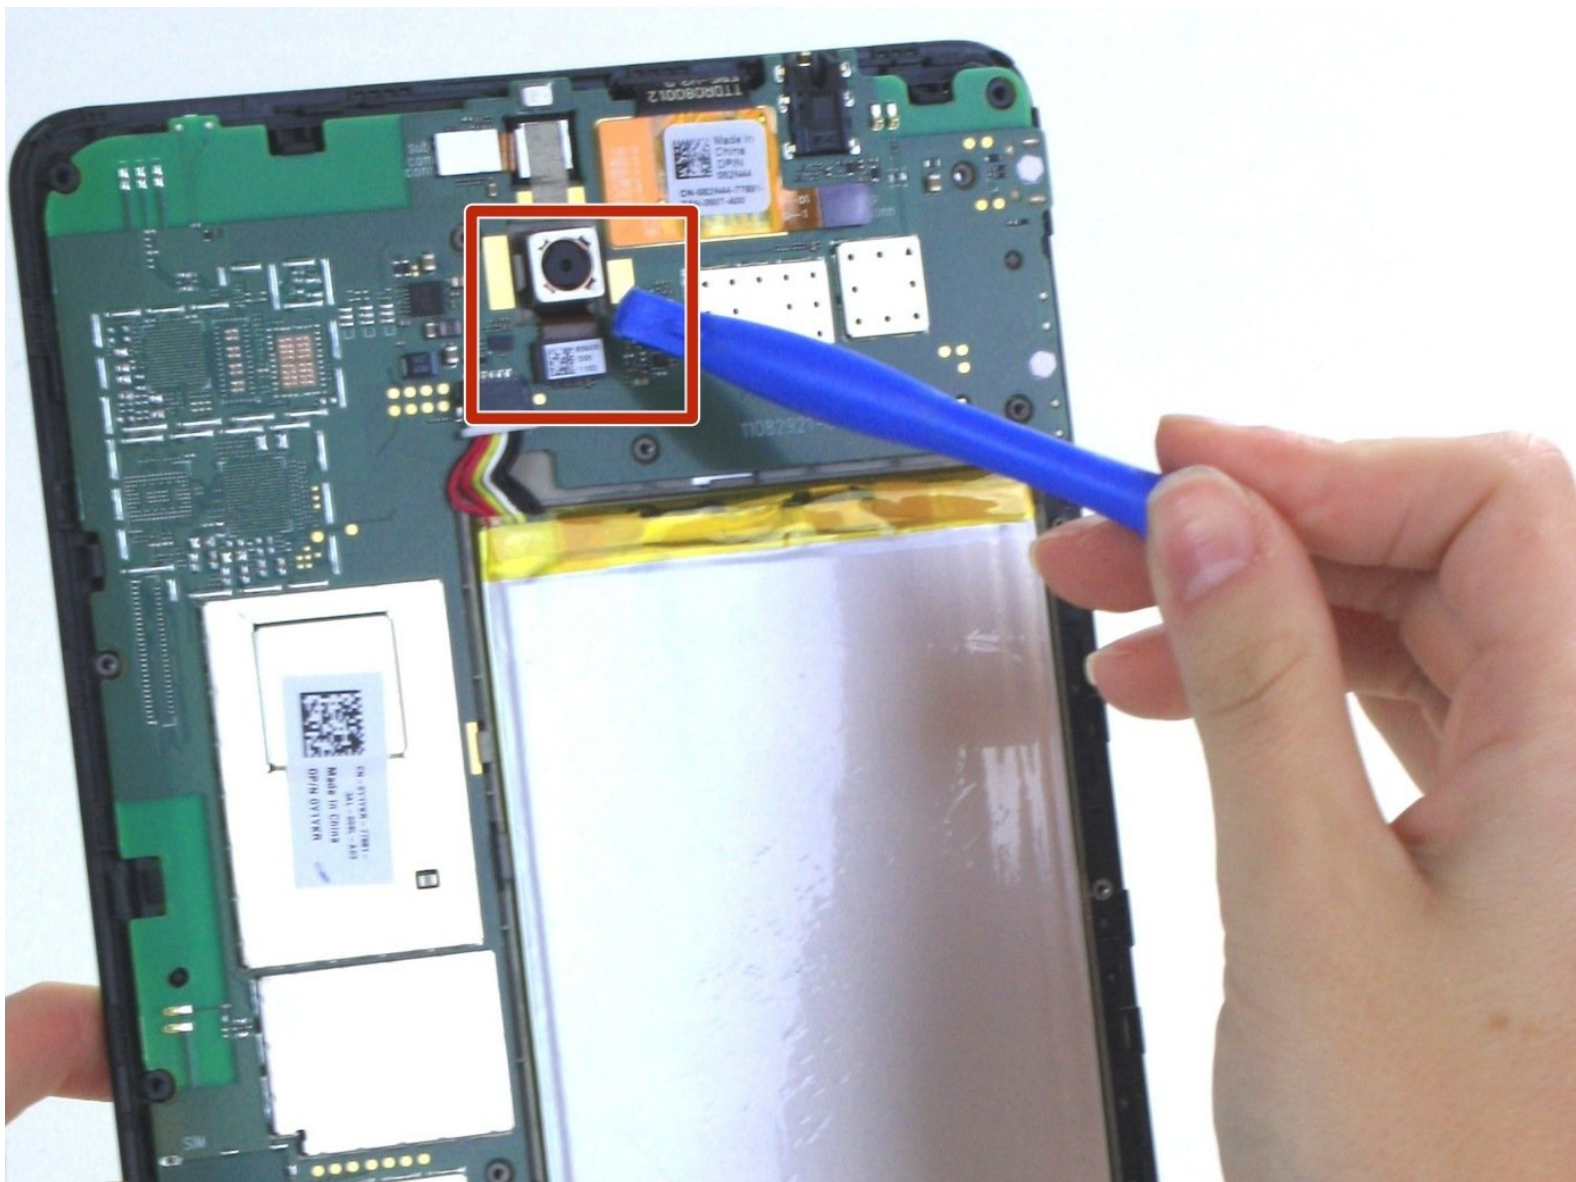

## INTRODUCTION

If your camera isn't functioning properly, not showing a display, or looks cracked or foggy, it may need to be replaced. In this guide we will be replacing the rear-facing camera.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T5 Torx Screwdriver](#) (1)



### PARTS:


- [Dell Venue 8 Camera Replacement](#) (1)

## Step 1 — Rear Case/Midframe




- Hold the device with the screen facing up. Gently wedge your plastic opening tool into the crease, and run it along the perimeter of the case
- ⓘ You will hear *click* sounds as the clips unhinge
- Remove the back panel of the device.

## Step 2

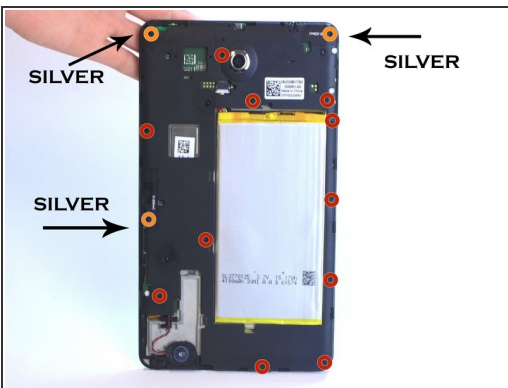

- Remove the 14 screws with the T-5 Torx screwdriver. (11 black 3.6mm screws, and three 4.45mm screws)
- ⓘ The silver screws are marked with an "S" or a sticker [S1.6(Silver)] See the corrected image
- 4.45mm Silver screws
- 3.6mm Black screws
- Gently snap the perimeter clips open, and remove the internal plastic case.

## Step 3 — Back Camera

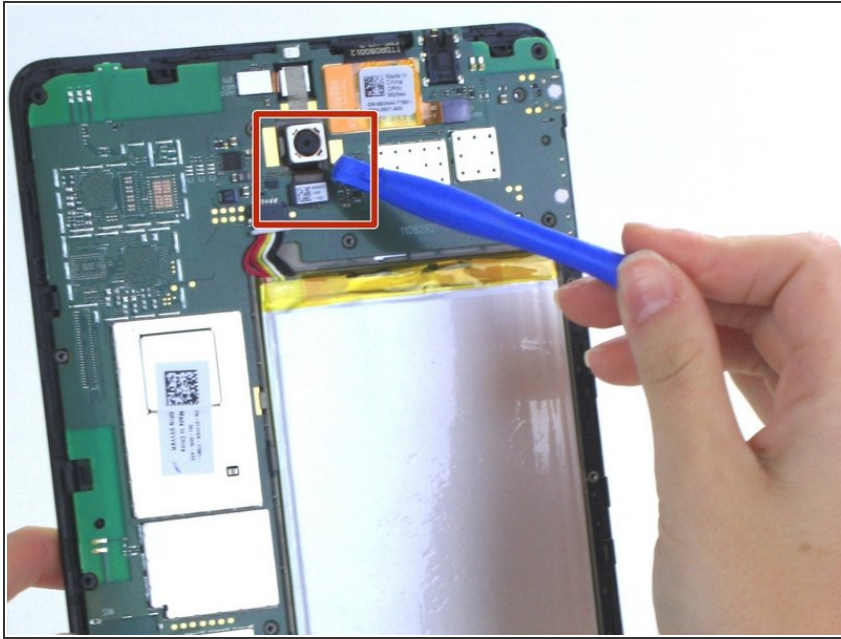

- Use the plastic opening tool to disconnect the camera from the logic board, by prying it up.

To reassemble your device, follow these instructions in reverse order.