



APEX TM785CH Speakers Replacement

This guide explains how to disassemble the tablet down to its speakers and remove the speakers.

Written By: Brian Graschel



INTRODUCTION

The guide is written so the device's speakers can be replaced if they are no longer producing sound.


You will need an opening tool for removing the cover and a soldering kit for removing the wires.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Casing

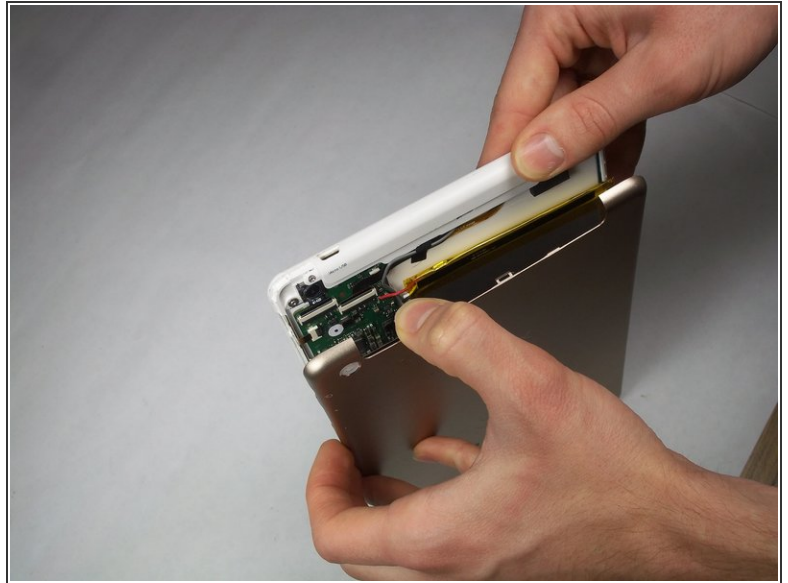


- Start by bending the tablet back at the top white-colored portion to expose an opening between the back cover and the tablet body.
- Wedge a plastic opening tool into the opening and push it down to force the back cover off.
- Move along the top edge of the tablet and repeat the step above.
- Pull the back cover away from the tablet body to completely remove it.

Step 2 — Speakers

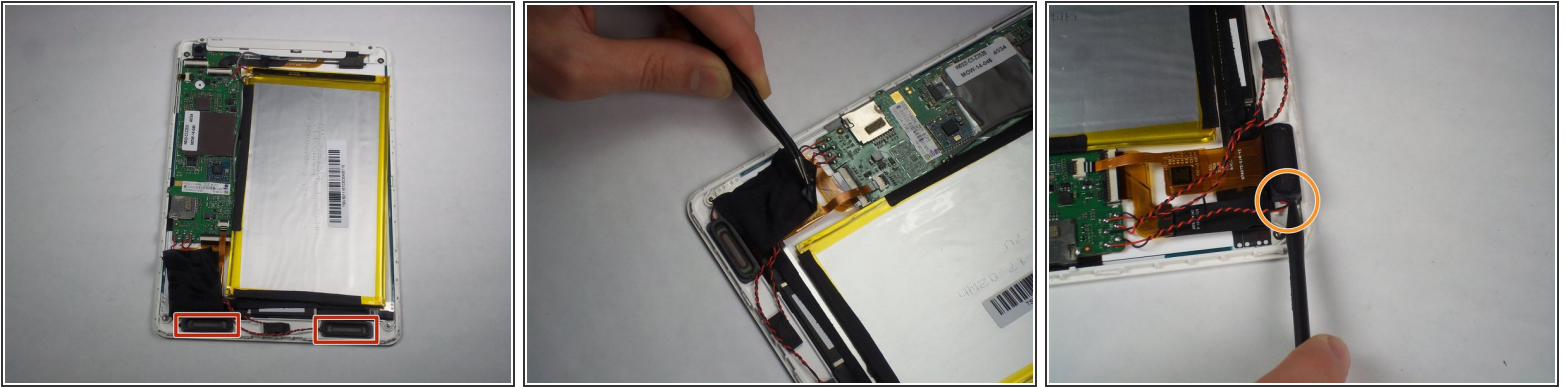

- The speakers are located towards the bottom left and bottom right corners of the tablet.
- If not already done, remove the black tape holding the wires down.
- Wedge a spudger underneath the speaker in its socket, near where the wires are connected. You can then pry out the speakers.

Step 3

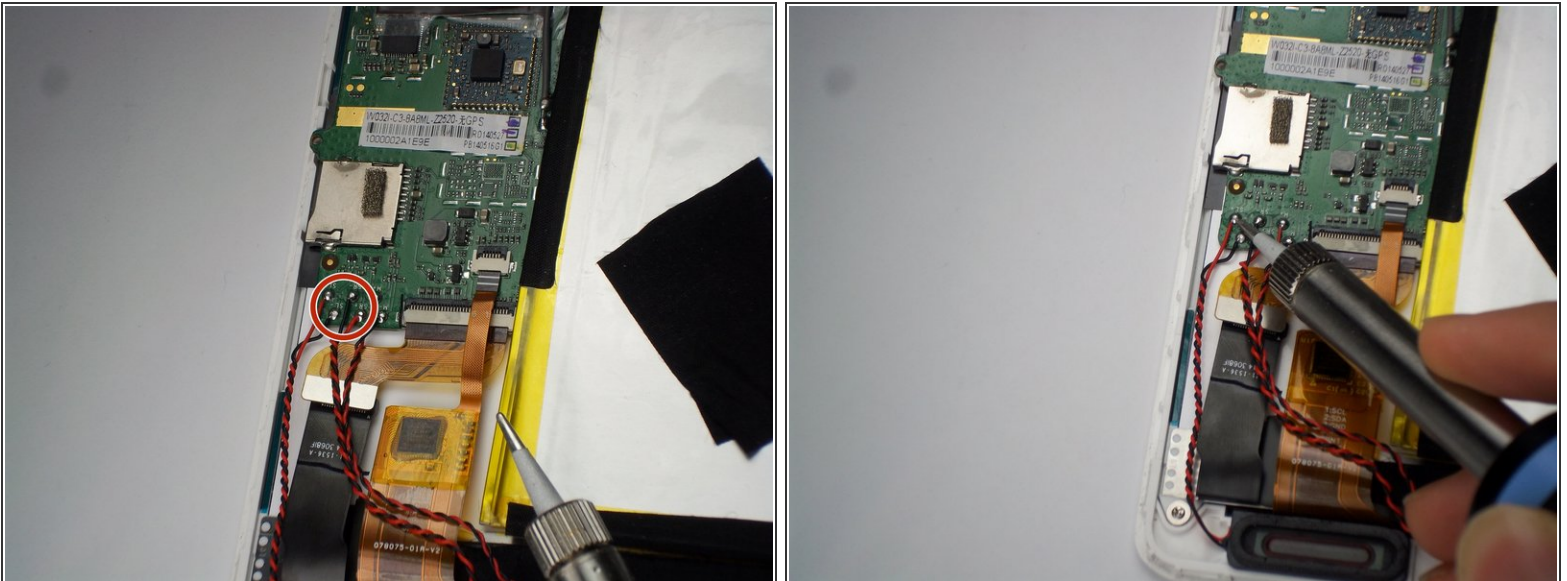

- You will need a soldering/desoldering kit to [desolder](#) the 4 leads where the speakers connect to the circuit board.

To reassemble your device, follow these instructions in reverse order.