




Compaq Mini 110 RAM Replacement

RAM, or random access memory, is short-term...

Written By: alea

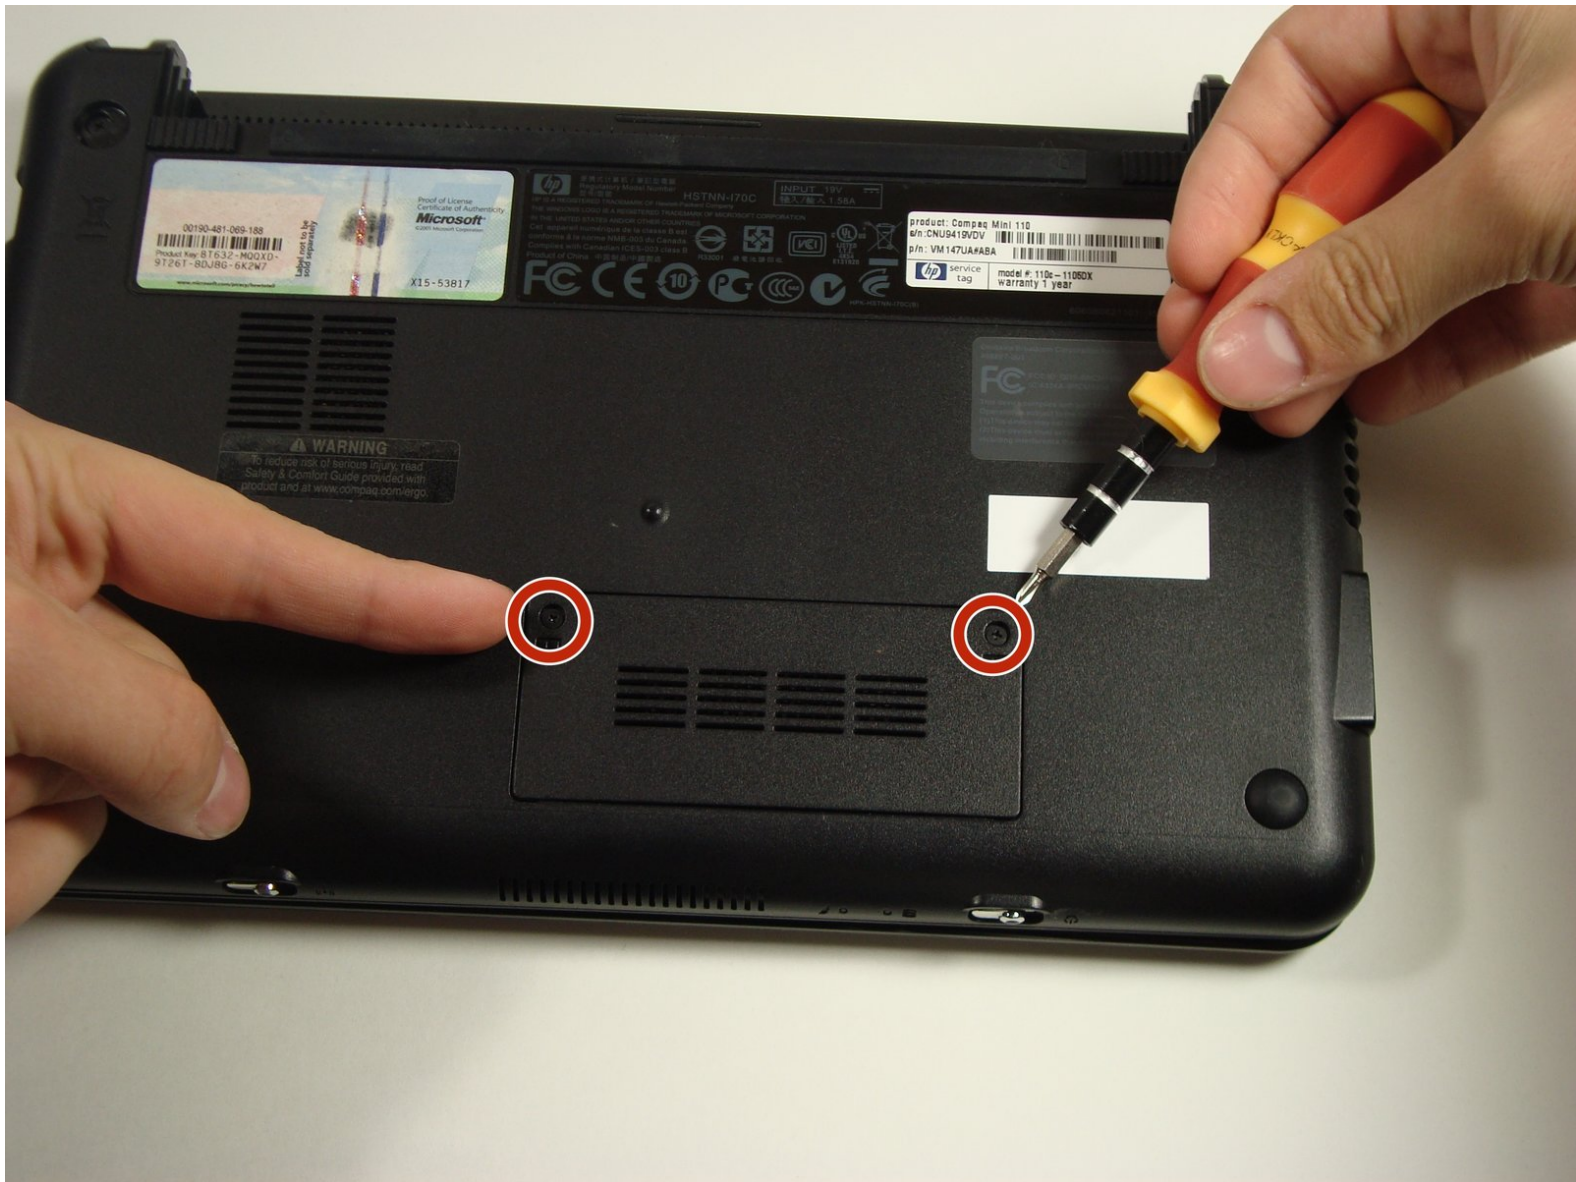

INTRODUCTION

RAM, or random access memory, is short-term storage for your Compaq Mini 110. RAM is used by your processor for immediate use as-needed, unlike long-term files written to a hard disk drive. If your computer has slowed considerably or you're looking for a boost, replacing/upgrading the RAM is a fairly simple and inexpensive first step. The Compaq Mini 110 laptop comes standard with 1GB of RAM and cannot be upgraded past a maximum of 1GB with its one (DDR2) slots.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [PC2-5300 1 GB RAM Chip](#) (1)
- [PC2-5300 2 GB RAM Chip](#) (1)

Step 1 — Battery




- Locate the battery and the battery tabs on the bottom of the Compaq Mini.

Step 2

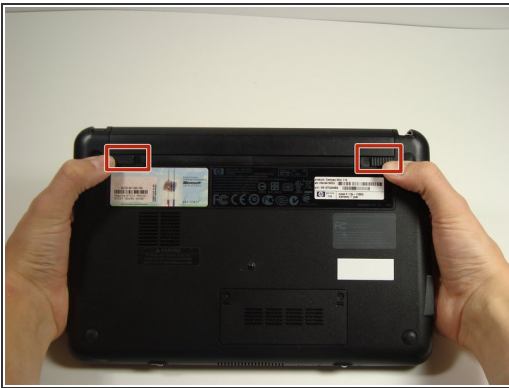


- Push both tabs inward simultaneously and slide the battery out.

Step 3 — RAM

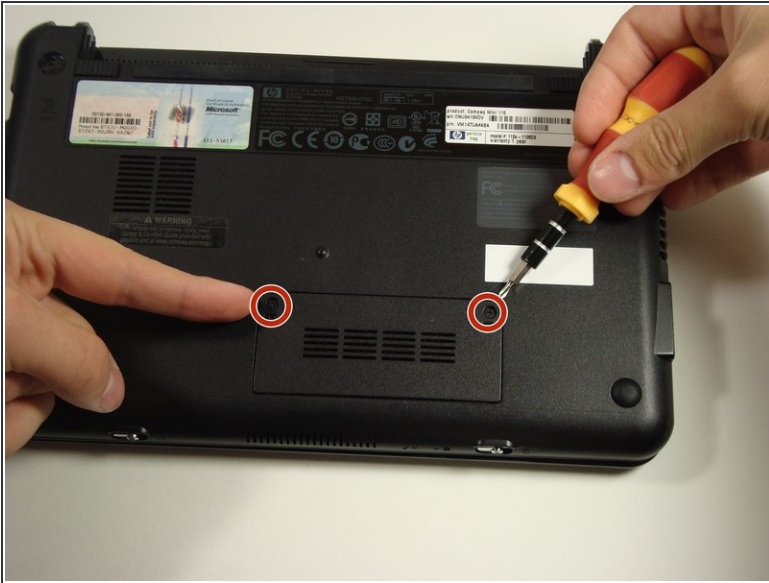

- Use a Philips #0 screwdriver to unscrew the two screws covering the memory compartment on the bottom of the laptop and remove the cover.

Step 4

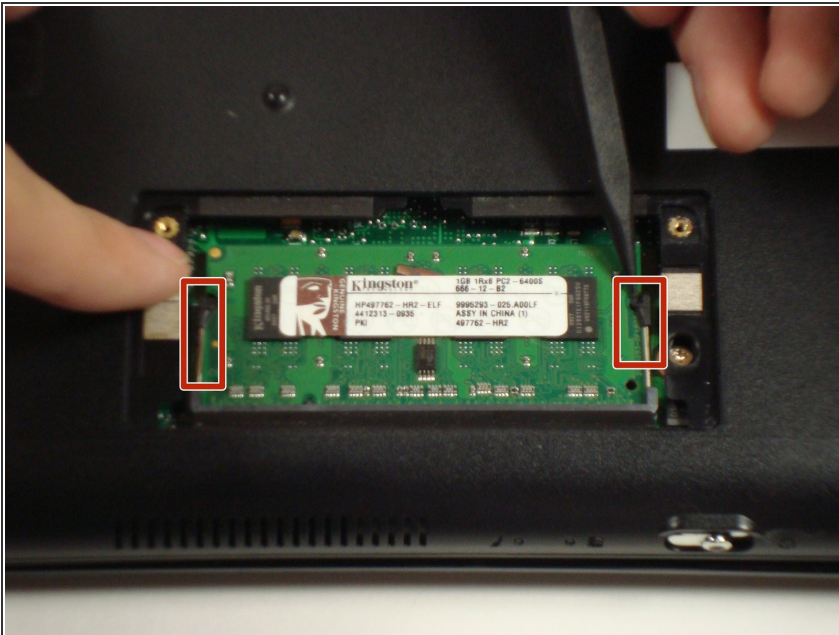

- Push out the side tabs simultaneously and pull out the old RAM module.
- ☑ When inserting a new RAM stick, be sure to evenly insert the gold pins in the same orientation that the old module was removed. While sliding the module in, press the side tabs in place.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2023-01-28 02:45:09 AM (MST).

