


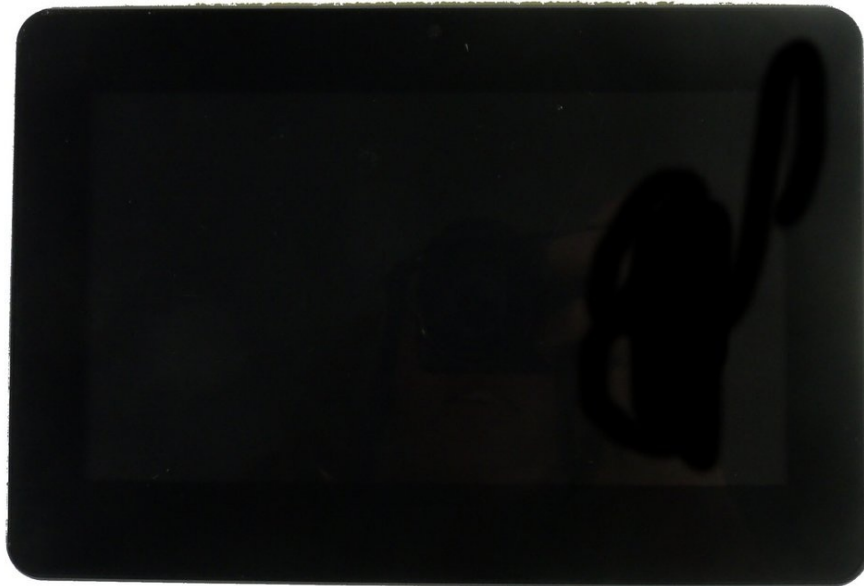

# ClickN Kids Tablet Touch Screen Display Replacement

Use this guide to replace your child's...

Written By: Kevin Finney



## INTRODUCTION

Use this guide to replace your child's touchscreen display on your ClickN Kids tablet (identified with model number P774A-GR).

The touchscreen display provides you with an electronic display that is touch-controlled by fingertip movements. Your display screen may need to be replaced if the glass is broken, cracked, or unresponsive as this will affect your ability to use the touchscreen display.

Before using this guide, make sure you are careful with any shattered glass if your display is broken or cracked. You can use the [Taping Over The Display](#) guide to help with tips for removing glass.

Before beginning, make sure to power off your tablet completely and disconnect from any external power source.

---


### PARTS:

7" Touch Screen Display (1)


---

## Step 1 — Touch Screen Display



-  Start on the side with the camera. The screen side is black, the back side is colored
- Insert a plastic opening tool into the space between the screen and the back side.

## Step 2

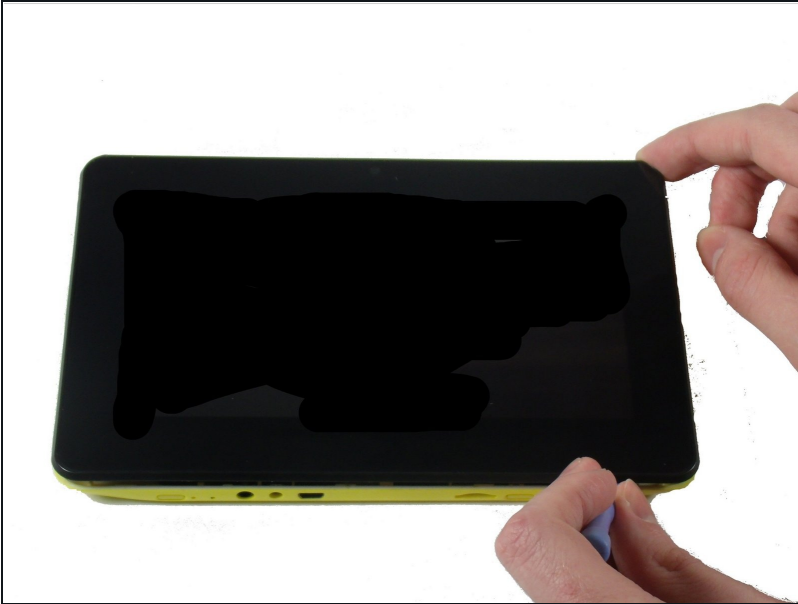

- Press the plastic opening tool in until you hear a “click” and that part of the tablet opens.
- Press and slide the plastic opening tool around all sides of the tablet until all sides pop off.


## Step 3



- Lift the detached screen from the camera side until you can see the inside of the tablet.

⚠ Potential for device damage.  
Don't open too fast, or you might damage the ribbon cables.

## Step 4


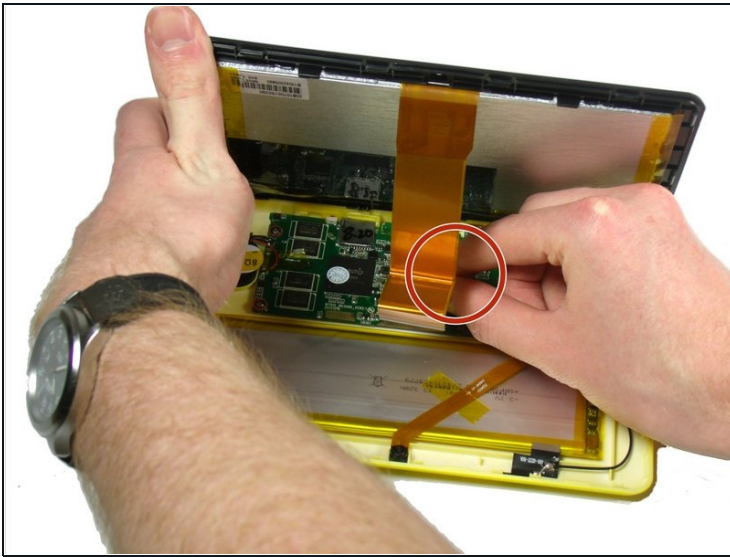


**⚠ Potential for device damage. Be careful not to damage any wires or ribbon cables during this step.**

**i** There are two ribbon cables to remove during this step. Each is connected to a base on the motherboard.

- There is a black tab behind the long ribbon cable. Lift up the black tab.
- For the ribbon cable in the back, pull the black tabs on the side out.
- Detach the ribbon cables connecting the screen to the motherboard.
- Remove any tape that is holding down the ribbon cables. Set it aside.
- Once the ribbon cables are freed, separate the top and bottom sides.

## Step 5

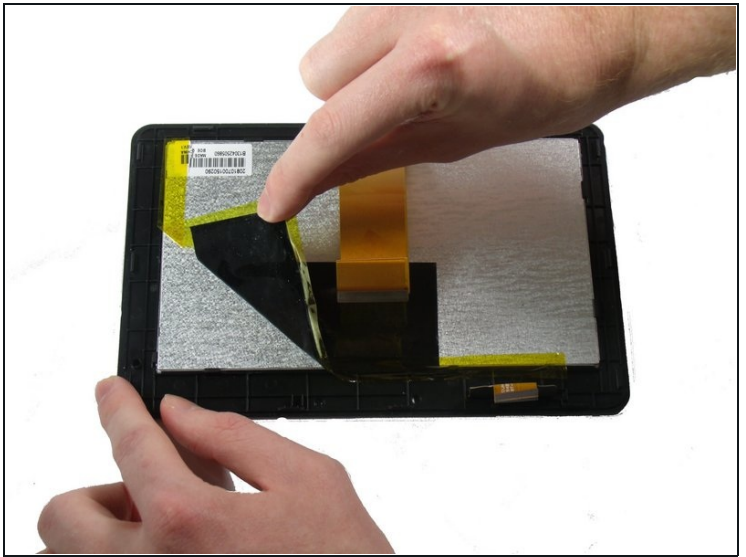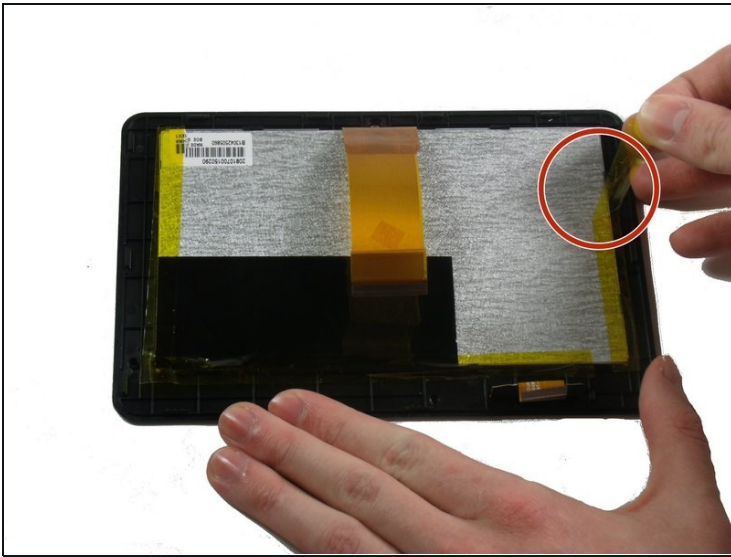

- Remove the yellow tape on the right side. Easiest side to get.
- Remove the black and yellow tape stuck together on the left and bottom sides of the screen.

## Step 6




⚠ Potential for device damage.  
Make sure the screen is  
facedown and level to prevent or  
reduce damage to the display.

⚠ Potential for device damage.  
There is an adhesive on the top  
edge of the display's face. Be  
careful not to damage the display.

- Flex the sides of the tablet until  
the clips holding the display to the  
screen case pop loose.



## Step 7

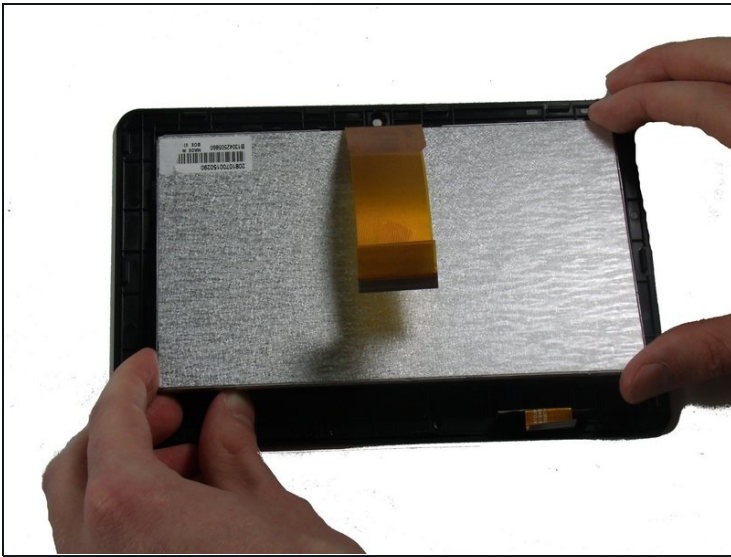

⚠ Be careful not to damage the display or screen case.

- Pull the display from the top side to detach it from the screen case.

---

To reassemble your device, follow these instructions in reverse order.