



# Canon PowerShot A540 Clock Battery Replacement

This guide will help you learn how to replace...

Written By: Cooper Hale



# INTRODUCTION

This guide will help you learn how to replace the internal CR1220 battery on your Canon PowerShot A540 camera. If your camera will not power on, or shows a battery error message and you've replaced the AA batteries, the internal battery may need to be replaced.

---

## ⚙️ PARTS:

[CR 1220 Battery](#) (1)

---

### Step 1 — Clock Battery



- Turn the camera upside down.
- Press the tab to release the battery cover.

## Step 2



- Remove the internal Battery from the slot right above where the AA batteries fit.
- This can be done with your fingers (as pictured) or with tweezers.

## Step 3



- Replace the internal battery.

---

To reassemble your device, follow these instructions in reverse order.

