



# Kodak Easyshare Z981 Top Shutter Button Replacement

This guide will quickly and easily show how to replace the Shutter Button on the Kodak Easyshare Z981

Written By: Matthew Myers





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)



## PARTS:

- [Kodak Easyshare Z981 Replacement Shutter Button](#) (1)

## Step 1 — Top Shutter Button



- Open the battery cover and remove the AA batteries from the camera if any are inserted.

## Step 2



- Remove all screws on the outside of the camera with a [00 Phillips-Head](#) screwdriver
  - Eight (8) **3mm** screws on the lower portion of the camera
    - Four (4) screws on the bottom of the camera
    - Four (4) screws inside the battery cover


## Step 3



- Detach the bottom part of the camera by removing four (4) **3mm** screws
  - Two (2) screws are located in the left side of the device
  - Two (2) screws are located in the right side of the device





## Step 4

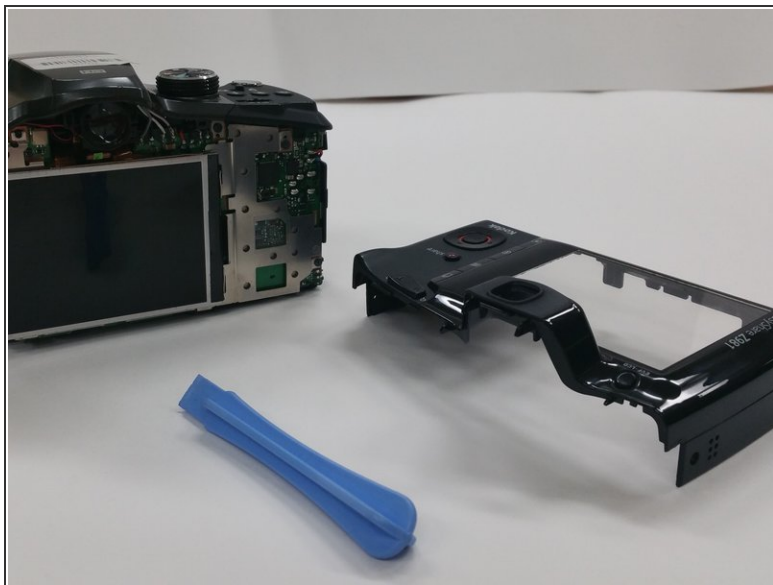

- Use the Plastic Opening Tool to put light pressure and remove the back cover of the camera

⚠ Be gentle when removing the back cover

## Step 5

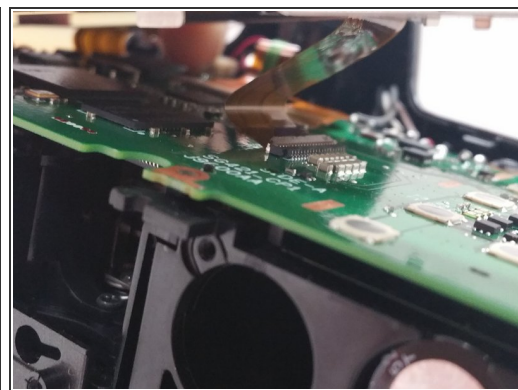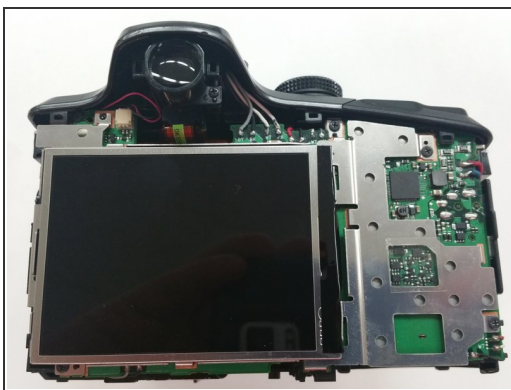


- Unscrew the four (4) **3mm** screws to remove the screen from the circuit board
- Use [Tweezers](#) to delicately detach the ribbon cable
- Carefully remove the screen brace from the circuit board

## Step 6



- Remove the two (2) **3mm** screws from inside flash compartment
- Remove one (1) **3mm** screw from the circuit board

## Step 7

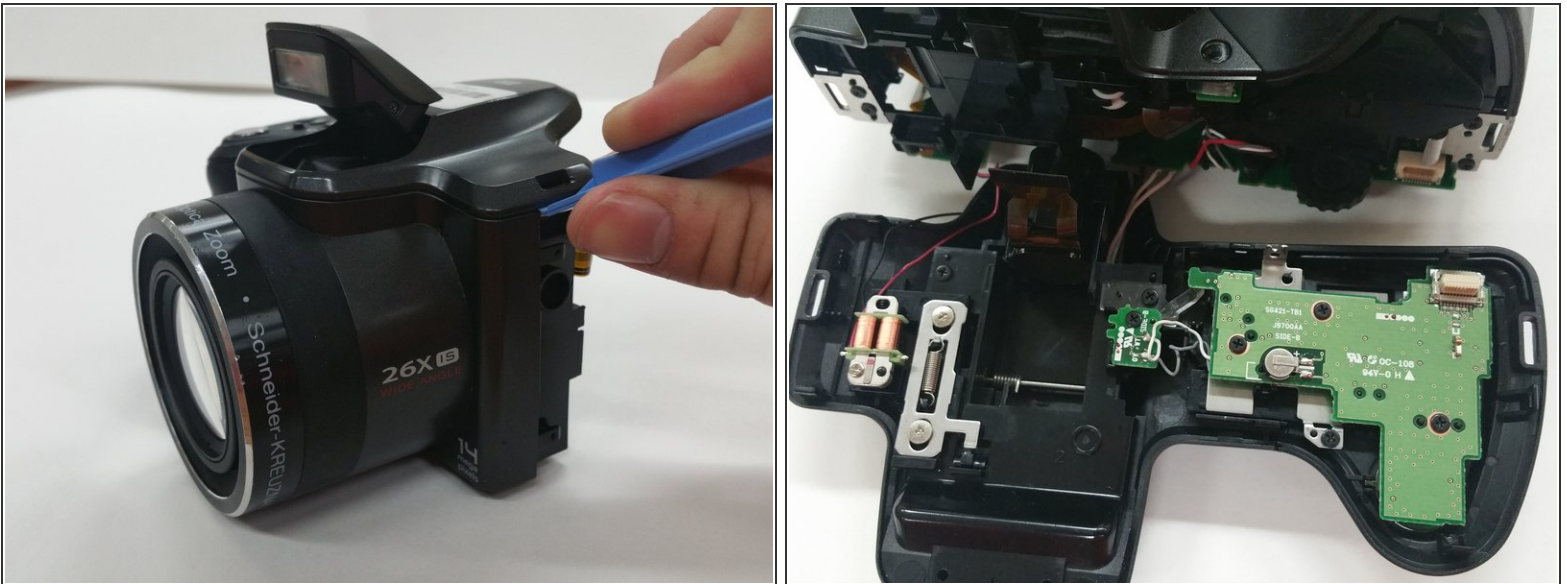

- Use the [Tweezers](#) to detach the ribbon cable connector from the circuit board
- Use the Plastic Opening Tool to gently apply pressure on the top of the camera and remove the upper portion



## Step 8



- Remove the four (4) **3mm** screws from the circuit board directly underneath the shutter button and gently move the circuit board aside
  - Lift up the metal clamp
- ⚠ Use caution when removing the circuit board to avoid tearing the wires connected

## Step 9



- Pull the small brace on top of the shutter button
- Using the [Tweezers](#), gently remove the shutter button

To reassemble your device, follow these instructions in reverse order.