



Sony Cybershot DSC-T5 Sliding Lens Cover Replacement

This guide will explain how to remove/replace the sliding lens cover.


Written By: John Aust



TOOLS:




- [Essential Electronics Toolkit \(1\)](#)
-

Step 1 — Sliding Lens Cover

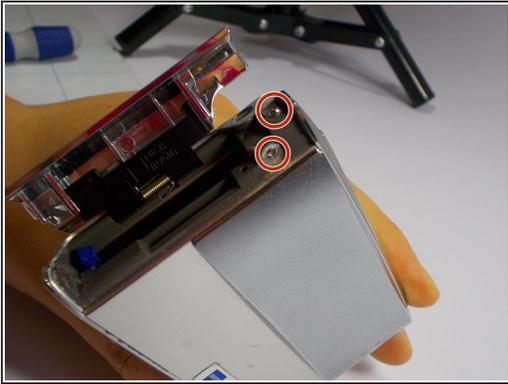



- Remove all screws from the camera.

Step 2

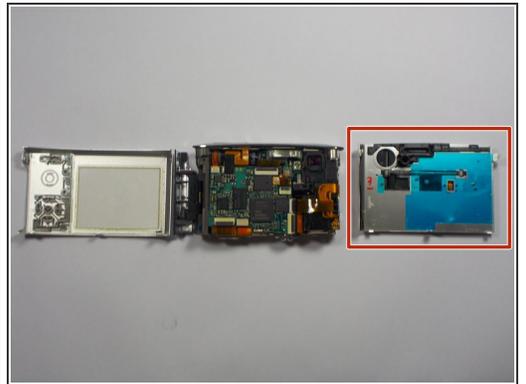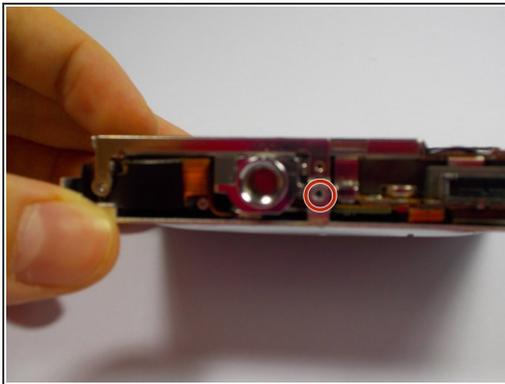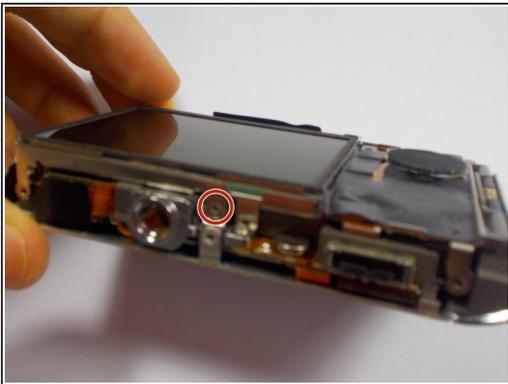



- Remove the screw inside the red circles.
- Remove the front lens cover.
- From left to right: control panel, camera, front lens cover. The front lens cover is what we will continue to work with.

Step 3

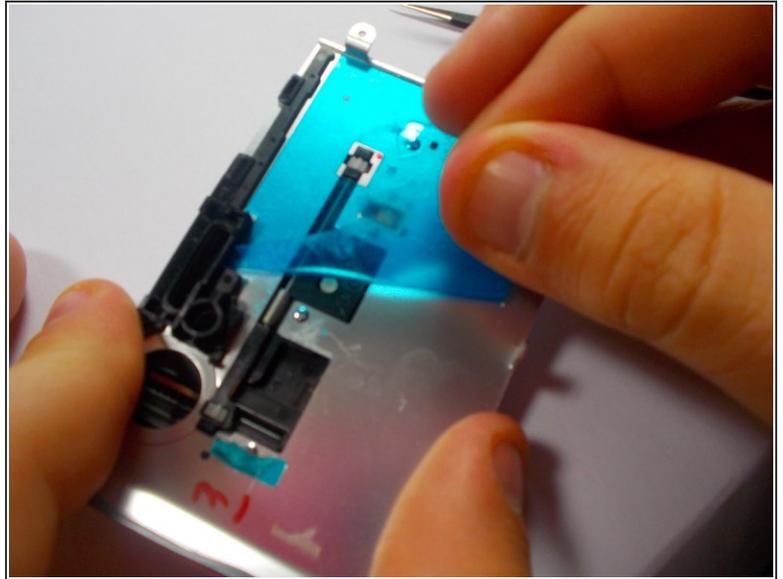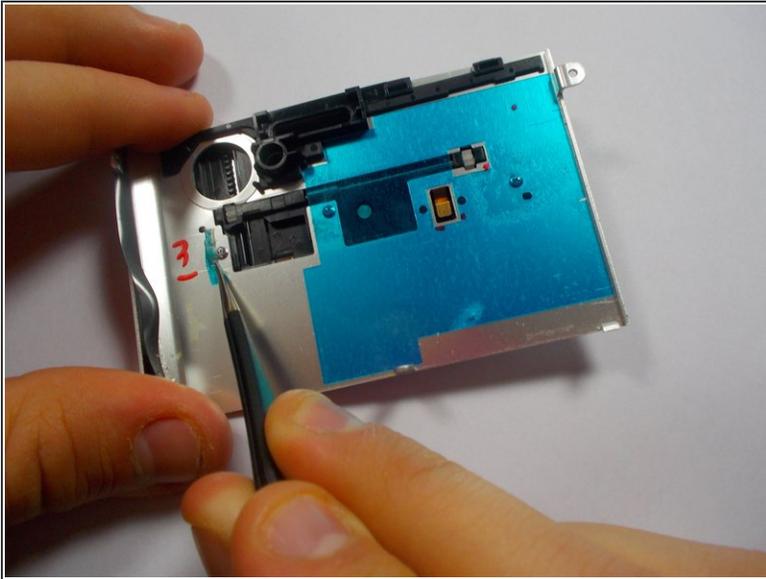

- Remove the blue tape. Tweezers or something similar will be required.

Step 4

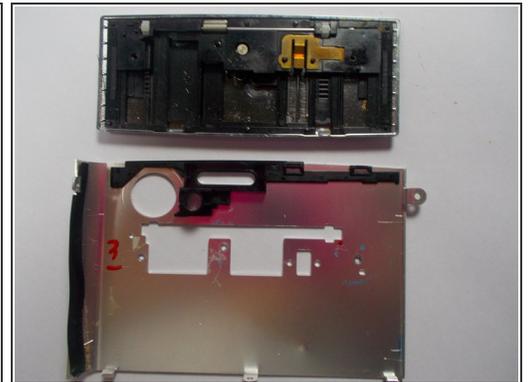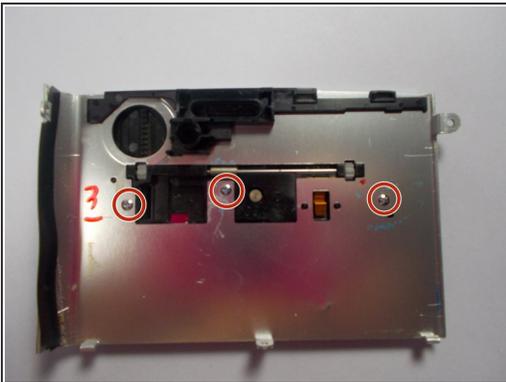

- Remove the screws.
- Remove lens cover from the front panel.

To reassemble your device, follow these instructions in reverse order.