


RCA RCT6272W23 Speaker Replacement

In this guide, you will learn how to replace...

Written By: Stephen Radachy

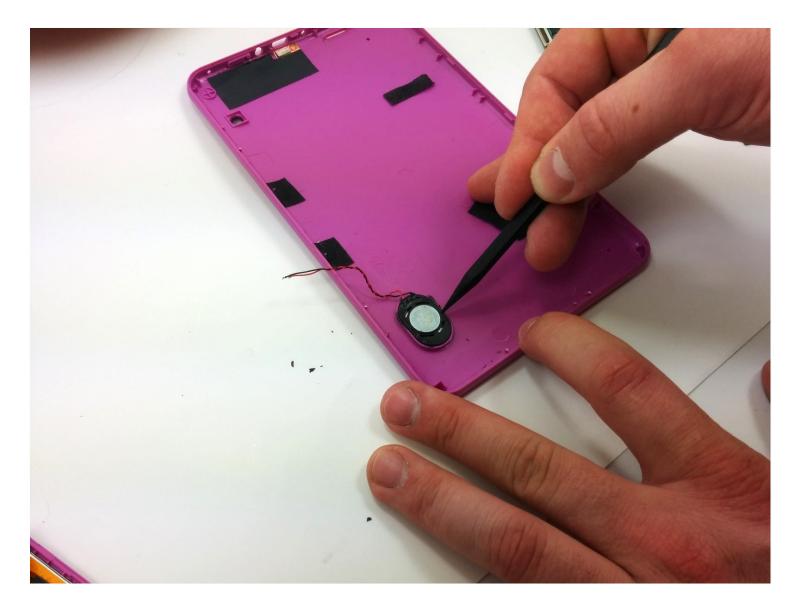

INTRODUCTION

In this guide, you will learn how to replace the speaker on your device.


🖌 TOOLS:

Phillips #00 Screwdriver (1) iFixit Opening Tool (1) Soldering Iron (1) Spudger (1)

Step 1 — Case




• Use a Phillips #00 screwdriver to remove both 4.1 mm screws at the top of the device which hold it together.

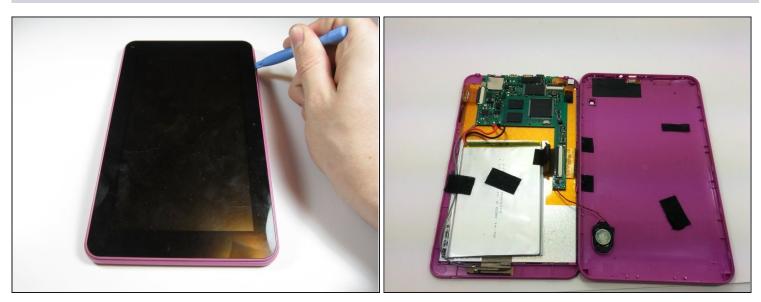

- Press the plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the plastic tabs.
- Gently pull both sides apart.
 A The speaker is connected to the back cover, so be careful when separating.


Step 3 — Speaker

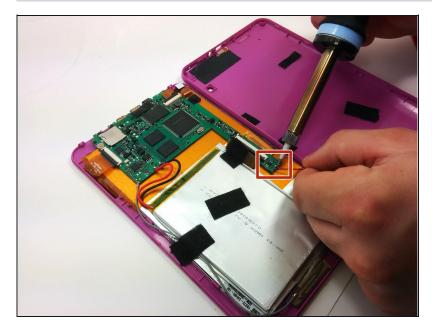

- Remove the soldered wire connections to the speaker.
- Soldering irons can cause burns and severely damage your device. If in doubt, pause and think about it.
- For more information about soldering, check out this <u>guide</u>.

Step 2

Step 4

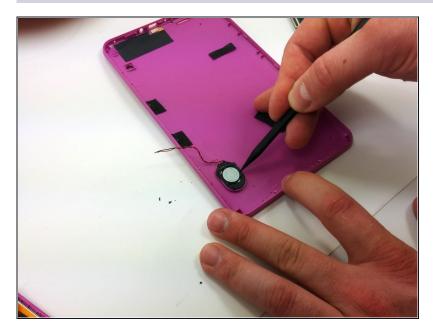

• Pry the speaker gently out of its plastic enclosure using a spudger.

To reassemble your device, follow these instructions in reverse order.