



# Nikon Coolpix S8200 Back Screen Replacement

If the screen/display is cracked. Requires an entire back case

Written By: Nelson Antiposti






## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Screen

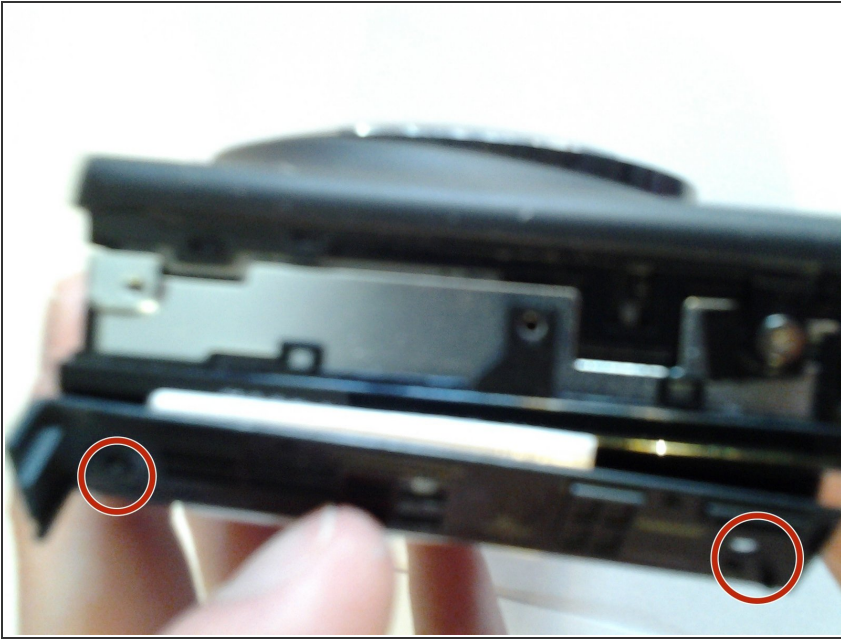

- Remove the screws from the bottom edge of the camera.
- ⓘ Be careful, there are parts that have hidden screws under flippable parts, like this one.

## Step 2

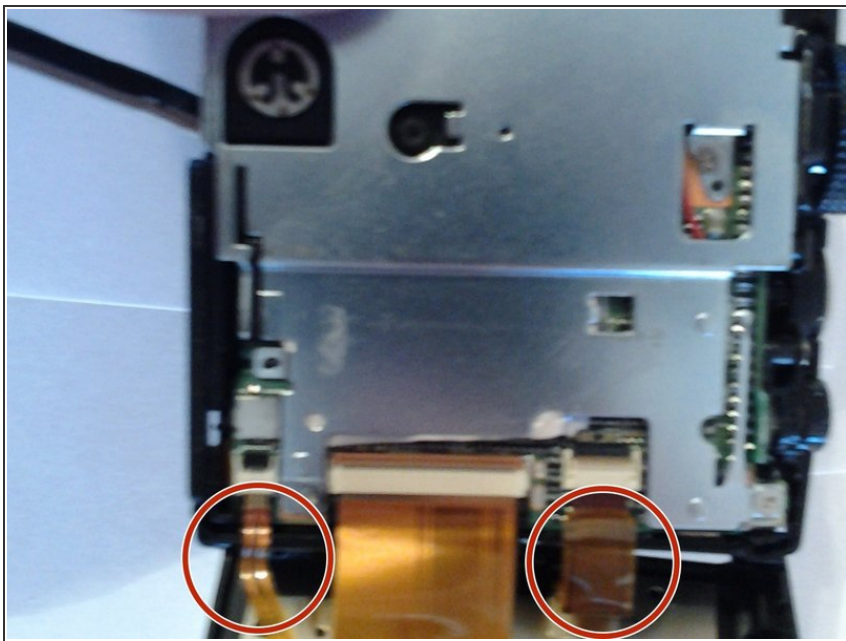 

- Once the back has come off, detach the data strips from the back part of the camera, or from the main part of the camera if the replacement part does have the data strips.

To reassemble your device, follow these instructions in reverse order.