



Rear Wheel Replacement

How to detach the rear wheel from your bike.

Written By: Travis Tonder



INTRODUCTION

We will go through all of the steps you need to preform to remove the rear wheel from your bike. This is used in repairing many parts of the bike so it is very important you know how to do this.

Step 1 — Rear Wheel



- Flip the quick release lever on the wheel.

Step 2



- Squeeze the brake arms together and lift the brake cable from the caliper arms.

Step 3



- Hold the wheel to the ground, and pull the bike frame up and away to remove the wheel from the bike.

To reassemble your device, follow these instructions in reverse order.