



# Nokia Lumia 530 Logic Board Replacement

Nokia Lumia 530 Logic Board Replacement

Written By: ZFix



# INTRODUCTION

How to disassemble Nokia Lumia 530 and remove the Logic board (Main board).

\_\_\_\_\_ **Video tutorial:** \_\_\_\_\_

 
[video: <https://youtu.be/9soHb68hF8g>]



## TOOLS:



- [T5 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [Tweezers](#) (1)

## Step 1 — Loudspeaker and Earpiece

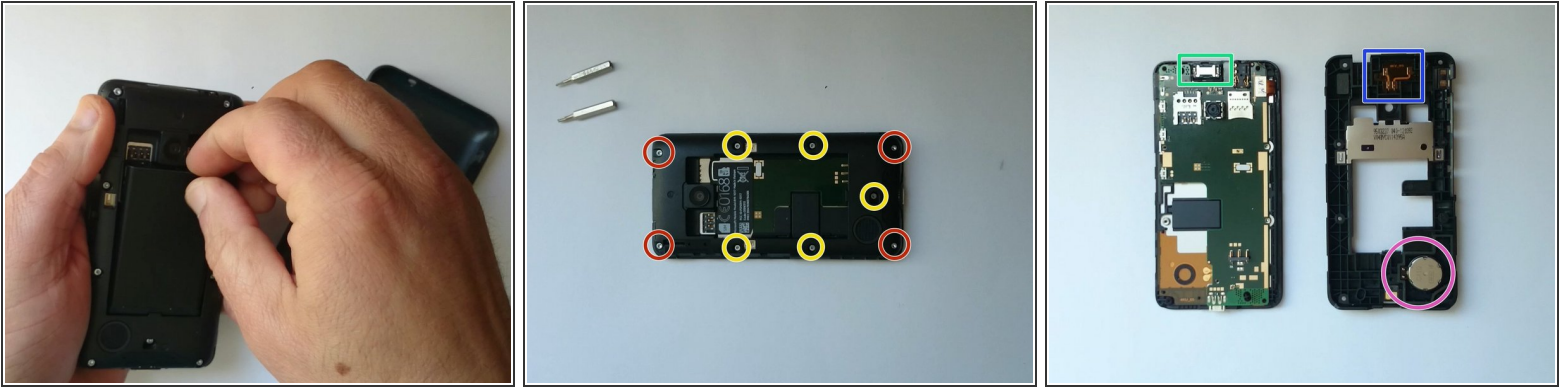

- Turn off the phone.
- Remove the battery and any installed SIM and memory cards. There are two tapes screws:
  - 4x Torx T6
  - 5x Torx T5
- Remove the middle bezel.
- Earpiece
- Earpiece Flex Cable
- Loudspeaker / Ringer

## Step 2 — Logic Board

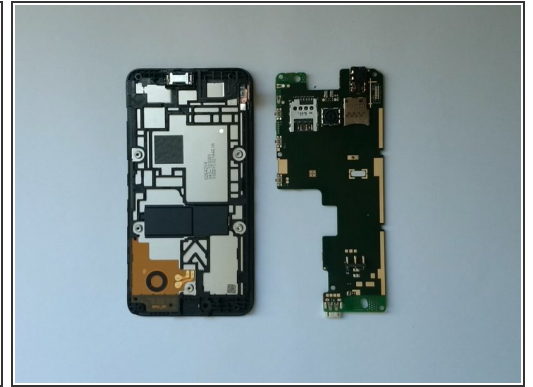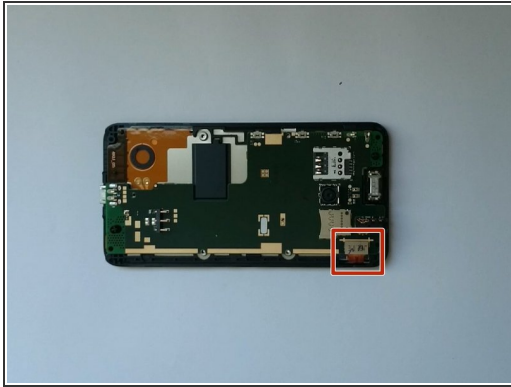  

- Disconnect the touch screen & display flex cable.
- Remove the main board.

To reassemble your device, follow these instructions in reverse order.