



# Nikon COOLPIX S3600 Battery Cover Replacement

Use this guide to remove the battery cover from the Nikon COOLPIX S3600.

Written By: Kim Maxson



---

# INTRODUCTION

This guide will detail the steps necessary to remove the battery cover from the camera.



## TOOLS:


- [Metal Spudger](#) (1)
-

## Step 1 — Battery Cover



- Locate the battery cover on the right side of the bottom of the camera.
- To open the cover, gently slide it in the direction indicated by the arrow.

## Step 2

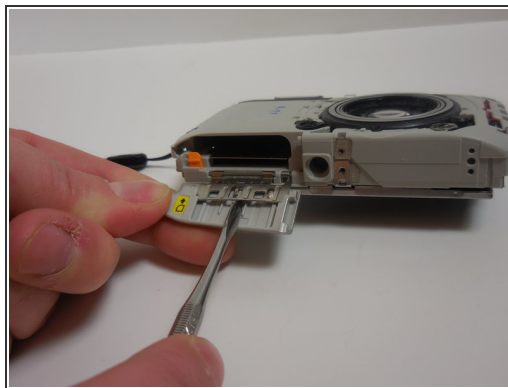

- Once the battery cover door is open, insert the pointed end of a spudger underneath the metal door hinge.
- Gently twist the spudger; the battery door cover should pop off.
- Completely remove the cover from the hinge.

To reattach the battery cover door, align the metal hinge with the plastic cover and press the plastic cover downward until it snaps into place.