



Propel Gyro-X Bottom Propellor Blades Replacement

Replace the bottom propellor blades on your Propel Gyro-X if your old ones have become damaged.

Written By: Sarah Atmadja



INTRODUCTION

Replacing the bottom propellor blades is the most common and easiest repair you will make on your helicopter. Propellors are often damaged when the helicopter crashes and replacing them is as easy as unscrewing them and screwing on new ones. Be sure to keep track of the tiny screws to avoid losing them.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Bottom Propellor Blades



- Remove the two 5.0 mm Phillips #00 screws from the rotors.
- The blades will fall off when the screws have been removed.

To reassemble your device, follow these instructions in reverse order.