



Propel Gyro-X Top Propellor Blades Replacement

In this guide you will learn how to remove and...

Written By: Sarah Atmadja



INTRODUCTION

In this guide you will learn how to remove and replace the top two propellor blades of the Gyro-X. This is a common procedure, because crashing your Gyro-X will often result in propellor damage. To remove the propellers you will only need to remove 4 small screws. Be careful not to lose these after removal.

TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

Step 1 — Top Propellor Blades



⚠ Stabilizing links are easy to break. Be gentle when prying them off.


- Place the [tweezers](#) on the sides of the links and pull straight away from the top point of connection.

Step 2



- Remove the two 6.0 mm Phillips #00 screws from the rotors.

Step 3

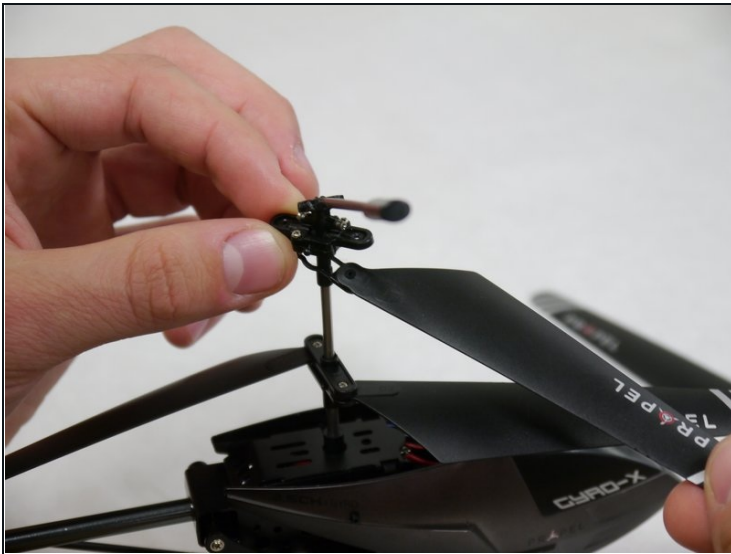

- Pull the rotors away from the mounting brackets.

To reassemble your device, follow these instructions in reverse order.