



Canon Vixia HF S10 Camcorder Strap Replacement

These simple steps will help you replace the...

Written By: Olivia



INTRODUCTION

These simple steps will help you replace the strap handle of your Canon Vixia HF S10 camcorder.

TOOLS:

[Phillips #00 Screwdriver](#) (1)

[iFixit Opening Tool](#) (1)

[Magnetic Project Mat](#) (1)

Step 1 — Strap Handle




- Flip the camcorder upside down and remove the four 2.5 mm Phillips #00 screws from the bottom of the camera and two 2.5 mm screws from the top of the camera.
- Unhook the strap.

Step 2



- Using a plastic opening tool, outline the edges.
- Remove the plastic casing.
- Remove the single 2.5 mm Phillips #00 screw securing the silver plate.

Step 3

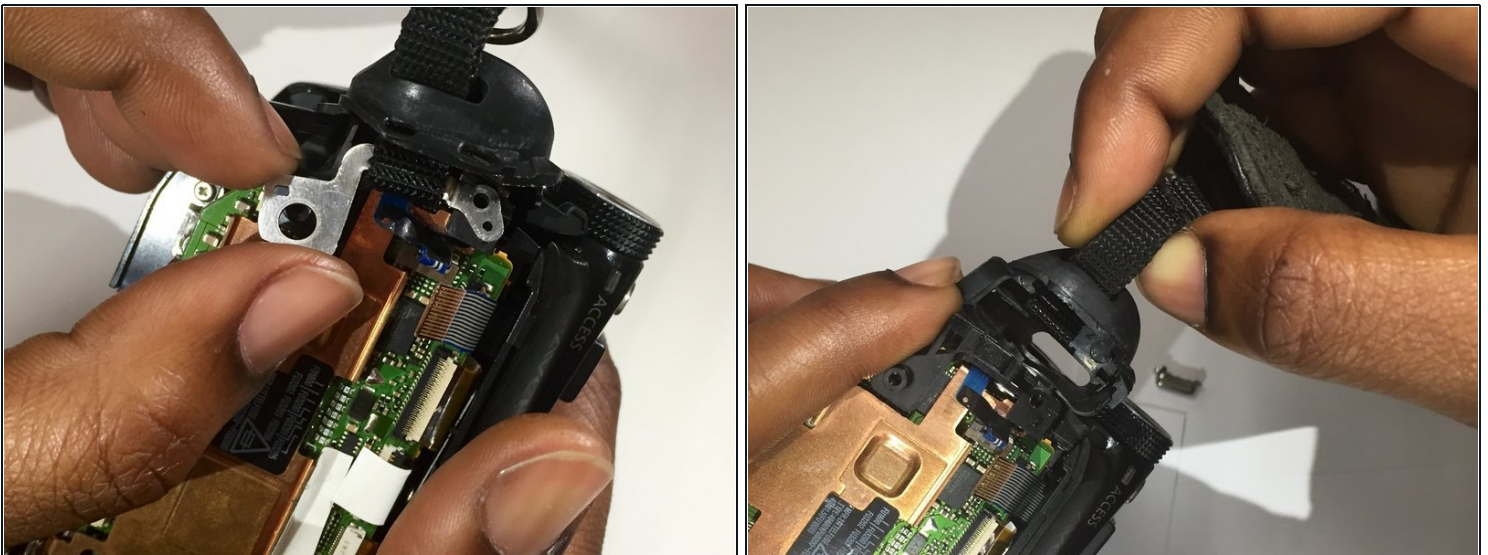

- Using your fingers, remove the silver plate.
- Remove the strap to have it replaced.

To reassemble your device, follow these instructions in reverse order.