




# NuVision TM1088 Motherboard Replacement

Replacing a faulty motherboard. (Requires Soldering)

Written By: Nathaniel Nasman

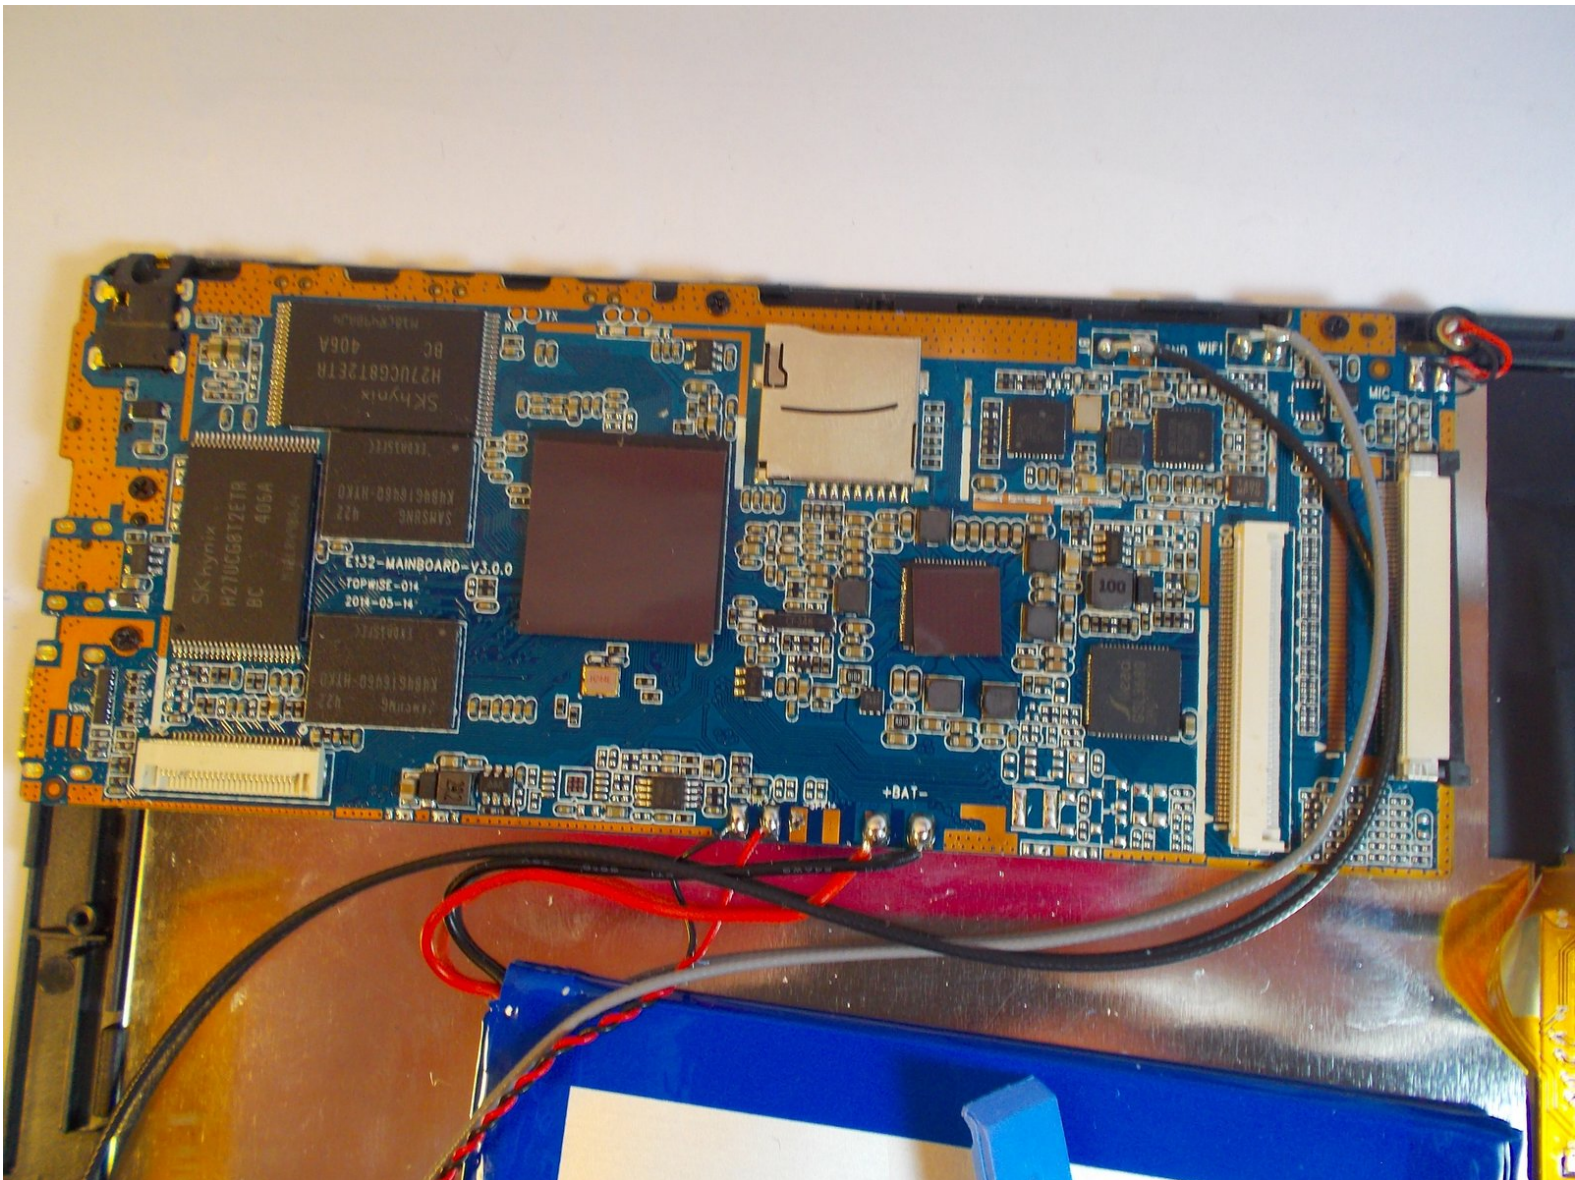

---

## INTRODUCTION

This guide will show you how to replace a motherboard. Replacing the motherboard will require frequent soldering.

---

### TOOLS:


- [Soldering Iron](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Cover



- Place the plastic opening tool between the front and rear cover and pry up on each corner of the cover.


## Step 2 — Motherboard

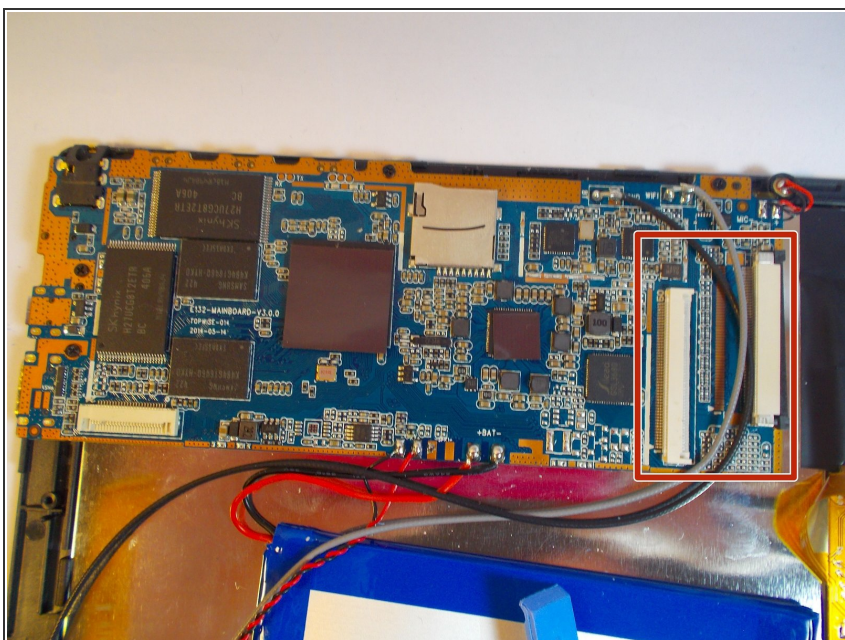

- Remove the two plugs for the screen by pulling up and away from the motherboard.




### Step 3

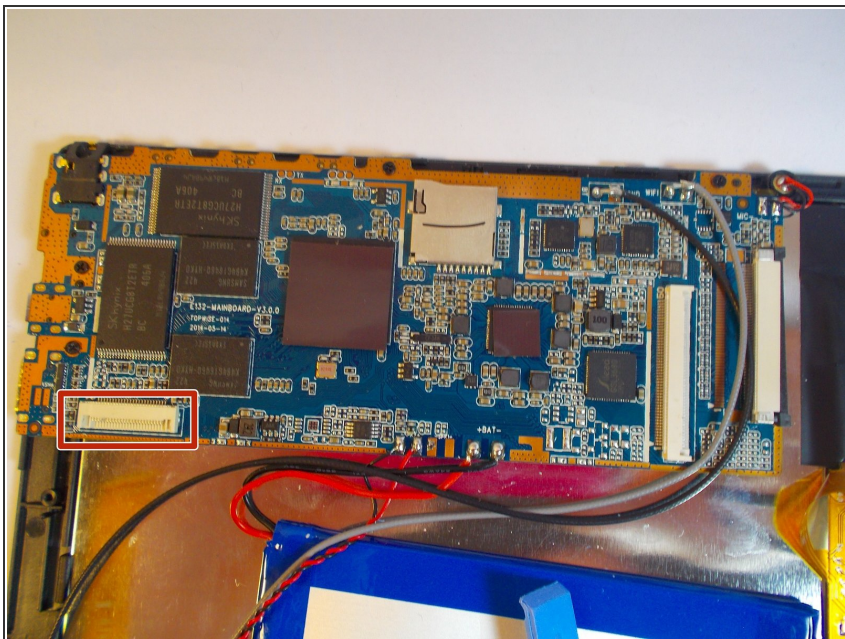


- Remove the plug for the cameras by pulling the plug up and away from the motherboard.

### Step 4

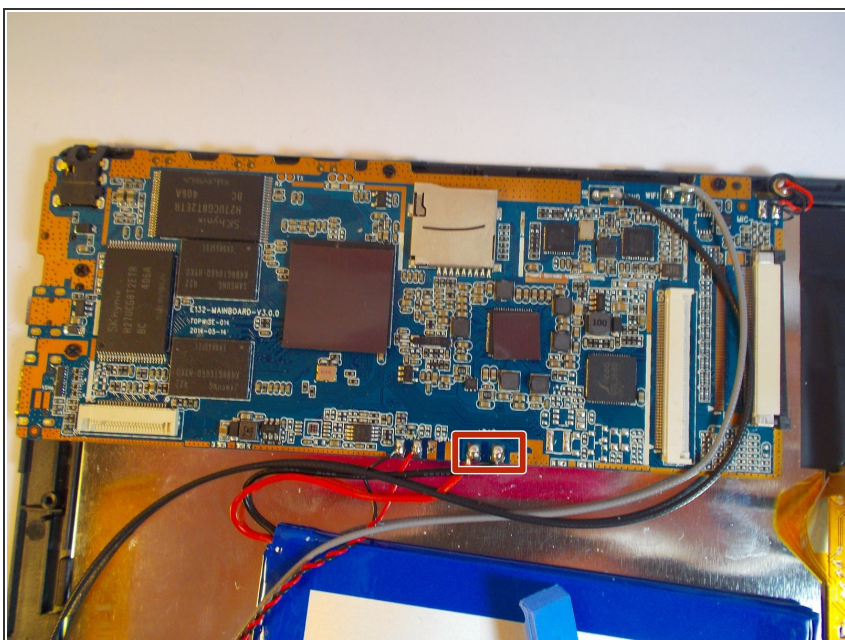


- Melt solder and remove red and black wires leading to the battery.

## Step 5

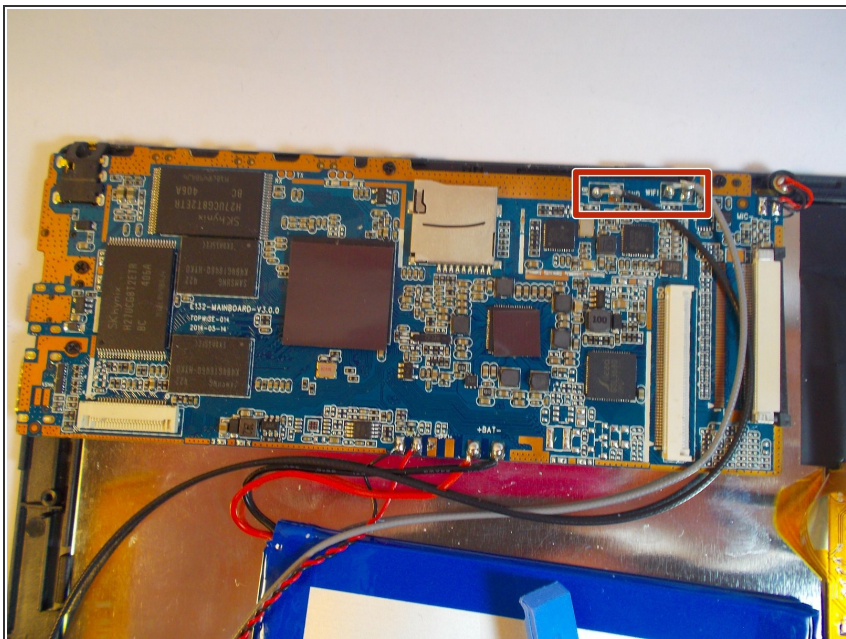

- Melt the solder on the black and gray wires and remove wires from motherboard.


## Step 6

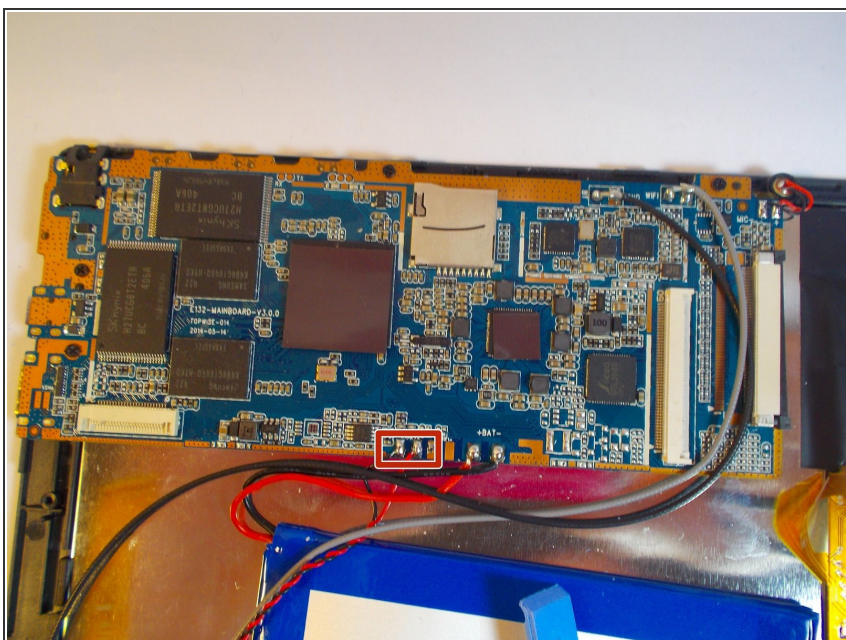

- Melt the solder and remove the red and black wires leading to the speaker.




## Step 7

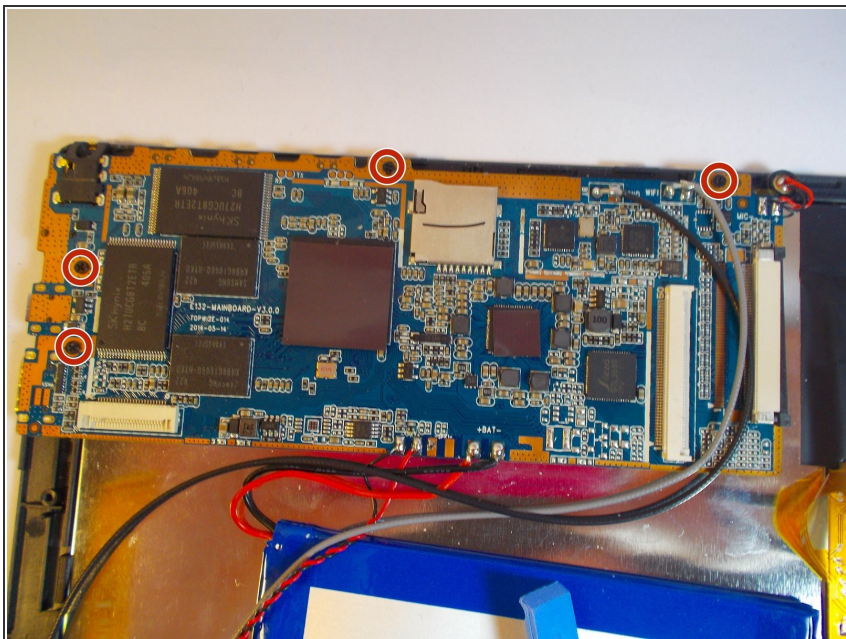

- Remove the four 4 mm Phillips head screws holding in the motherboard.

## Step 8

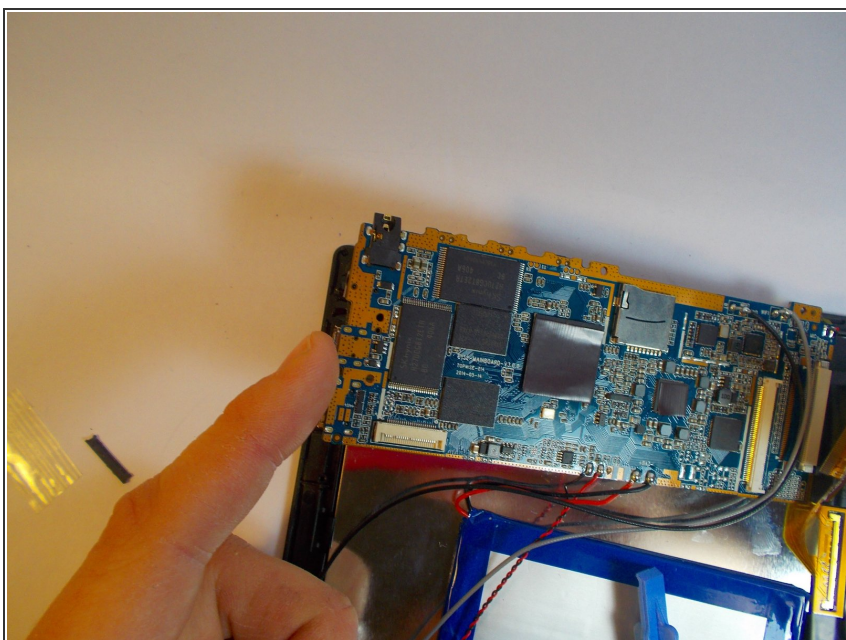

- Lift the motherboard away from the front cover assembly.

To reassemble your device, follow these instructions in reverse order.