




# Polaroid S10 Speaker Replacement

This guide will show how to replace any bad speakers in the Polaroid S10.

Written By: James

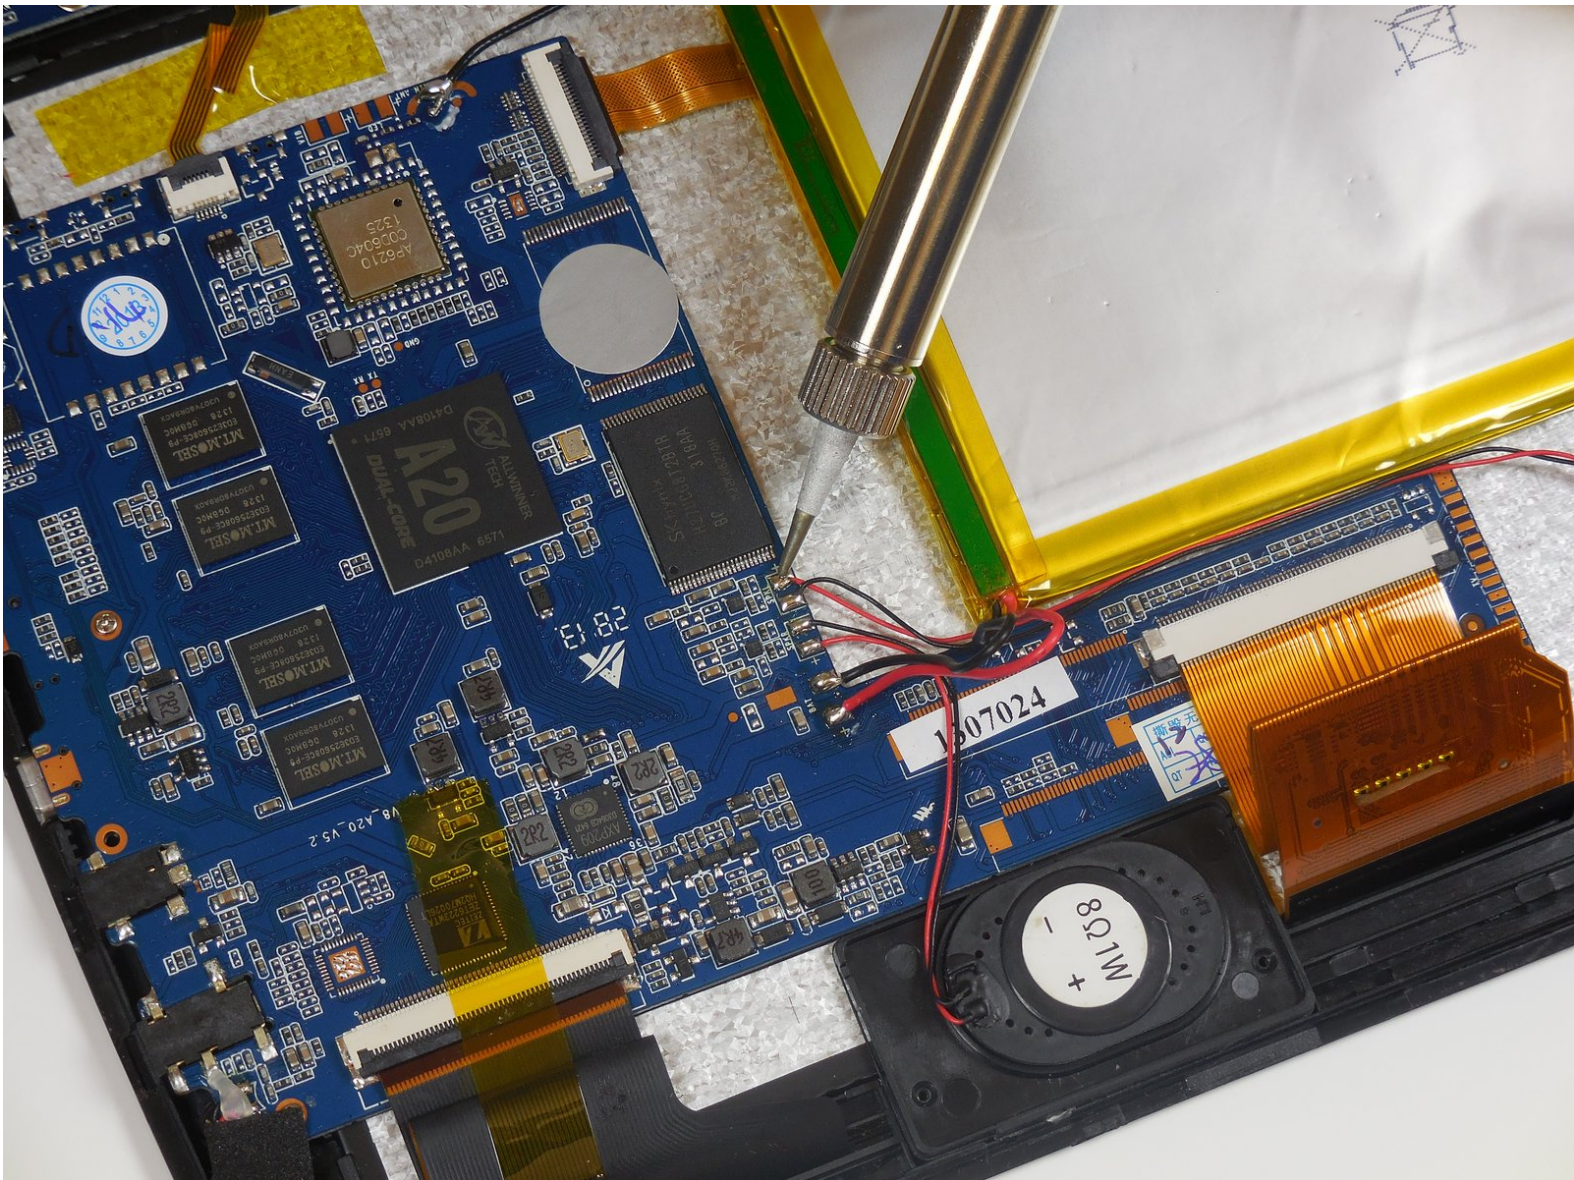

## INTRODUCTION


People like to play their music and sometimes they play it too loud and it blows out their speakers. This will show you how to replace them.

---

### TOOLS:

- [Soldering Iron](#) (1)
  - [64 Bit Driver Kit](#) (1)
  - [Spudger](#) (1)
  - [Metal Spudger Set](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Heavy-Duty Spudger](#) (1)
-

## Step 1 — Removing the backcover

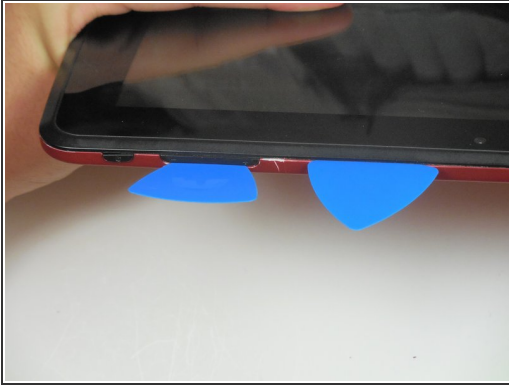

- Place an opening pick between the volume button and the back cover.
- ⓘ More than one pick may be needed, but avoid placing more than two picks in the same space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully remove the back cover using the metal spudger.
- ⓘ It is normal to hear a snapping noise due to the plastic tabs on the back cover.





## Step 2 — Speaker Assembly



- Use a heavy-duty nylon spudger to remove the tape.
- Unscrew the four 5 mm screws with the J000 screwdriver that connects the speakers.

## Step 3 — Desoldering the Speakers

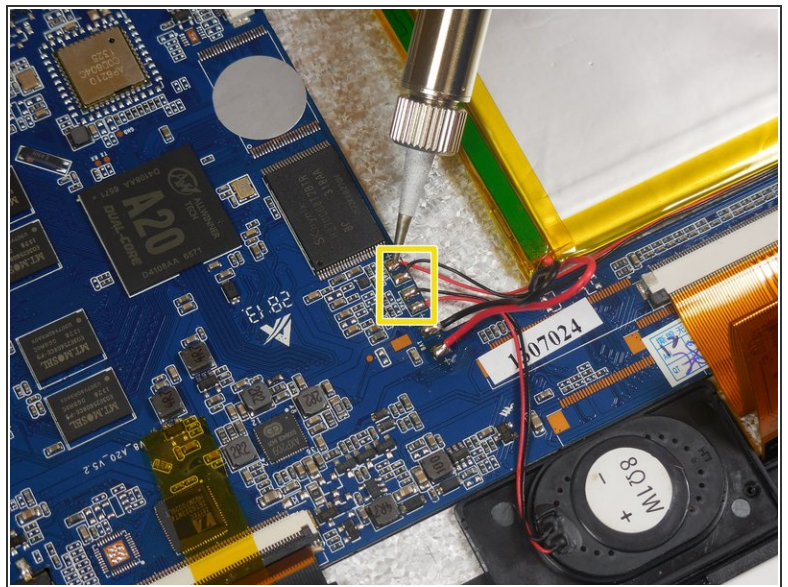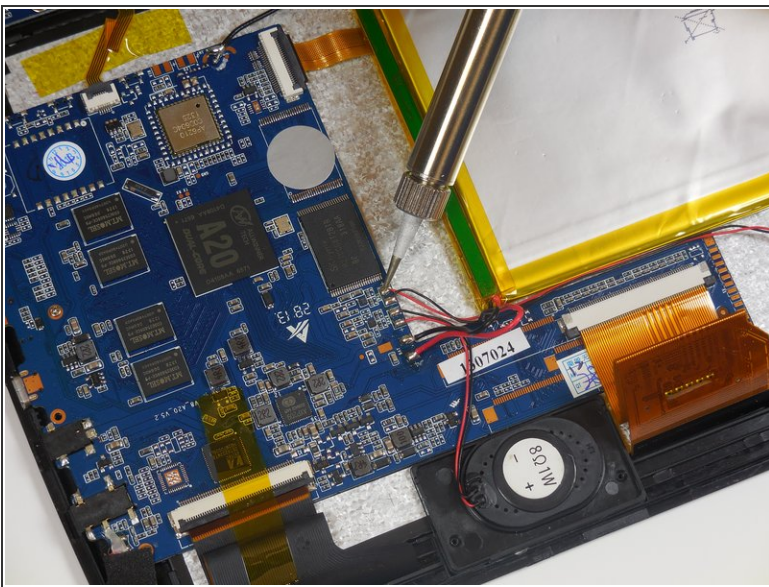

- Carefully desolder the 4 connections of the speakers.
- ⚠ Do not touch the soldering iron to the motherboard or LCD screen.

To reassemble your device, follow these instructions in reverse order.