



Sony Cyber-shot DSC-HX1 Button Assembly Replacement

This guide will assist you in replacing the zoom and photo button on the Sony Cyber-shot DSC-HX1.

Written By: Brianna Greenlaw



INTRODUCTION

Removal and replacement of these buttons requires some previous disassembly and removal of the motherboard.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery




- ⚠ Make sure the surface you place the screen on is clean of debris and dust. Otherwise you risk scratching your screen.
- Place the camera with the bottom facing you and the lens facing up.

Step 2



- Push down and away from the camera to the left on the indicated indentation in the battery cover. The compartment should slide open as shown.

Step 3

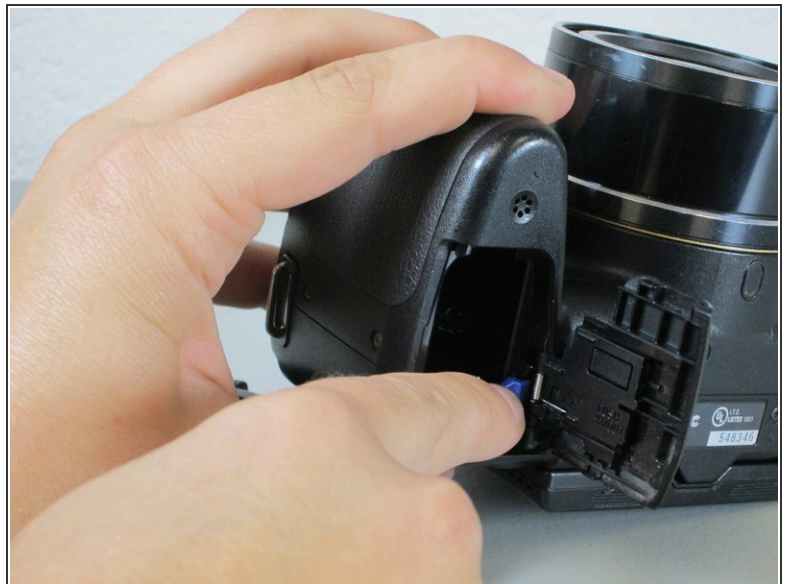


- Push the blue tab towards the camera body to the right, while simultaneously pulling out the battery.
- ⓘ The battery is not shown here. However, normally the battery would be in the displayed compartment.

Step 4 — Button Assembly



- On the top of the inside the battery compartment, remove the #00 6.0 mm Phillips screw.

Step 5

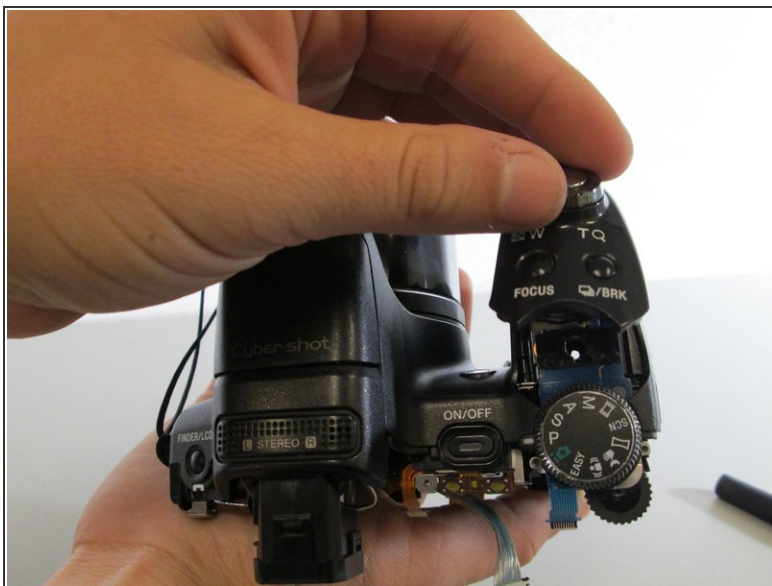

- Lift the button housing from its position on top of the camera.

To reassemble your device, follow these instructions in reverse order.