




Lenovo ThinkPad T400s Keyboard Replacement

This guide will show you how to replace the...

Written By: Morgan Montalvo

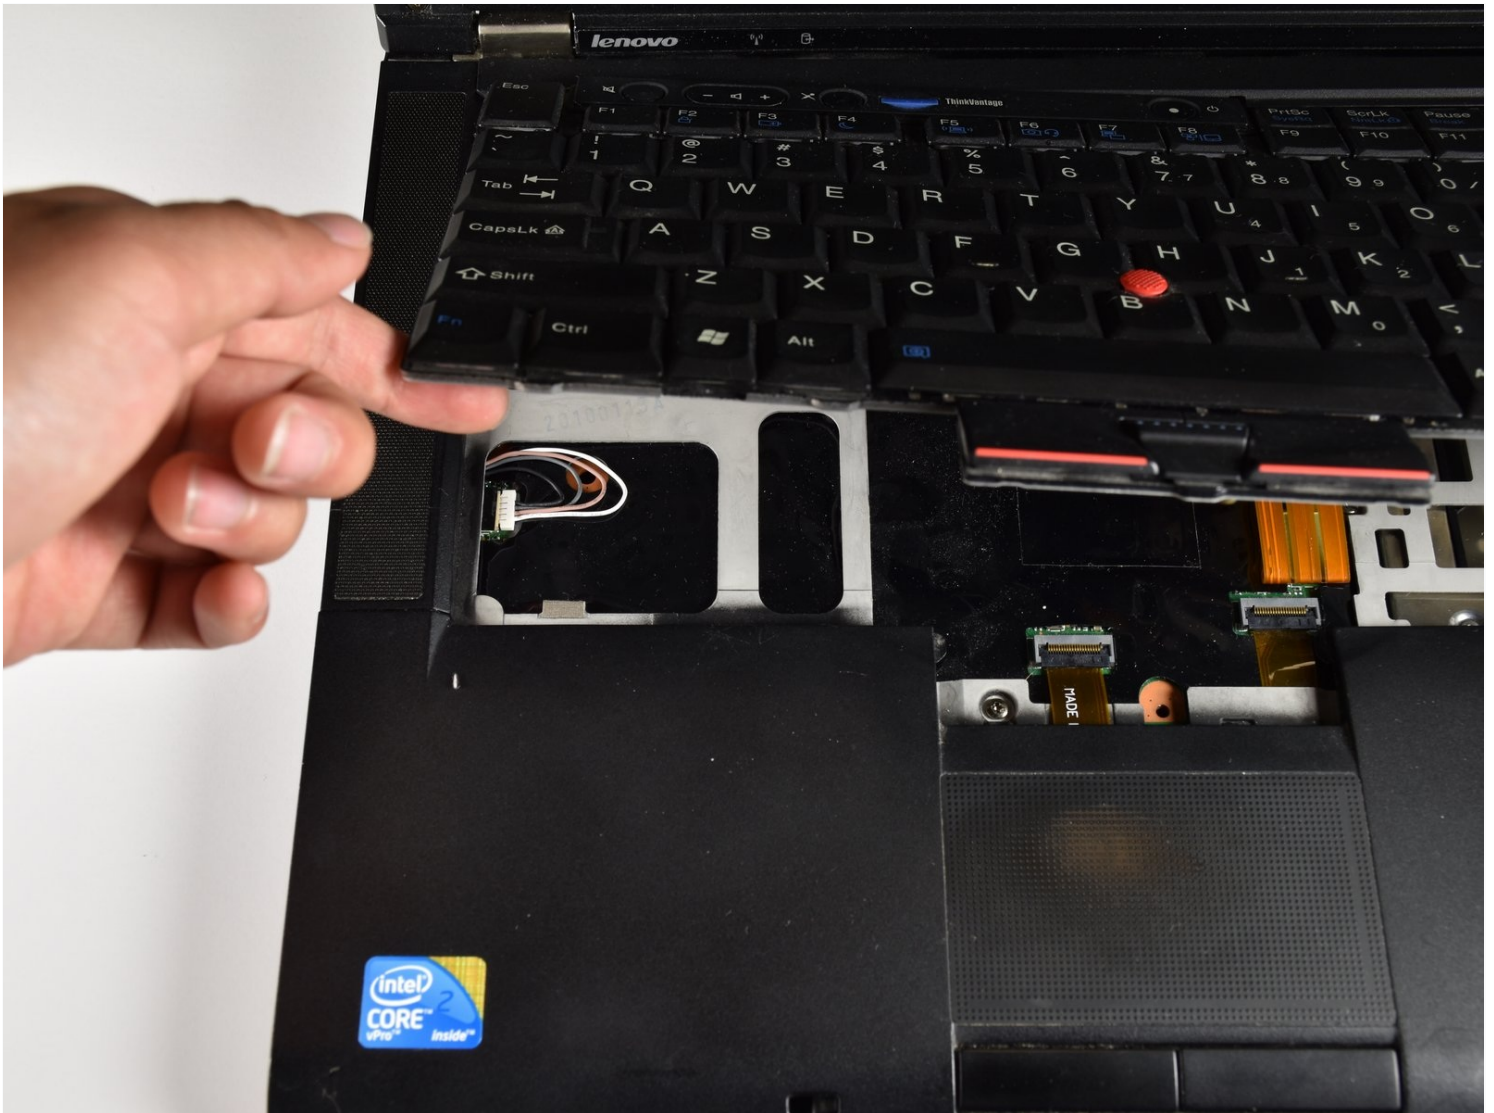

INTRODUCTION

This guide will show you how to replace the keyboard.

TOOLS:

Phillips #0 Screwdriver (1)

Metal Spudger (1)

Standard

iFixit Opening Tool (1)

Small

PARTS:

Lenovo Keyboard - 45N2211 (1)

Lenovo Keyboard - 45N2171 (1)

Step 1 — Keyboard




- Remove the Phillips #0-6mm screw.
- Lift up the back cover to the RAM cards.

Step 2



- Pull the lock for the battery to the left to unlock.
- While holding the tab in the unlocked position, remove the battery.

Step 3

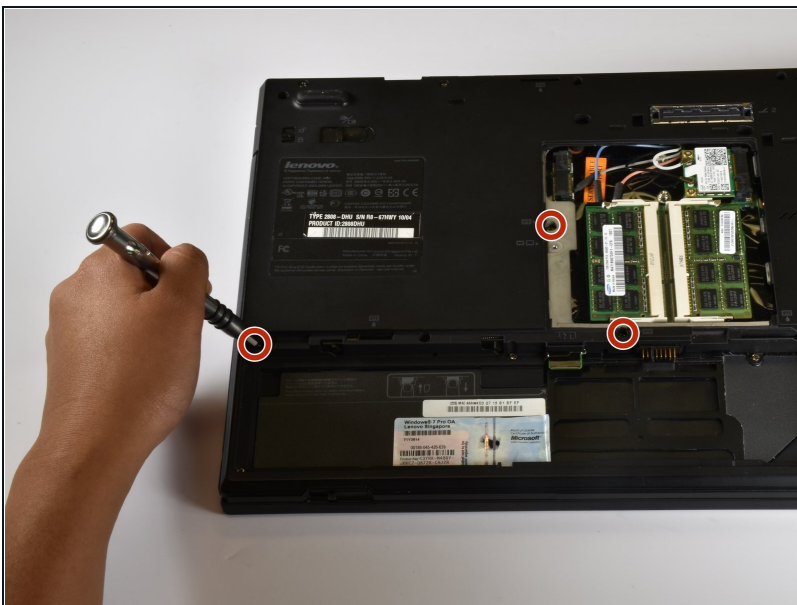




- Remove the three Phillips #0-6mm screws on the back panel.
- ⓘ These screws are marked with a keyboard symbol next to them.

Step 4



- Turn the computer over and open the lid.
- Wedge the small metal spudger between the palm rest and the keyboard.

Step 5

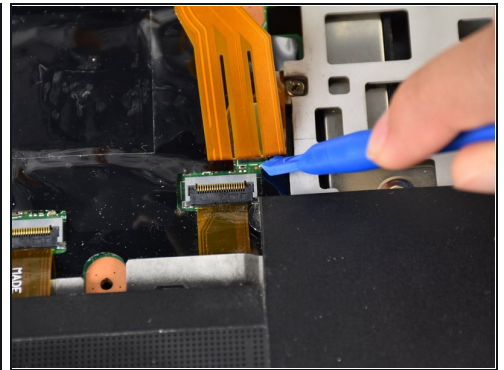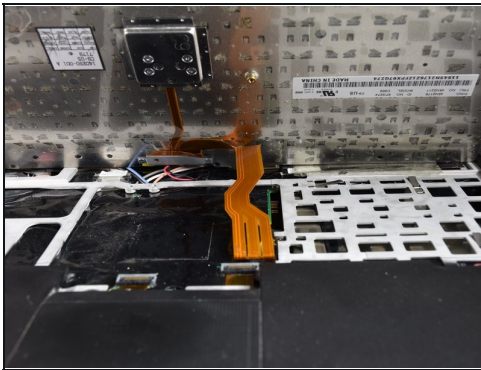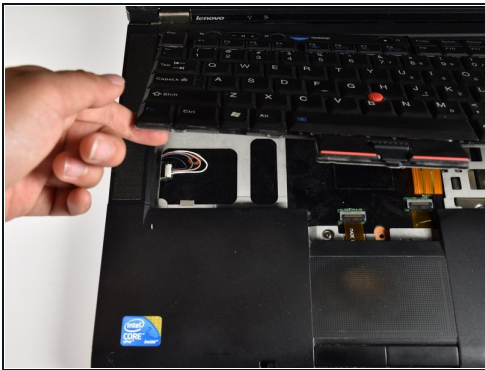

- Lift up the keyboard, but be careful not to completely remove.

⚠ Don't lift the keyboard too quickly, there is a connector cable you must disconnect first.

- Wedge the small plastic opening tool underneath copper band and tilt back.
- Remove keyboard to replace.

To reassemble your device, follow these instructions in reverse order.