




# SKYTEX SP1020 Speakers Replacement

Replace the two speakers.

Written By: Anthony Vitali

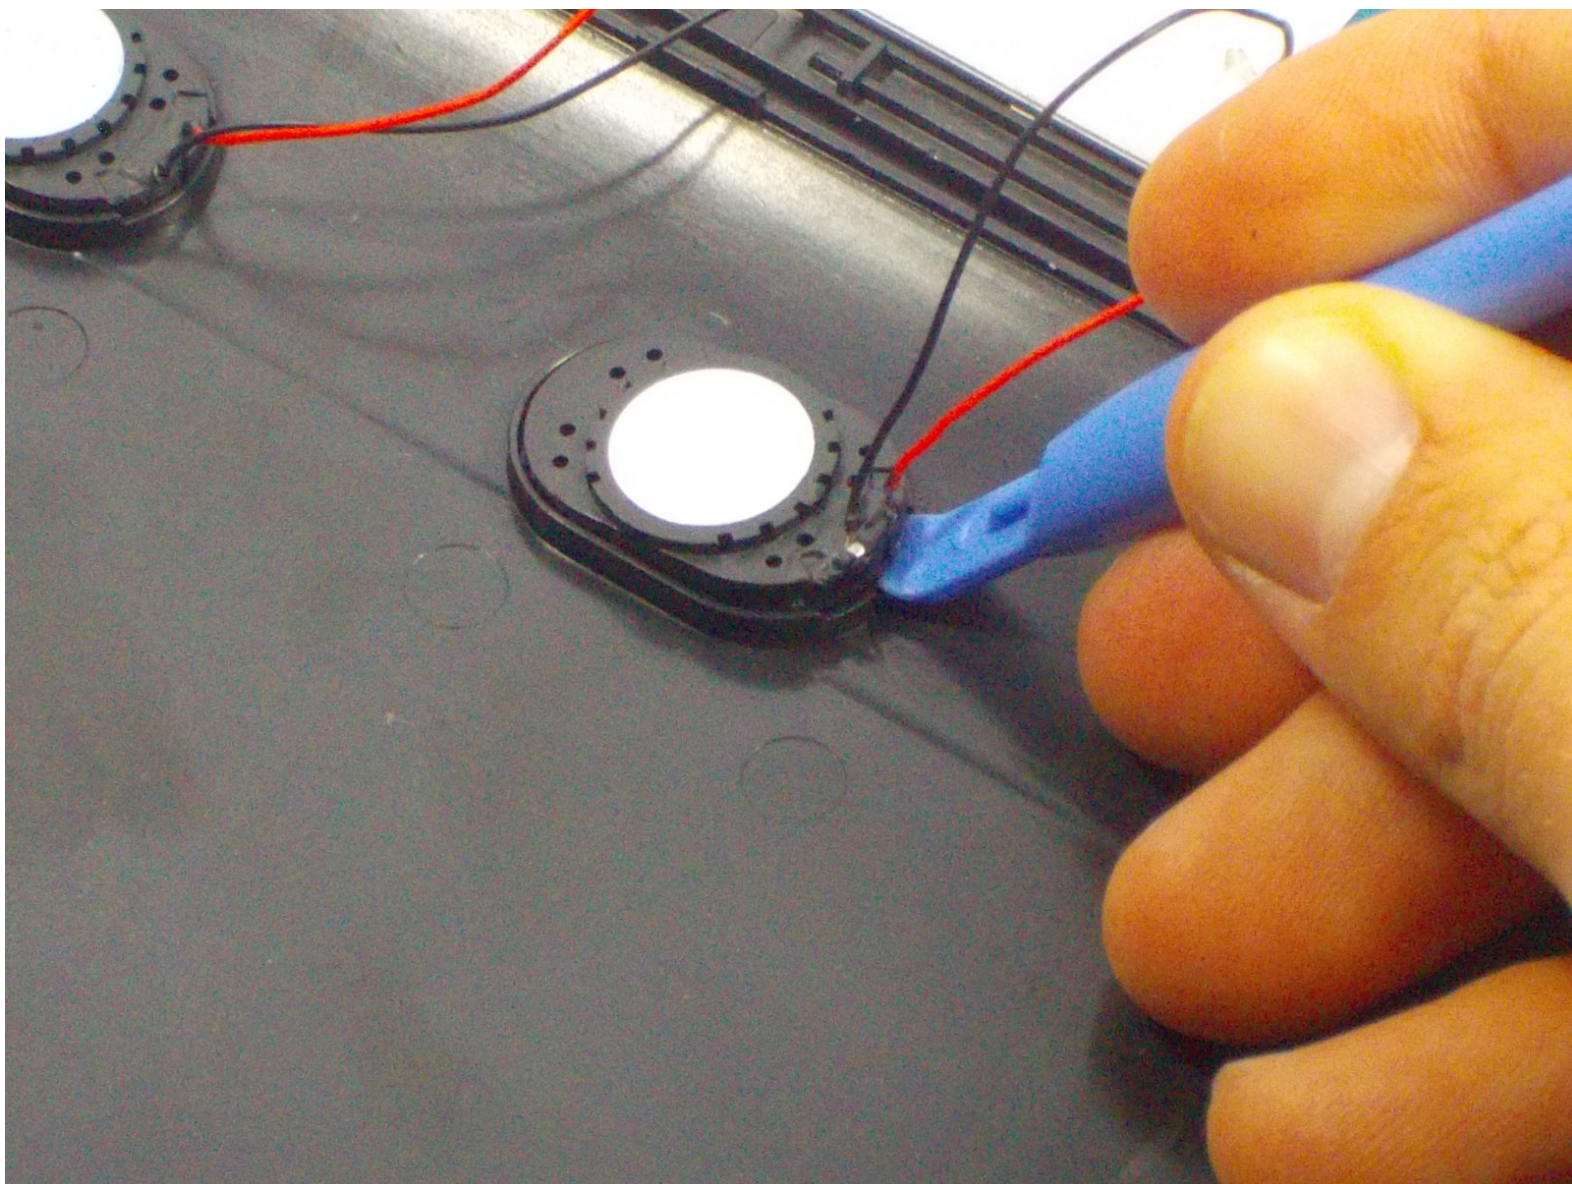

---

## INTRODUCTION

Use this guide to replace the two speakers on your Skytex SP1020.



### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Rear Case



- Prior to any repairs make sure that you are familiar with the device as well as the location of its buttons and ports.
- ⓘ Turn off device prior to continuing to further steps.

## Step 2

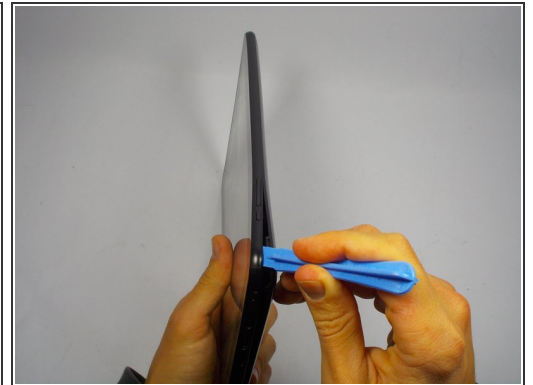


- ⓘ Set the tablet back panel facing down, with the SKYTEX logo facing you. You will find that this step will start from the right side of the device.
- Insert the plastic opening tool between the bottom seam of the back panel and the micro SD port. The tool's edge should point toward the rear panel to prevent any scratching or damage.
- Follow up with the plastic opening tool, releasing the clips as you go all the way around the device.

This document was generated on 2020-11-28 04:27:34 AM (MST).




## Step 3

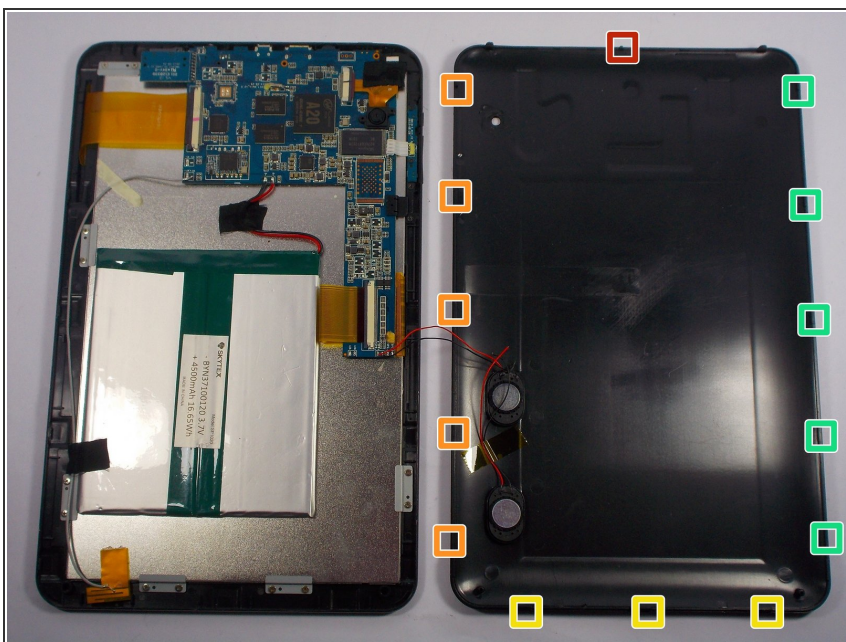


- The clips will be released in the order specified as the spudger tool is moved along the seam around the device.

## Step 4

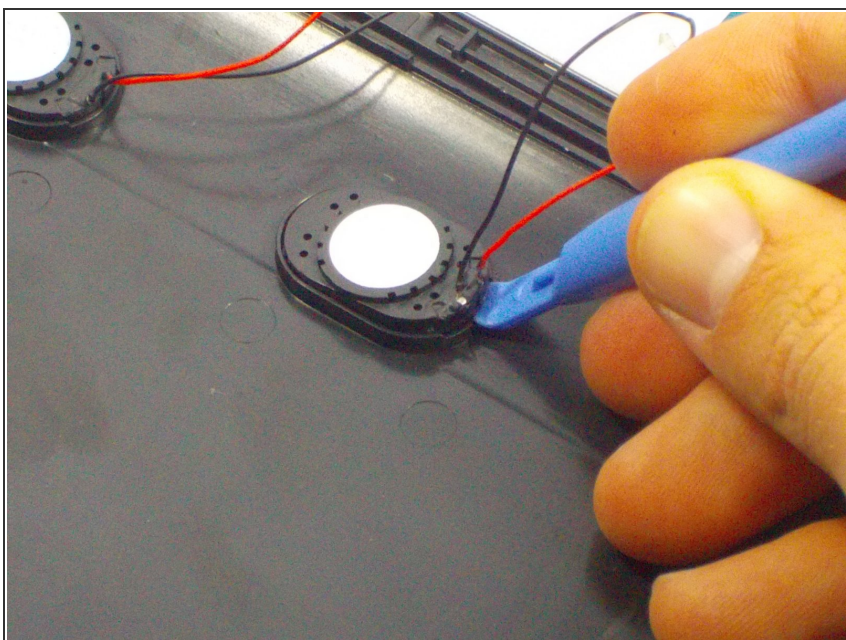



- Use a plastic opening tool to pry the speakers out of the rear case.
- The rear case will now be free from the rest of the device.

## Step 5 — Speakers

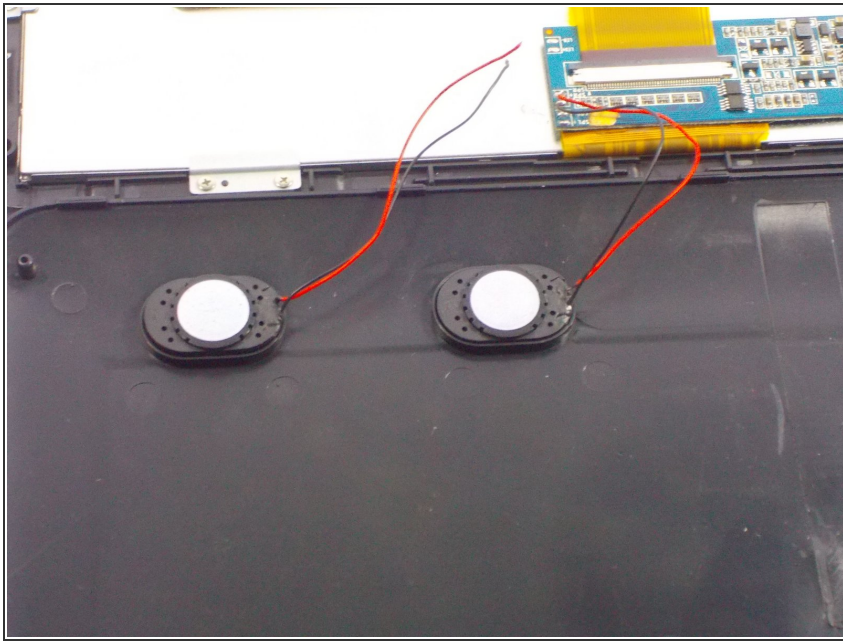

- locate the speakers


## Step 6

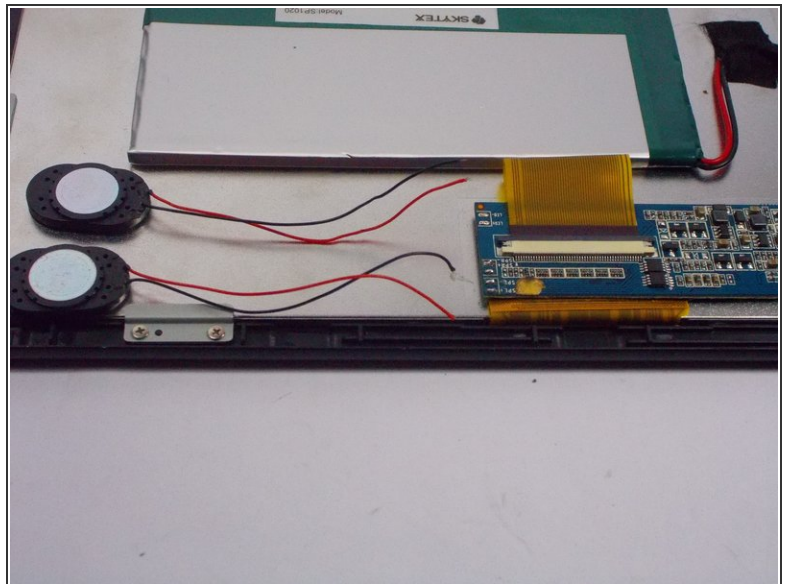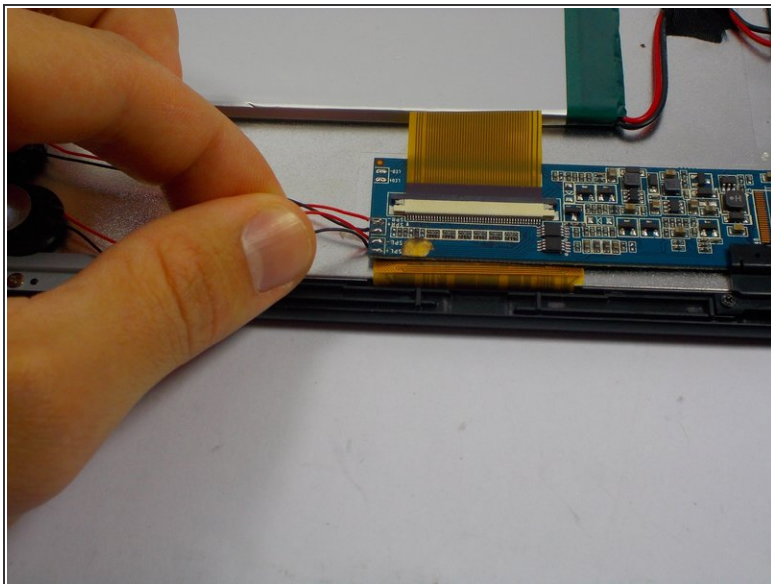

- Use a soldering iron and desoldering braid to desolder the two sets of red and black wires.



## Step 7

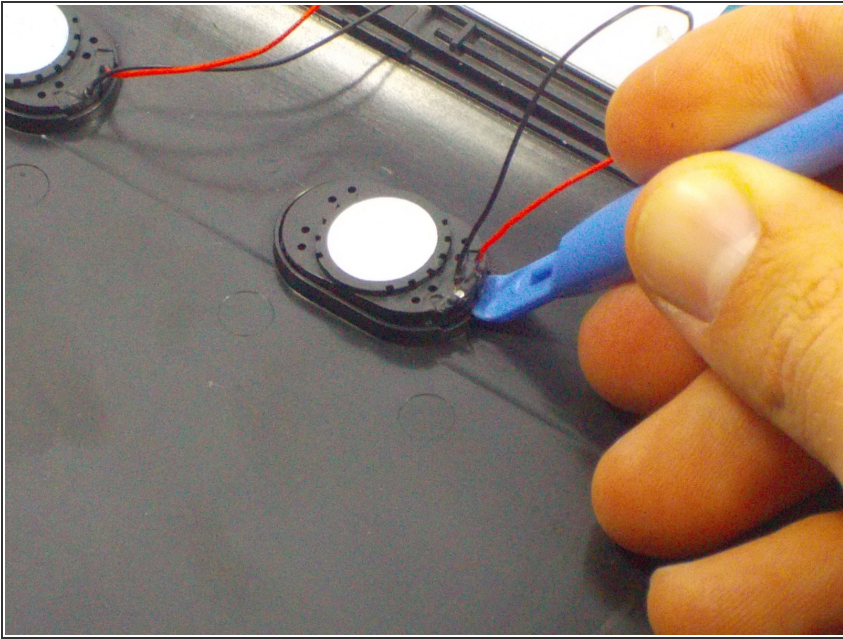

- Use a plastic opening tool to pry the speakers out of the rear case.

To reassemble your device, follow these instructions in reverse order.