



# Visual Land Prestige 10 Back Case Replacement

Written By: Connor Reese



## TOOLS:

iFixit Opening Tool (1)  
Phillips #00 Screwdriver (1)  
Spudger (1)  
Magnetic Project Mat (1)

### Step 1 — Back Case



- Remove the 3mm screws from bottom of tablet with the precision screwdriver and place on [magnetic mat](#). label where they came from.
- ① All screws throughout this guide are the same 3mm size.


### Step 2



- Using the spudger, create a small opening to be used to open the back case.
- While holding the case open, insert the plastic opening tool to get a larger opening.
- Once you have a slight opening, insert the spudger and work around the edges, separating the back plate from the front.




### Step 3

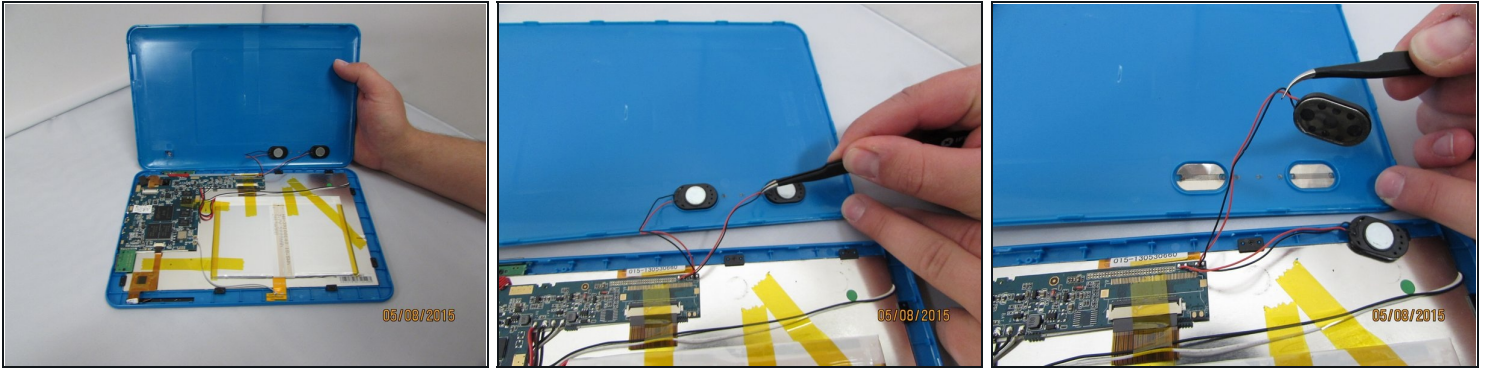

- now that the case is open, carefully remove the speakers and set aside.

### Step 4

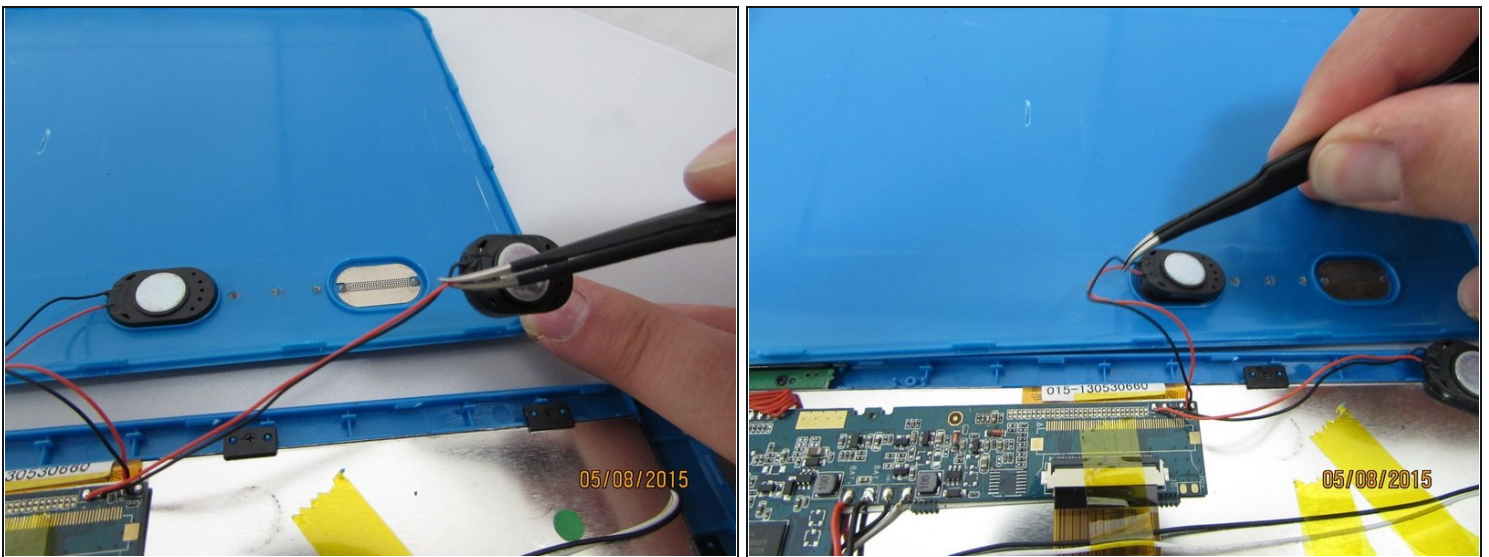

- Gently remove the speakers from the back case with tweezers and set the case aside.

---

To reassemble your device, follow these instructions in reverse order.