



X-Street STR Viper Wheel Replacement

This will be a quick guide in showing you how to remove a worn out tire from your car.

Written By: Ian Johnson



INTRODUCTION


This guide will involve the quick removal of one of the wheels to either be replaced or to have the car axis cleaned.



TOOLS:

- [Metal Spudger Set](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Wheel

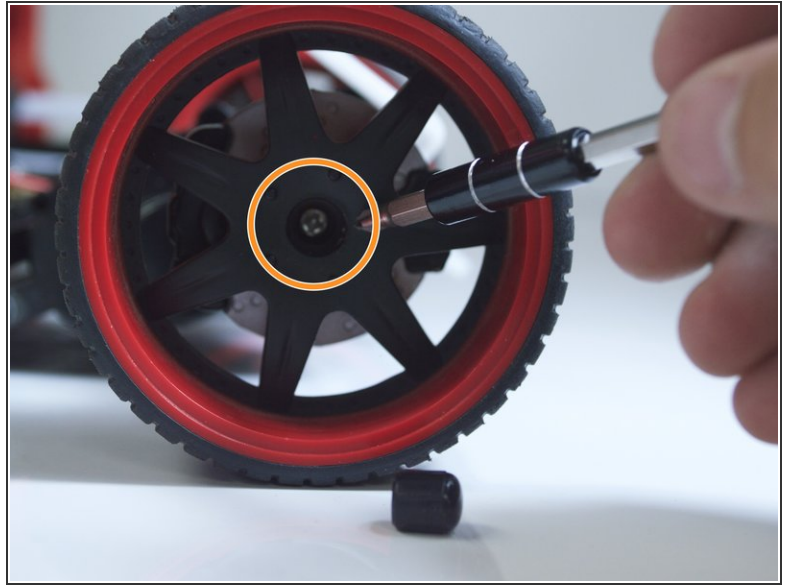

- **Remove the wheel.** Begin by grabbing your metal spudger or a guitar pick to pop off the plastic cap in the middle of the wheel.
- Use the #2 Phillips screwdriver to remove the 4mm Phillips #2 screw inside the wheel.
- From here you should be able to easily pull off the wheel from the car and you're finished!

To reassemble your device, follow these instructions in reverse order.