




# Cuisinart DLC-10S Pro Classic 7-Cup Food Processor Switch Replacement

This guide will help you successfully replace the switch and allow you to continue using your device.

Written By: Riley Carns

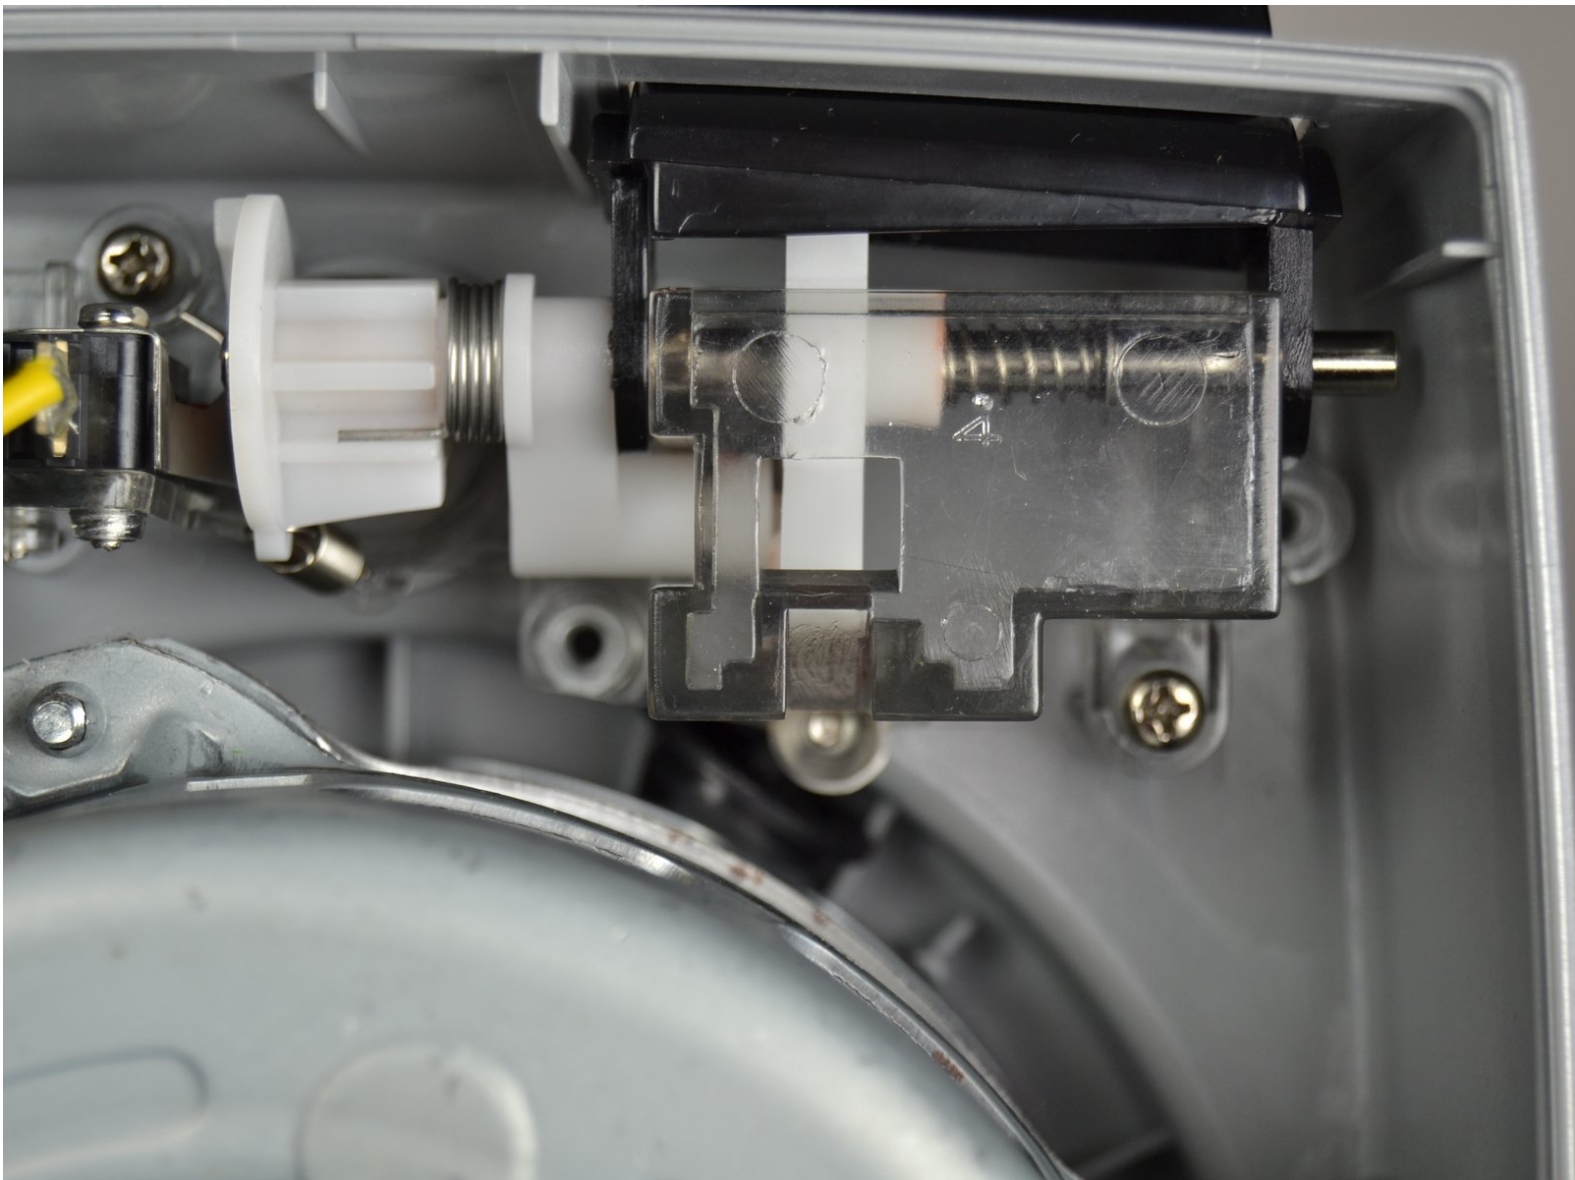

---

## INTRODUCTION

This guide's purpose is to show you how to remove the switch from this type of food processor.


---



### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Switch

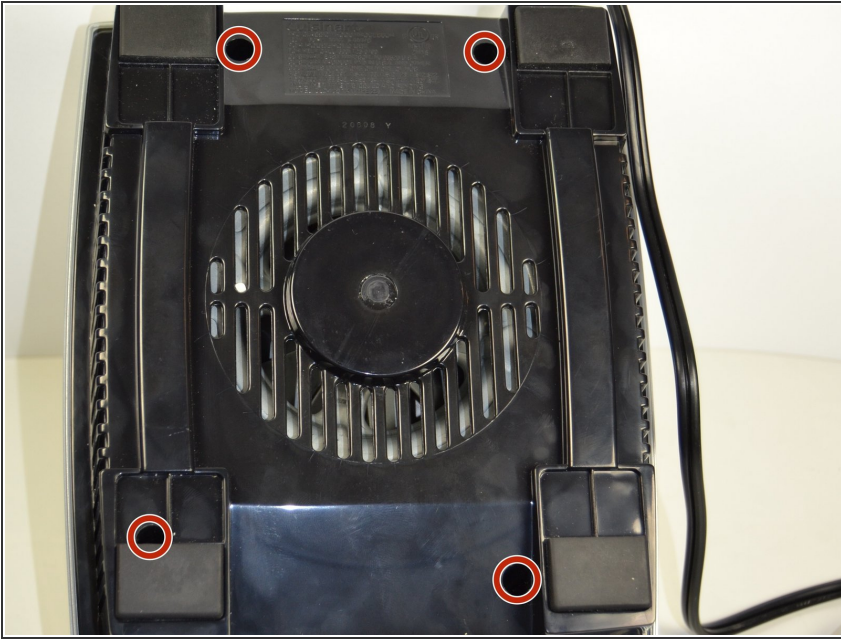


- Remove the four screws (circled in red) out of the bottom of the processor using a Philips #2 Screwdriver.

## Step 2




- Remove the bottom casing of the food processor and set aside.

### Step 3

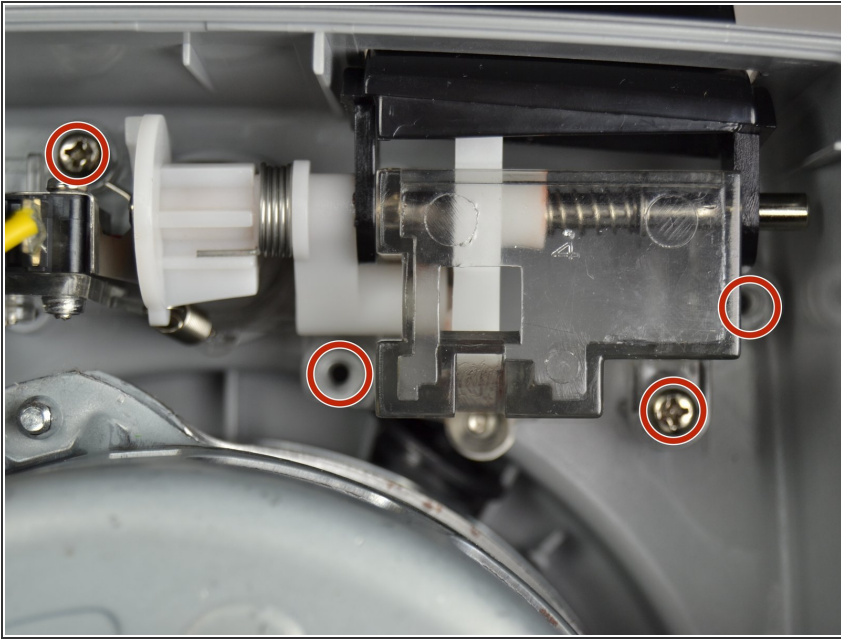

- Remove the four screws (circled in red) holding the switch down.


### Step 4

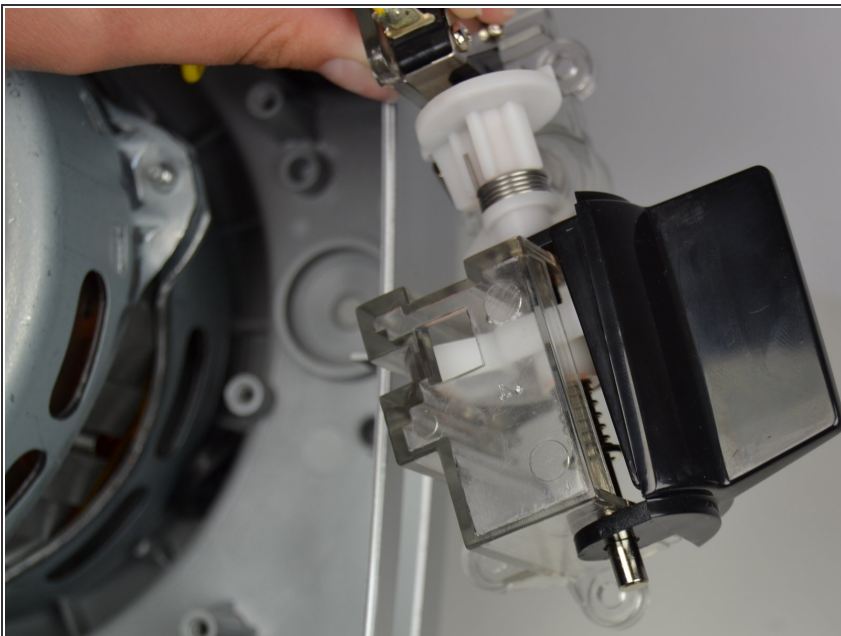

- Carefully pull the switch out of the device.
- This step may take some time.




## Step 5

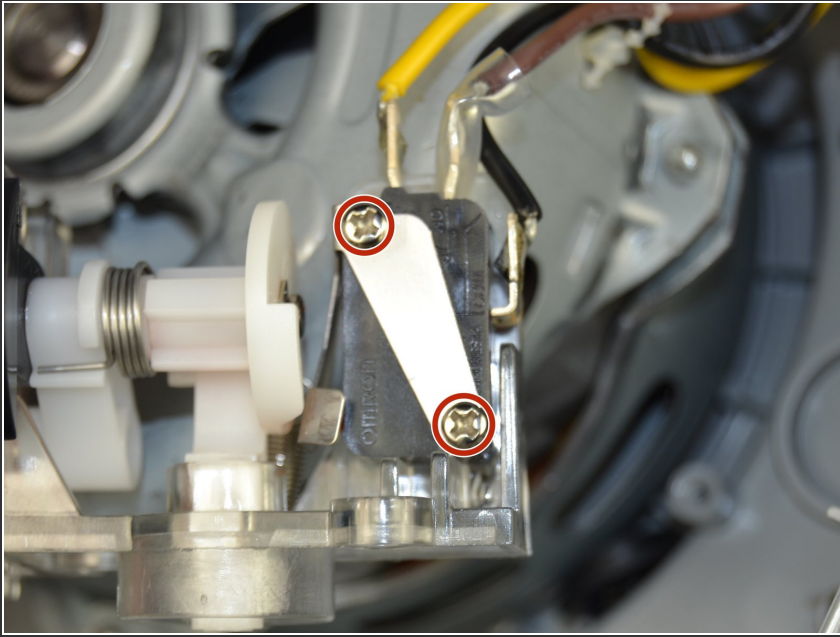


- Remove the two screws from the switch (circled in red) attached by wires.

## Step 6

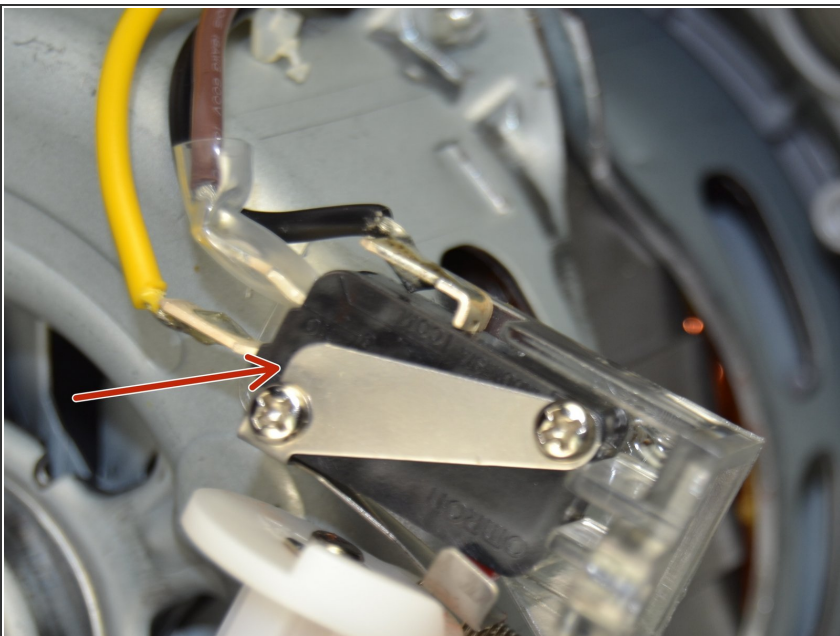

- Remove the component (shown by the arrow in the picture to the left) attached to wires from the switch.

## Step 7

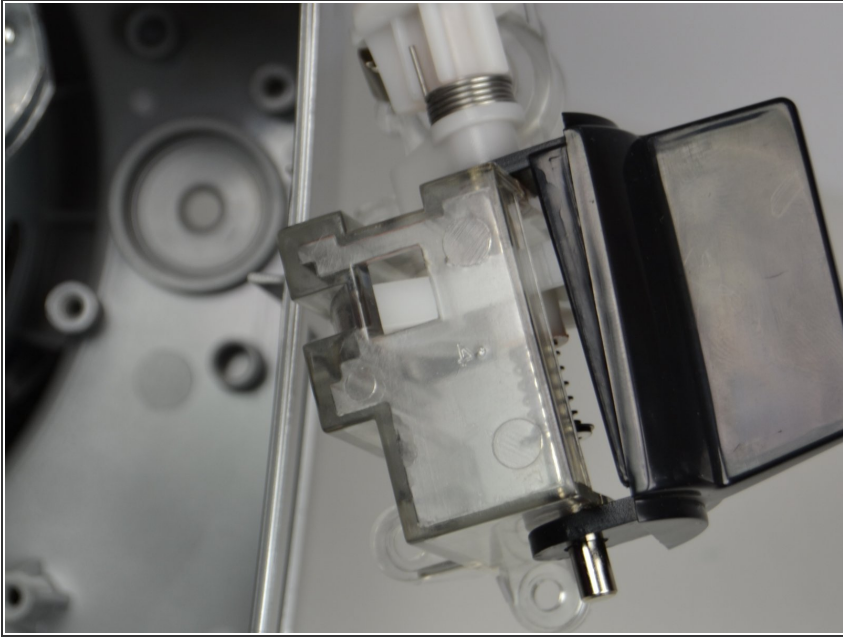

- Carefully remove and replace the switch, now that the wires are detached.

To reassemble your device, follow these instructions in reverse order.