



Nokia 1010 Faceplate Replacement

This guide will walk you through the process of removing the faceplate on the Nokia 1010

Written By: Heidi Wachtel



INTRODUCTION

This guide will show you how to remove the faceplate. With the faceplate removed, you can clean the keypad if it is sticking or completely replace the keypad if it is broken.

TOOLS:


- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Using your thumbs, press and slide down the back cover of the Nokia 1010.

Step 2

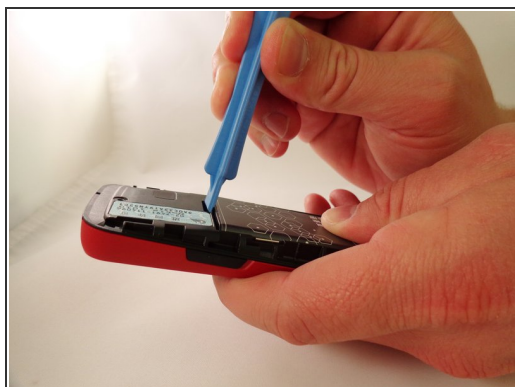



- Insert the prying tool in the notch above the battery.
- Once the prying tool is inserted, lift up the battery.

Step 3 — Faceplate





- Insert the prying tool between the seam of the faceplate and the body.

Step 4

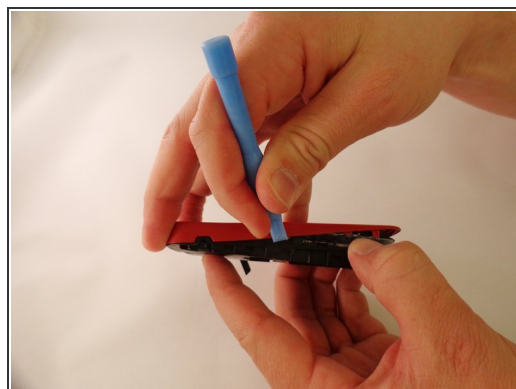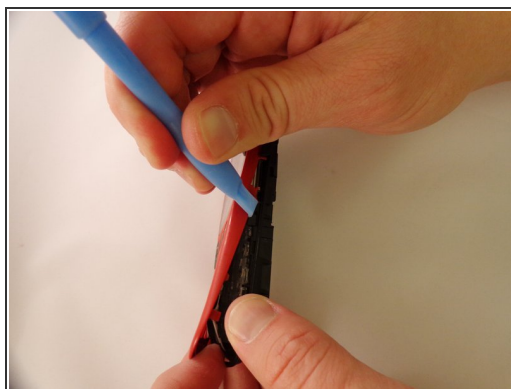

- Starting from the bottom of the phone, begin prying around the base of the phone alternating from left to right.

Step 5

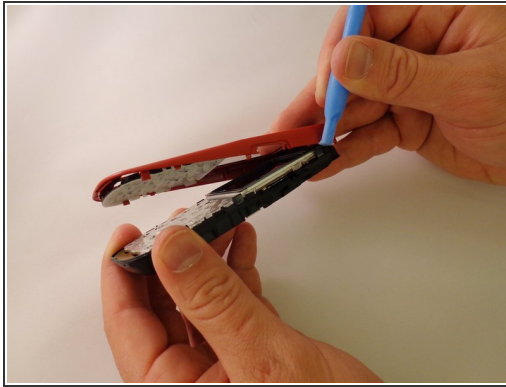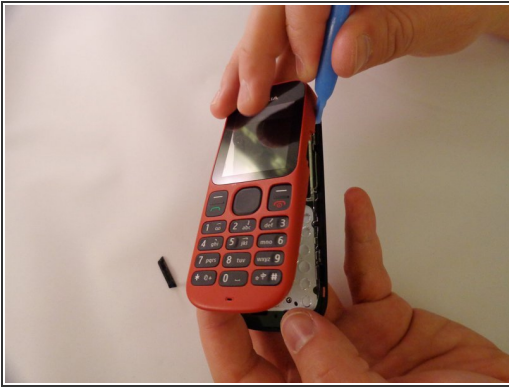

- As the base loosens, slowly increase the separation between the plates and the body of the phone.

To reassemble your device, follow these instructions in reverse order.