




Nokia 1010 Speaker Replacement

This guide will help you through the steps of removing the speaker in the Nokia 1010.

Written By: Heidi Wachtel

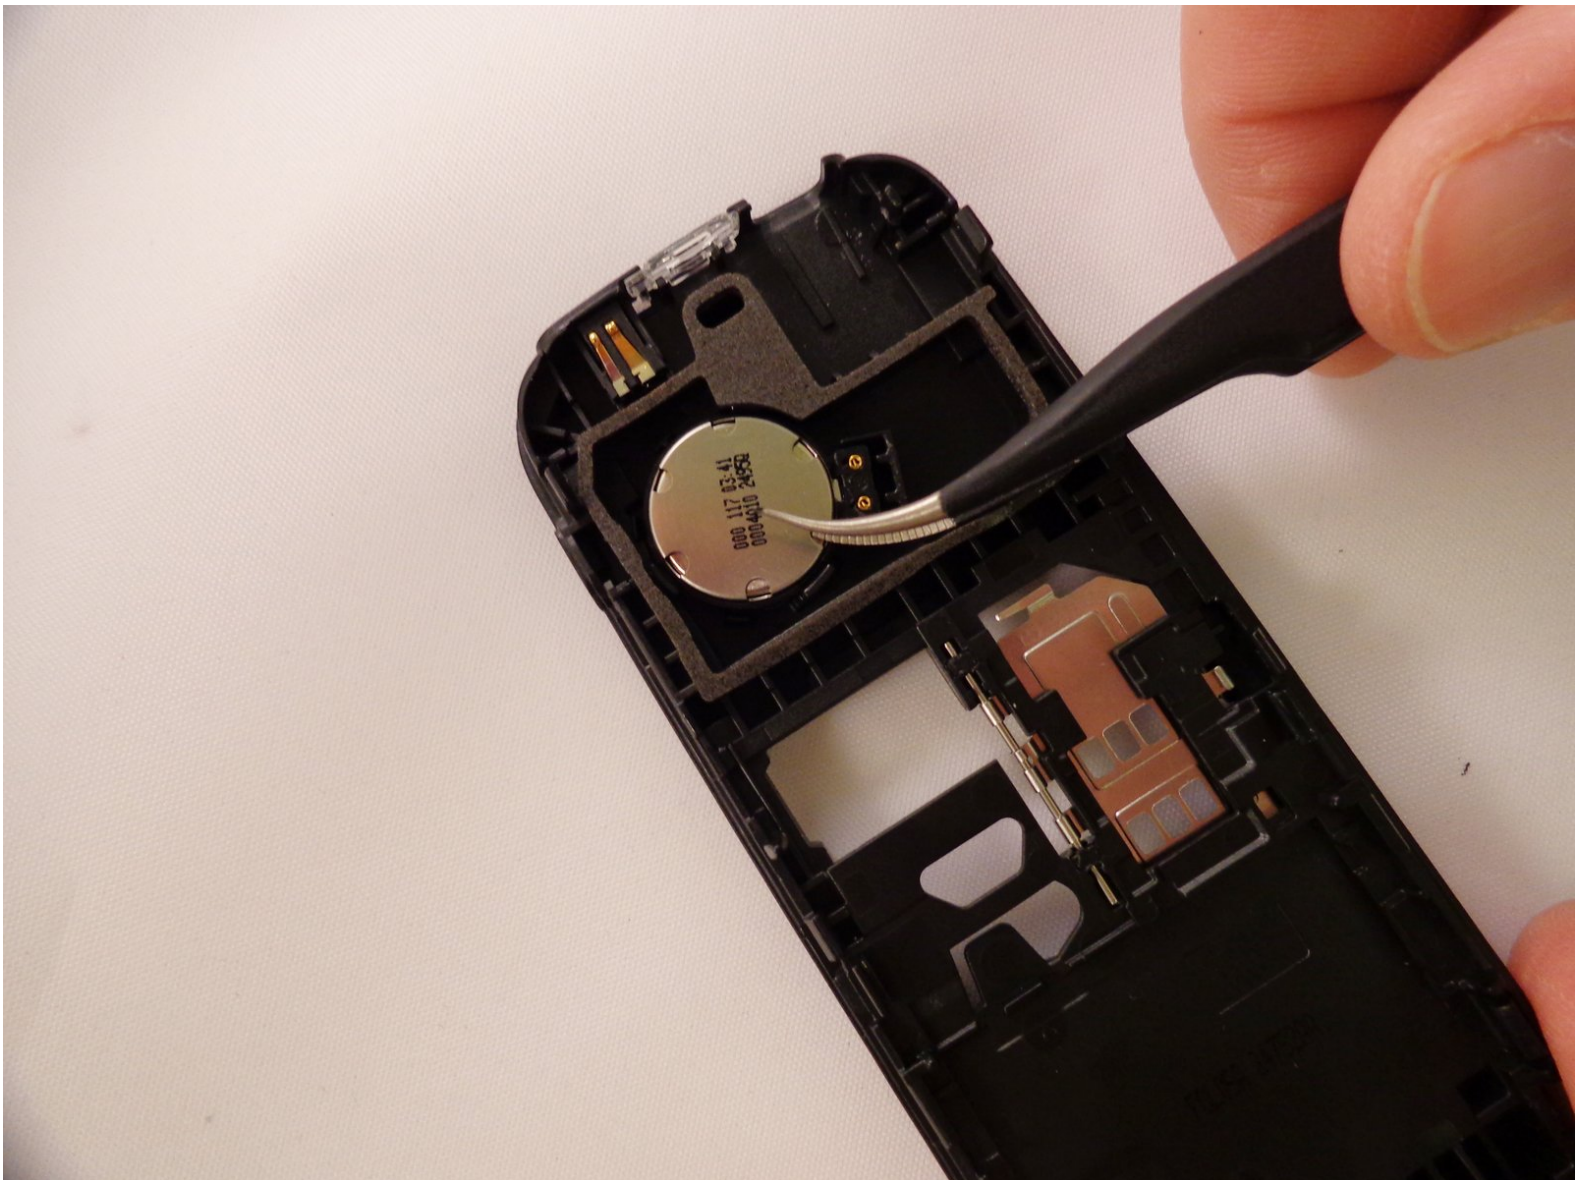

INTRODUCTION

This guide will show you step by step how to access the speaker. If your speaker is no longer working this guide can help you to replace the speaker. Additionally this guide can help you to access the speaker to make sure that the speaker is connected properly.

TOOLS:

- [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Using your thumbs, press and slide down the back cover of the Nokia 1010.

Step 2





- Insert the prying tool in the notch above the battery.
- Once the prying tool is inserted, lift up the battery.

Step 3 — Faceplate



- Insert the prying tool between the seam of the faceplate and the body.

Step 4

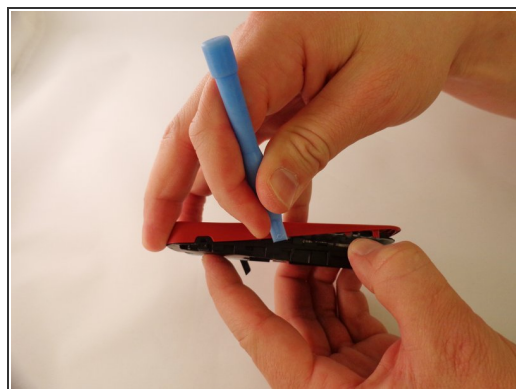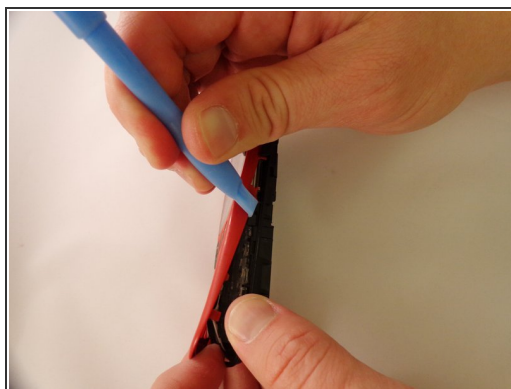


- Starting from the bottom of the phone, begin prying around the base of the phone alternating from left to right.

Step 5




- As the base loosens, slowly increase the separation between the plates and the body of the phone.

Step 6 — Motherboard

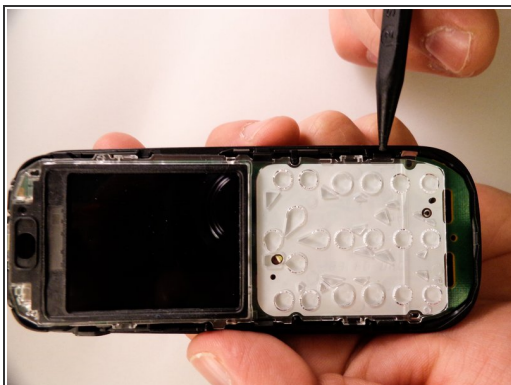



- Using the spudger, pry back three tabs located on the left edge and three tabs located on the right edge of the body.

Step 7

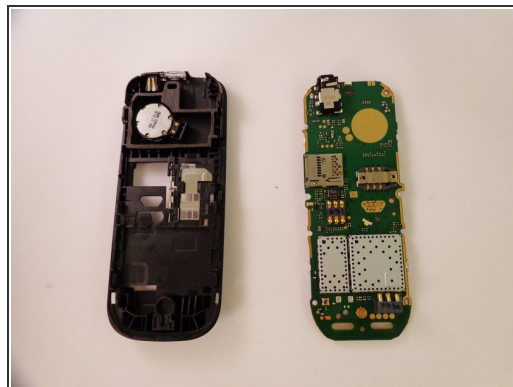

- Once detached, lift and remove the faceplate from the motherboard.

Step 8 — Speaker

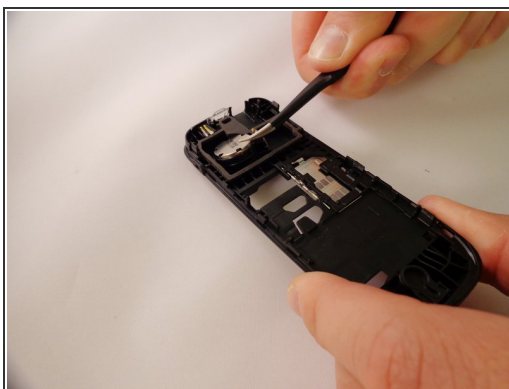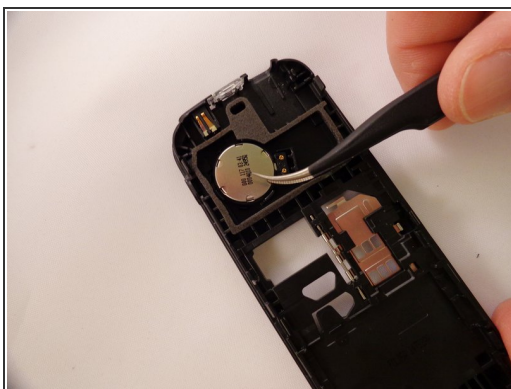

- Insert tweezers into the small crevices of the backside of the speaker, and lift upwards.

To reassemble your device, follow these instructions in reverse order.