



Nerf N-Strike Firestrike Battery Replacement

Steps to remove and replace the batteries out of your Nerf N-Strike Firestrike Elite. This is a possible fix for a faulty laser beam.

Written By: Hayes Kimball



INTRODUCTION


This guide will outline the steps to remove and replace your Nerf N-Strike Firestrike's batteries. You only need a #1 Phillips Screwdriver and your hands. This guide can be completed anywhere and in under five minutes.



PARTS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Remove battery cover

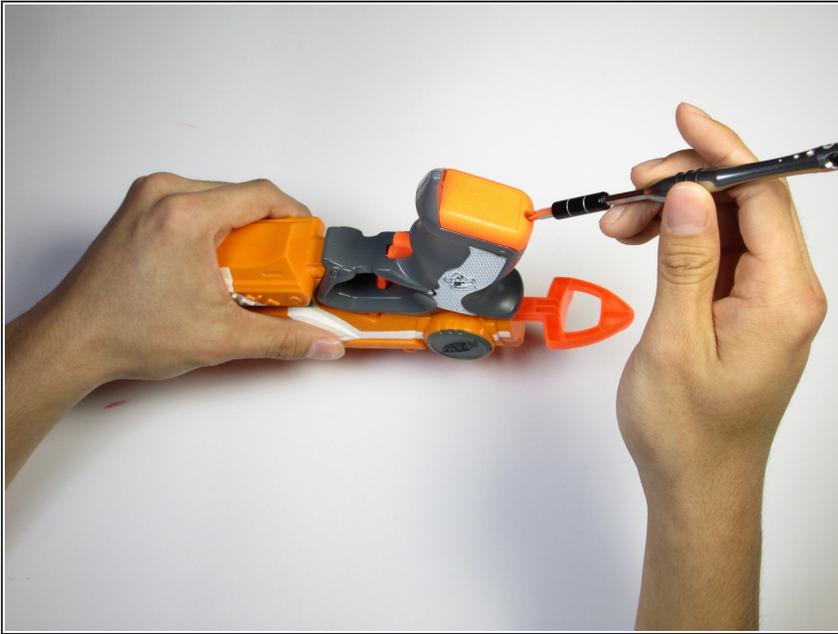

- Use a #1 Phillips screwdriver to remove the 10 -mm screw that secures the battery plate, then remove the battery cover using your hands.

Step 2



- Slide out the two AAA batteries using your fingers.

To reassemble your device, follow these instructions in reverse order.