



HP Envy 17-3070NR Wireless Card Replacement

In this guide, we will show you how to replace wireless card on your HP Envy 17-3070NR.

Written By: Jasper Lewin



INTRODUCTION

A wireless card gives your laptop access to the internet, therefore it is one of the most important components for many. If the wireless card fails use this guide to replace it in your HP Envy 17-3070NR.

TOOLS:

- [Phillips #2 Screwdriver](#) (1)




Step 1 — Back Cover



! Before you begin taking apart the computer, make sure that it is completely powered off.

- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

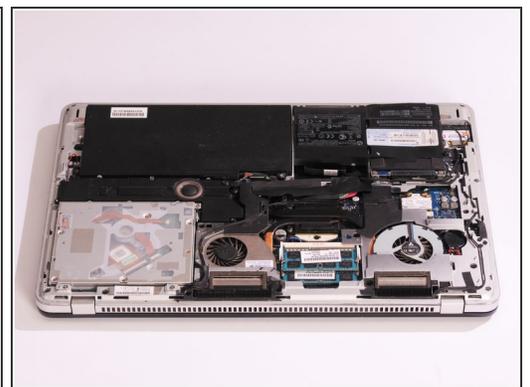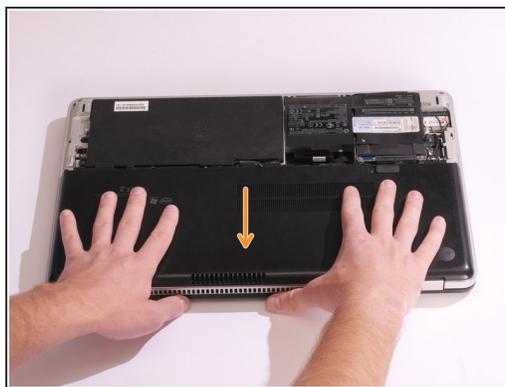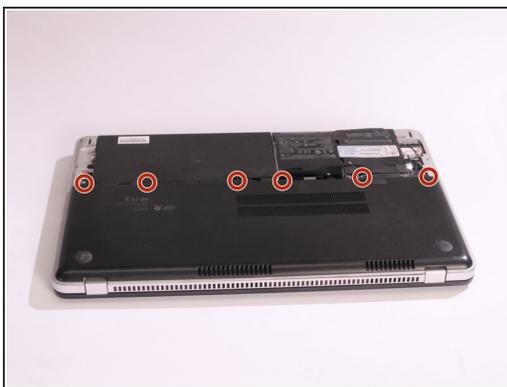


- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

Step 3 — Wireless Card



- Unscrew 4.5mm Phillips screw.
- Unplug both antenna connectors by carefully pulling them upwards.
- ⓘ During re-assembly make sure to match numbers(1 or 2) on the antenna cable and the wireless card.

Step 4

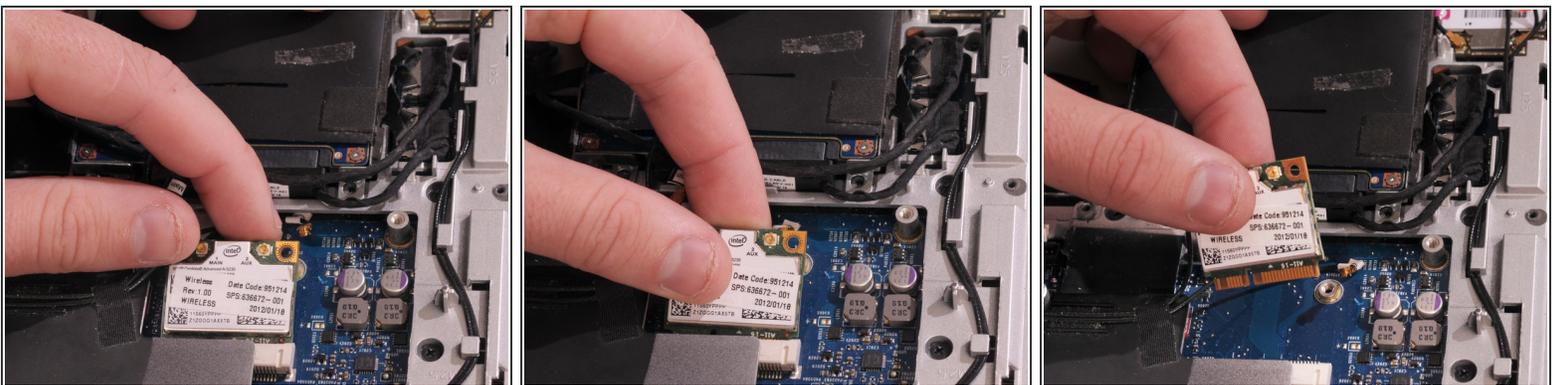

- Pull wireless card up and away from you.

To reassemble your device, follow these instructions in reverse order.