



HP Envy 17-3070NR Hard Drive Replacement

Use this guide to replace the hard drive of...

Written By: Jasper Lewin



INTRODUCTION

Use this guide to replace the hard drive of your HP Envy 17-3070NR. Whether you want to upgrade your storage, improve performance by switching to SSD or replace a faulty HDD, this guide is for you. Note that there are two bays for the drives on this laptop. Therefore, if you want to simply add another drive consider plugging it in into second cavity using already included connector.



TOOLS:


- [Phillips #2 Screwdriver](#) (1)



PARTS:

- [1 TB SSD](#) (1)
- [Crucial MX500 250 GB SSD](#) (1)
- [Crucial MX500 500 GB SSD](#) (1)
- [Crucial MX500 2 TB SSD](#) (1)




Step 1 — Back Cover

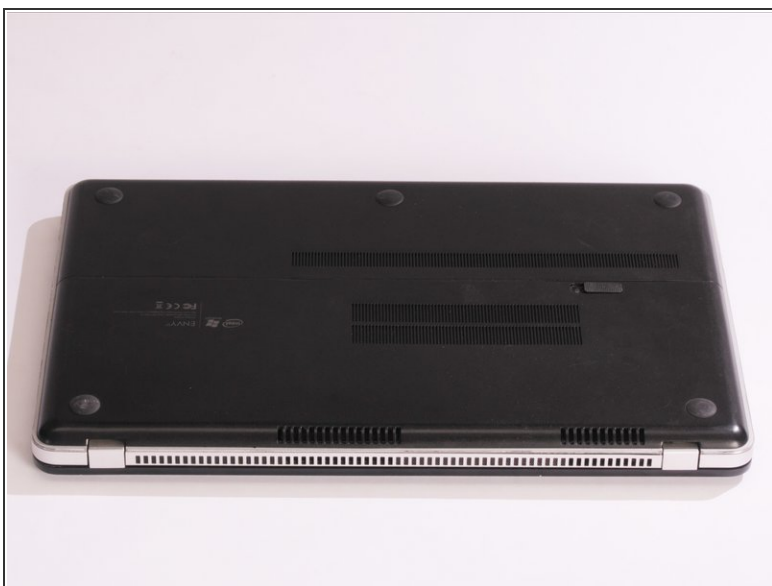

⚠ Before you begin taking apart the computer, make sure that it is completely powered off.



- Slide the release latch away from the nearest edge.
- Slide the back cover off of the computer.

Step 2

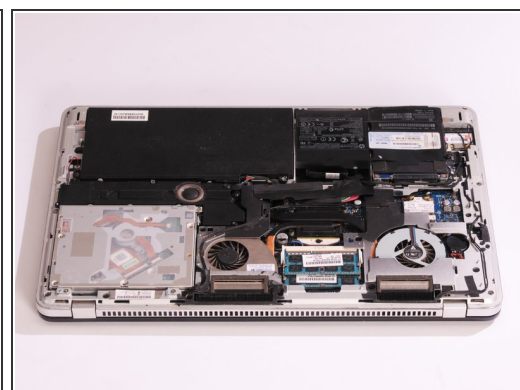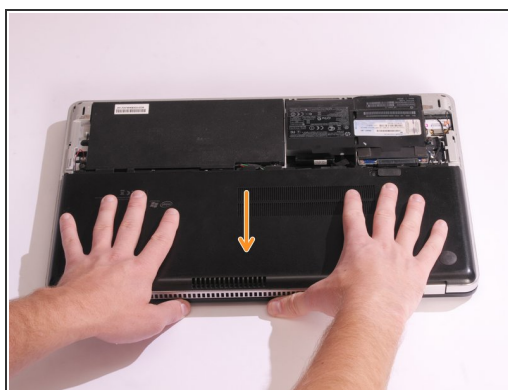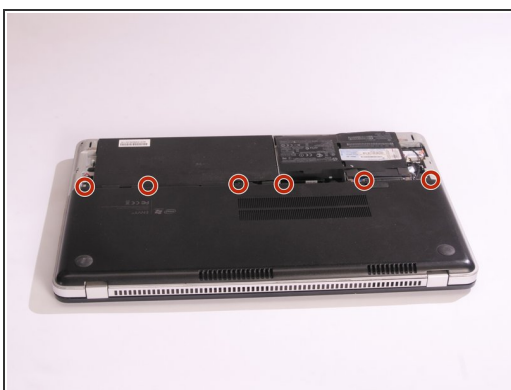

- Remove the six 3.7mm Phillips screws.
- Slide the back cover until it clicks, then lift it straight off.

Step 3 — Hard Drive

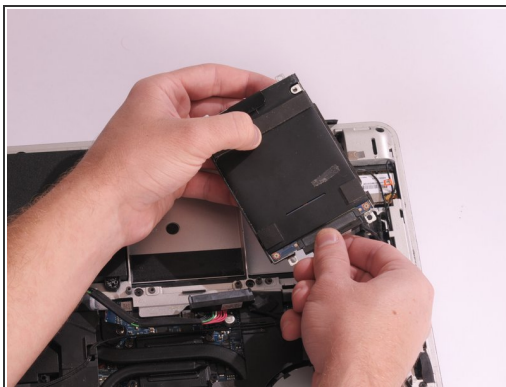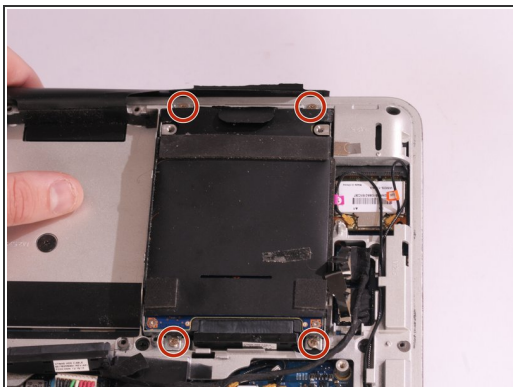

- Remove the four 3.7mm Phillips screws that hold the hard drive onto the computer.
- Remove the hard drive by lifting it out of its cavity.
- Unplug the hard drive cable that connects it to the main assembly.

To reassemble your device, follow these instructions in reverse order.