



Panasonic SDR H-100 Upper Cover Replacement

This is the first prerequisite for to get to the other parts of the device that commonly break and need to be replaced.

Written By: Caleb Osborne



 **TOOLS:**

- [Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Remove Bottom Screws




- Remove the four 4-mm screws on the bottom of the camcorder.
- ⓘ The screws are two different colors: three blacks and one silver.

Step 2 — Remove Side Screws



- Remove the three 6-mm screws on the hand-strap side of the camera.

Step 3 — Remove DC Input Terminal Screws

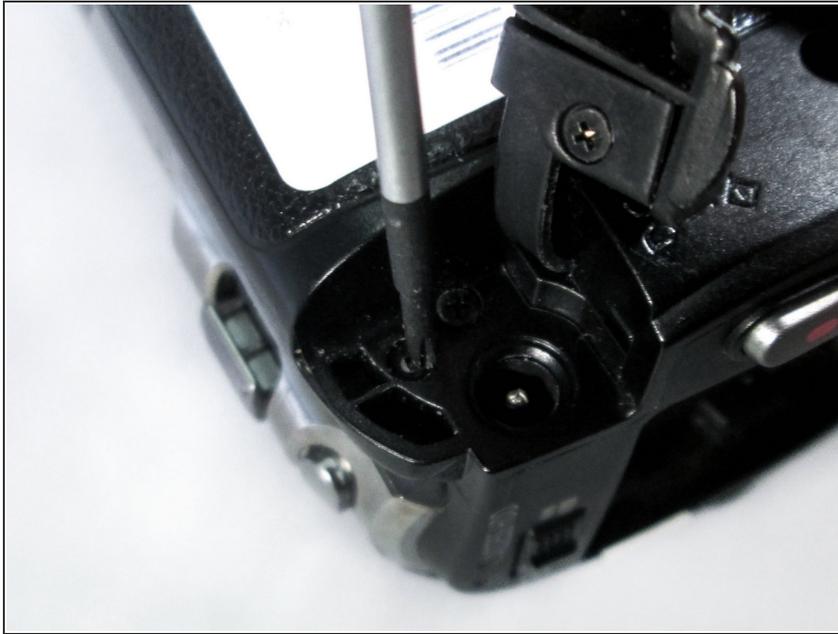

- Pull out the charging port (DC input terminal) cover and remove the 4-mm screw located next to the input terminal.

Step 4 — Remove LCD Monitor Screws




- Flip out the LCD screen to expose the inner screws. Remove the two black 4-mm screws.
 - ⓘ One screw is located by the hinge of the LCD screen. The second is close to the upper-right corner of the camcorder body.

Step 5 — Detach Casing from Body



- Using a firm hold on both sides of the camcorder, gently pull apart the casing under the hand strap.
- ⓘ Pressure should be evenly distributed across entire device.
- ⚠ Detach gently so the ribbon cable is not damaged!

Step 6 — Detach Ribbon Cable from Body

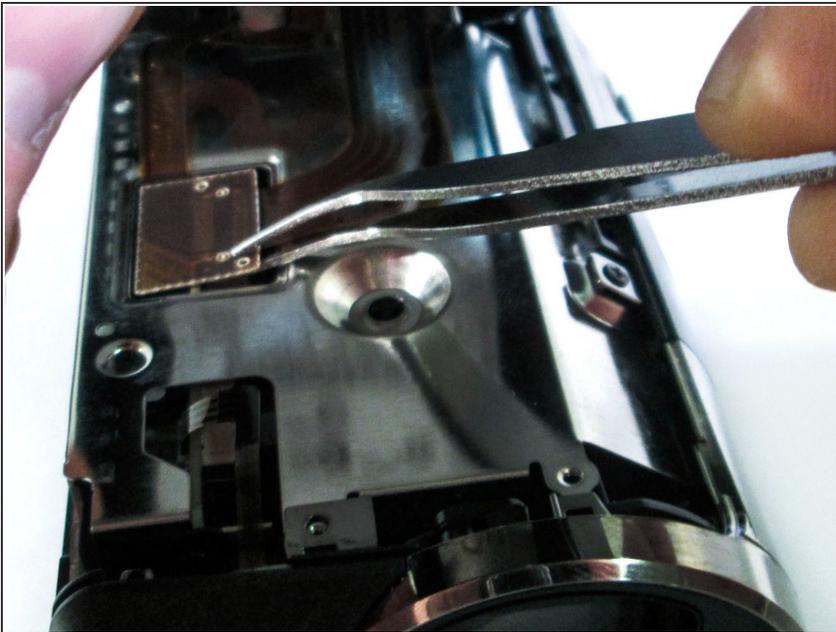

- Use tweezers to grab the ribbon cable at the connection point and slowly lift it away from the connector.
- ⓘ This linkage point connects the HDD directly to the motherboard.

To reassemble your device, follow these instructions in reverse order.