

Panasonic SDR H-100 Rear Cover Replacement

This is the second prerequisite for to get to the other parts of the device that commonly break and need to be replaced.

Written By: Caleb Osborne



This document was generated on 2020-11-28 04:32:16 AM (MST).



This document was generated on 2020-11-28 04:32:16 AM (MST).

Step 1 — Rear Cover



 Unscrew the two black 4 mm screws from metal casing around the motherboard.


Step 2





 Remove the black 4 mm screw from the back of the camcorder underneath where the battery would have been.

Step 3

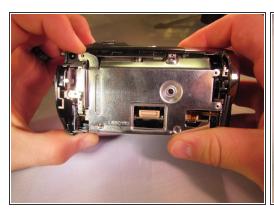





 Pull the plastic cover on the back out and up slightly until the back feels like it's free, then pull back on the plastic (The top cover piece and back will be detached).

To reassemble your device, follow these instructions in reverse order.